C970

15A404
17C712

Roof marker lamp, left

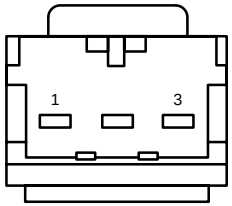

F03235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	14 (BN)	Power, Exterior lamps

C971

15A404
17C712

Roof marker lamp, left center

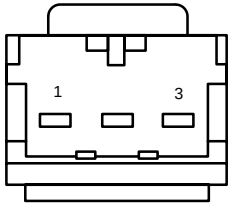

F03235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	14 (BN)	Power, Exterior lamps

C972

15A404
17C712

Roof marker lamp, center

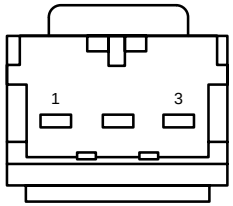

F03235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	14 (BN)	Power, Exterior lamps

C973

15A404
17C712

Roof marker lamp, right center

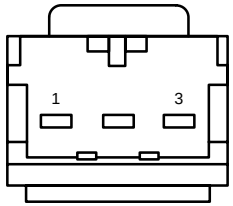

F03235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	14 (BN)	Power, Exterior lamps

C974

15A404
17C712

Roof marker lamp, right

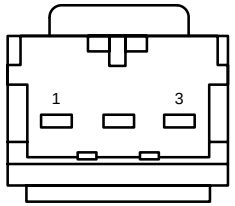

F03235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	14 (BN)	Power, Exterior lamps

C983

15B484



F03079

17C712



F03105.1

(1) 57 (BK)
(2) –
(3) 14 (BN)