C556

14K733

F06215

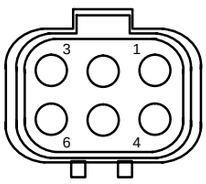

Pin	Circuit	Circuit Function
1	30-CF6A (RD)	Voltage supplied at all times (not overload protected)
2	15-CF6A (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
3	8-EE6A (WH)	Sensor signal
4	91-CF29 (BK/WH)	Ground
5	30-CF13A (RD)	Voltage supplied at all times (not overload protected)

C602 (OG)

14401

N251
Power point

F02009



Pin	Circuit	Circuit Function
1	29-HA29 (OG/BK)	Voltage supplied at all times (overload protected)
2	31-HA29 (BK)	Ground

C632

14405

N98
Tailgate/decklid anti–theft inhibit switch

F02005

Pin	Circuit	Circuit Function
1	31-GL27 (BK)	Ground
2	31S-GL27 (BK/OG)	Ground, switched

C641

12A522

T1
Ignition coil

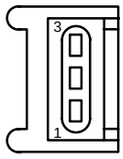

F03028

Pin	Circuit	Circuit Function
1	31S-RR1 (BK/OG)	Ground, switched
2	15-RR4A (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
	15-RR4 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
3	31S-RR2 (BK/GN)	Ground, switched

C642

9H589

B43
Crankshaft position sensor

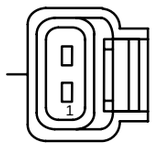

F02026

Pin	Circuit	Circuit Function
1	9-RJ4 (BN/RD)	Sensor signal return (reference/ground)
2	8-RJ4 (WH/RD)	Sensor signal