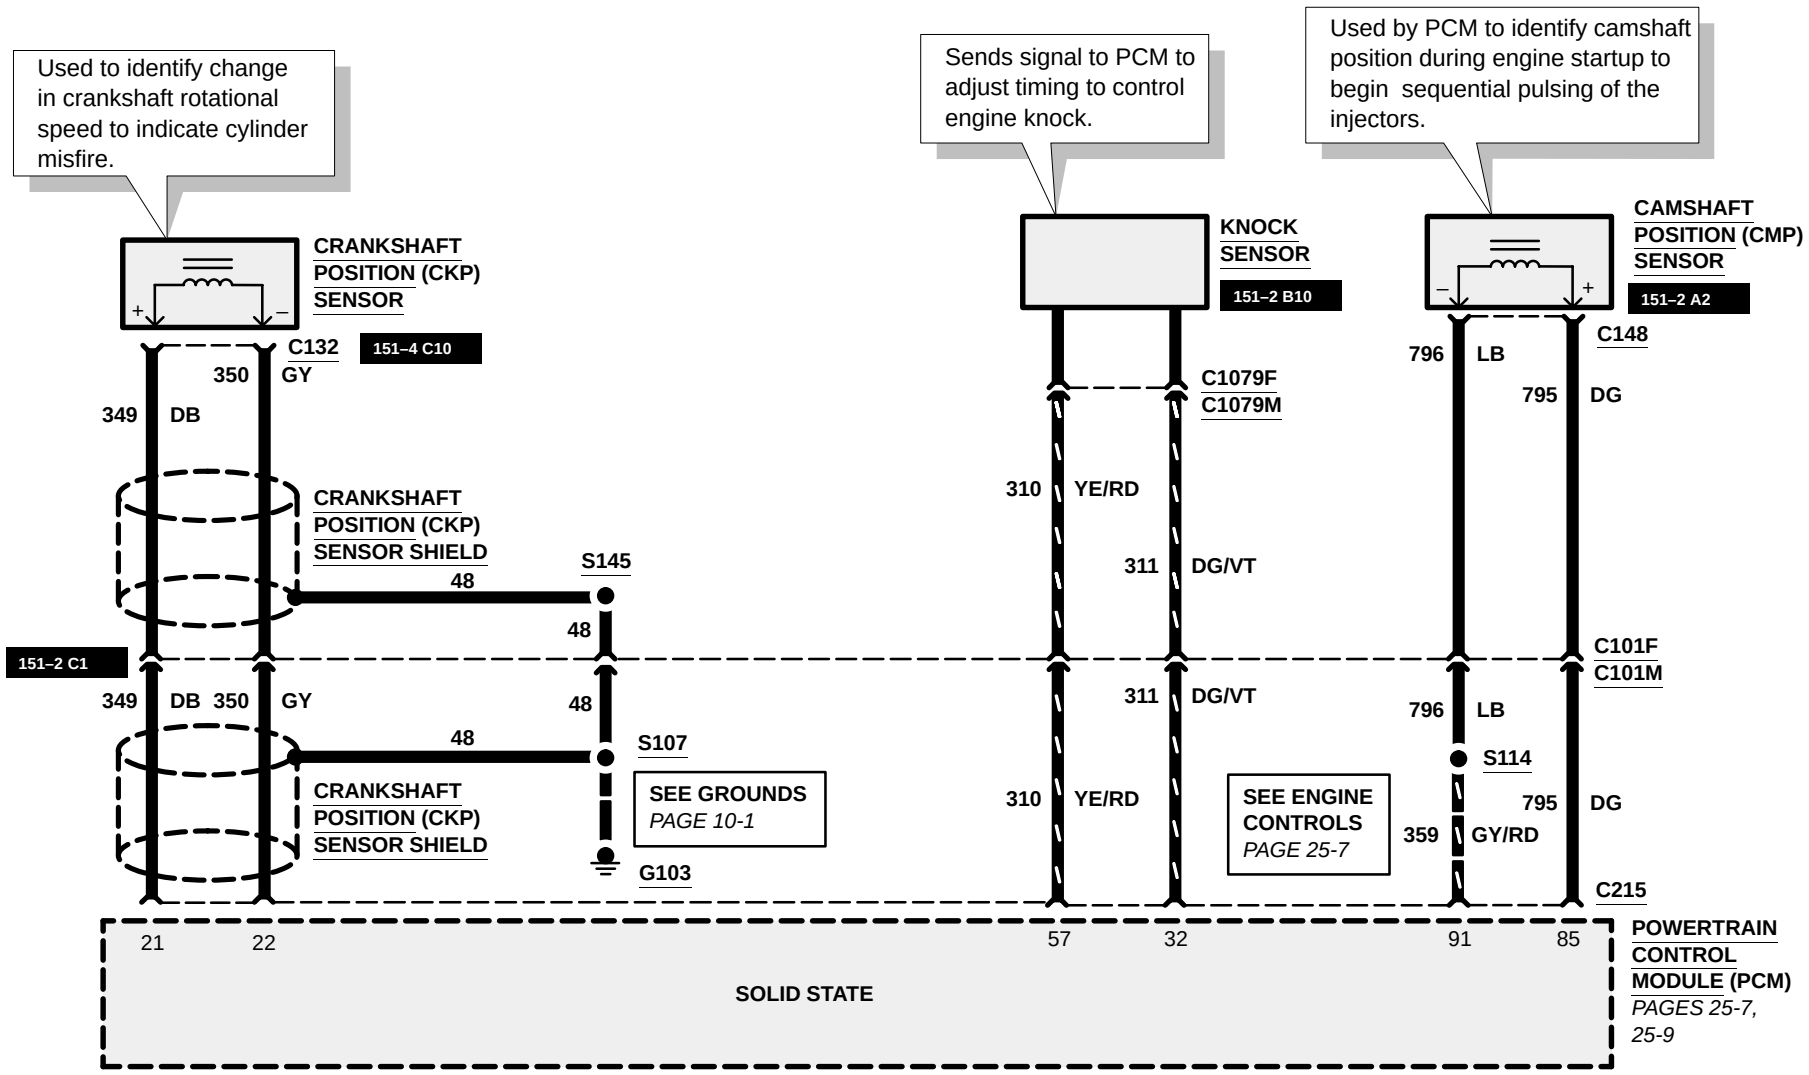

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C215	25-12