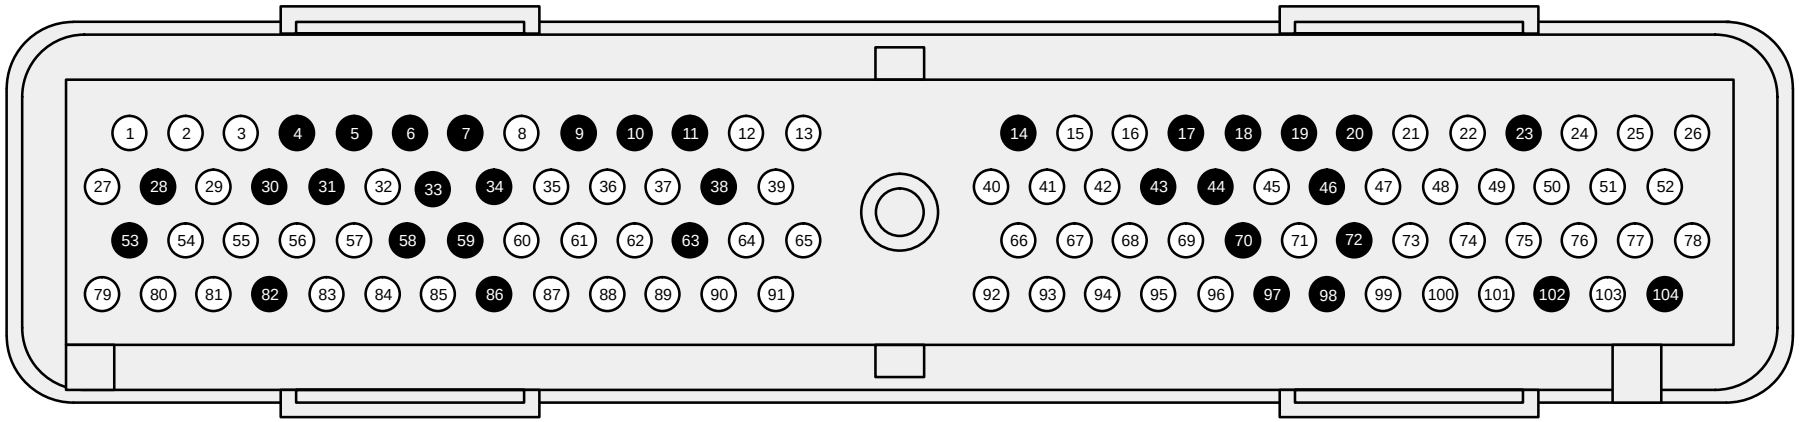

C154
POWERTRAIN CONTROL MODULE (PCM)

4.2L

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	315 (VT/OG)	Shift Solenoid B	17	–	NOT USED
2	658 (PK/LG)	MIL Lamp Control	18	–	NOT USED
3	1144 (YE/BK)	Digital Transmission Range (DTR) Sensor (TR1)	19	–	NOT USED
			20	–	NOT USED
4	–	NOT USED	21	349 (DB)	Crankshaft Position Sensor (+)
5	–	NOT USED	22	350 (GY)	Crankshaft Position Sensor (–)
6	–	NOT USED	23	–	NOT USED
7	–	NOT USED	24	570 (BK/WH)	Ground
8	1022 (DB/YE)	Electric Intake Manifold Runner Control	25	875 (BK/LB)	Ground
9	–	NOT USED	26	526 (DB/LG)	Ignition Coil
10	–	NOT USED	27	237 (OG/YE)	Shift Solenoid A
11	–	NOT USED	28	–	NOT USED
12	29 (YE/WH)	Fuel Pump Sender	29	224 (TN/WH)	Transmission Control Switch
13	107 (VT)	Generic Scan Tool Input	30	–	NOT USED
14	–	NOT USED	31	–	NOT USED
15	915 (PK/LB)	Bus (–)	32	311 (DG/PK)	Knock Sensor (KS)
16	914 (TN/OG)	Bus (+)	33	–	NOT USED

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
34	–	NOT USED	62	791 (RD/PK)	Fuel Tank Pressure Regulator	93	387 (RD/WH)	HEGO #11
35	392 (RD/LG)	HEGO #12	63	–	NOT USED	94	388 (YE/LB)	HEGO #21
36	968 (TN/LB)	Mass Air Flow (MAF) Sensor Return	64	199 (LB/YE)	Digital Transmission Range (DTR) Sensor (TR3A)	95	389 (WH/BK)	HEGO #12
37	923 (OG/BK)	Transmission Fluid Temperature Sensor	65	352 (BN/LG)	Delta Pressure Feedback EGR (DPFE) Sensor	96	390 (TN/YE)	HEGO #22
38	–	NOT USED	66	1102 (YE/LG)	Cylinder Head Temperature (CHT) Sensor	97	–	NOT USED
39	743 (GY)	Intake Air Temperature (IAT) Sensor	67	91 (VT/WH)	Canister Vent Solenoid	98	–	NOT USED
40	238 (DG/YE)	Fuel Pump Monitor	68	679 (GY/BK)	Vehicle Speed Control	99	560 (LG/OG)	Fuel Injector #6
41	347 (BK/YE)	A/C ON Input Signal	69	331 (PK/YE)	A/C Relay Control	100	558 (BN/LB)	Fuel Injector #4
42	1023 (DB/LG)	Electric Intake Manifold Runner Control	70	–	NOT USED	101	556 (WH)	Fuel Injector #2
43	–	NOT USED	71	361 (RD)	Power Input	102	–	NOT USED
44	–	NOT USED	72	–	NOT USED	103	570 (BK/WH)	Ground
45	1105 (YE/LB)	Feed to Instrument Cluster	73	559 (TN/BK)	Fuel Injector #5	104	–	NOT USED
46	–	NOT USED	74	557 (BN/YE)	Fuel Injector #3			
47	360 (BN/PK)	Exhaust Gas Recirculation (EGR) Solenoid	75	555 (TN)	Fuel Injector #1			
48	648 (WH/PK)	NOT USED	76	570 (BK/WH)	Ground			
49	1145 (LB/BK)	Digital Transmission Range (DTR) Sensor (TR2)	77	570 (BK/WH)	Ground			
50	1146 (LG/RD)	Digital Transmission Range (DTR) Sensor (TR4)	78	528 (PK/WH)	Ignition Coil			
51	570 (BK/WH)	Ground	79	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)			
52	527 (RD/LB)	Ignition Coil	80	926 (LB/OG)	Fuel Pump Relay Control			
53	–	NOT USED	81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid			
54	480 (VT/YE)	Torque Converter Clutch (TCC) Solenoid	82	–	NOT USED			
55	37 (YE)	Keep Alive Power Input	83	264 (WH/LB)	Idle Air Control (IAC) Valve			
56	191 (LG/BK)	Evaporative Emission (EVAP) Canister Purge Valve	84	136 (DB/YE)	Output Shaft Speed (OSS) Sensor			
57	310 (YE/RD)	Knock Sensor (KS)	85	795 (DG)	Camshaft Position Sensor			
58	–	NOT USED	86	–	NOT USED			
59	–	NOT USED	87	94 (RD/BK)	HEGO #21			
60	74 (GY/LB)	HEGO #11	88	967 (LB/RD)	Mass Air Flow (MAF) Sensor			
61	393 (VT/LG)	HEGO #22	89	355 (GY/WH)	Throttle Position (TP) Sensor			
			90	351 (BN/WH)	Reference Output Voltage			
			91	359 (GY/RD)	Sensor Signal Return			
			92	511 (LG)	Brake Pedal Position (BPP) Switch Input			