-2

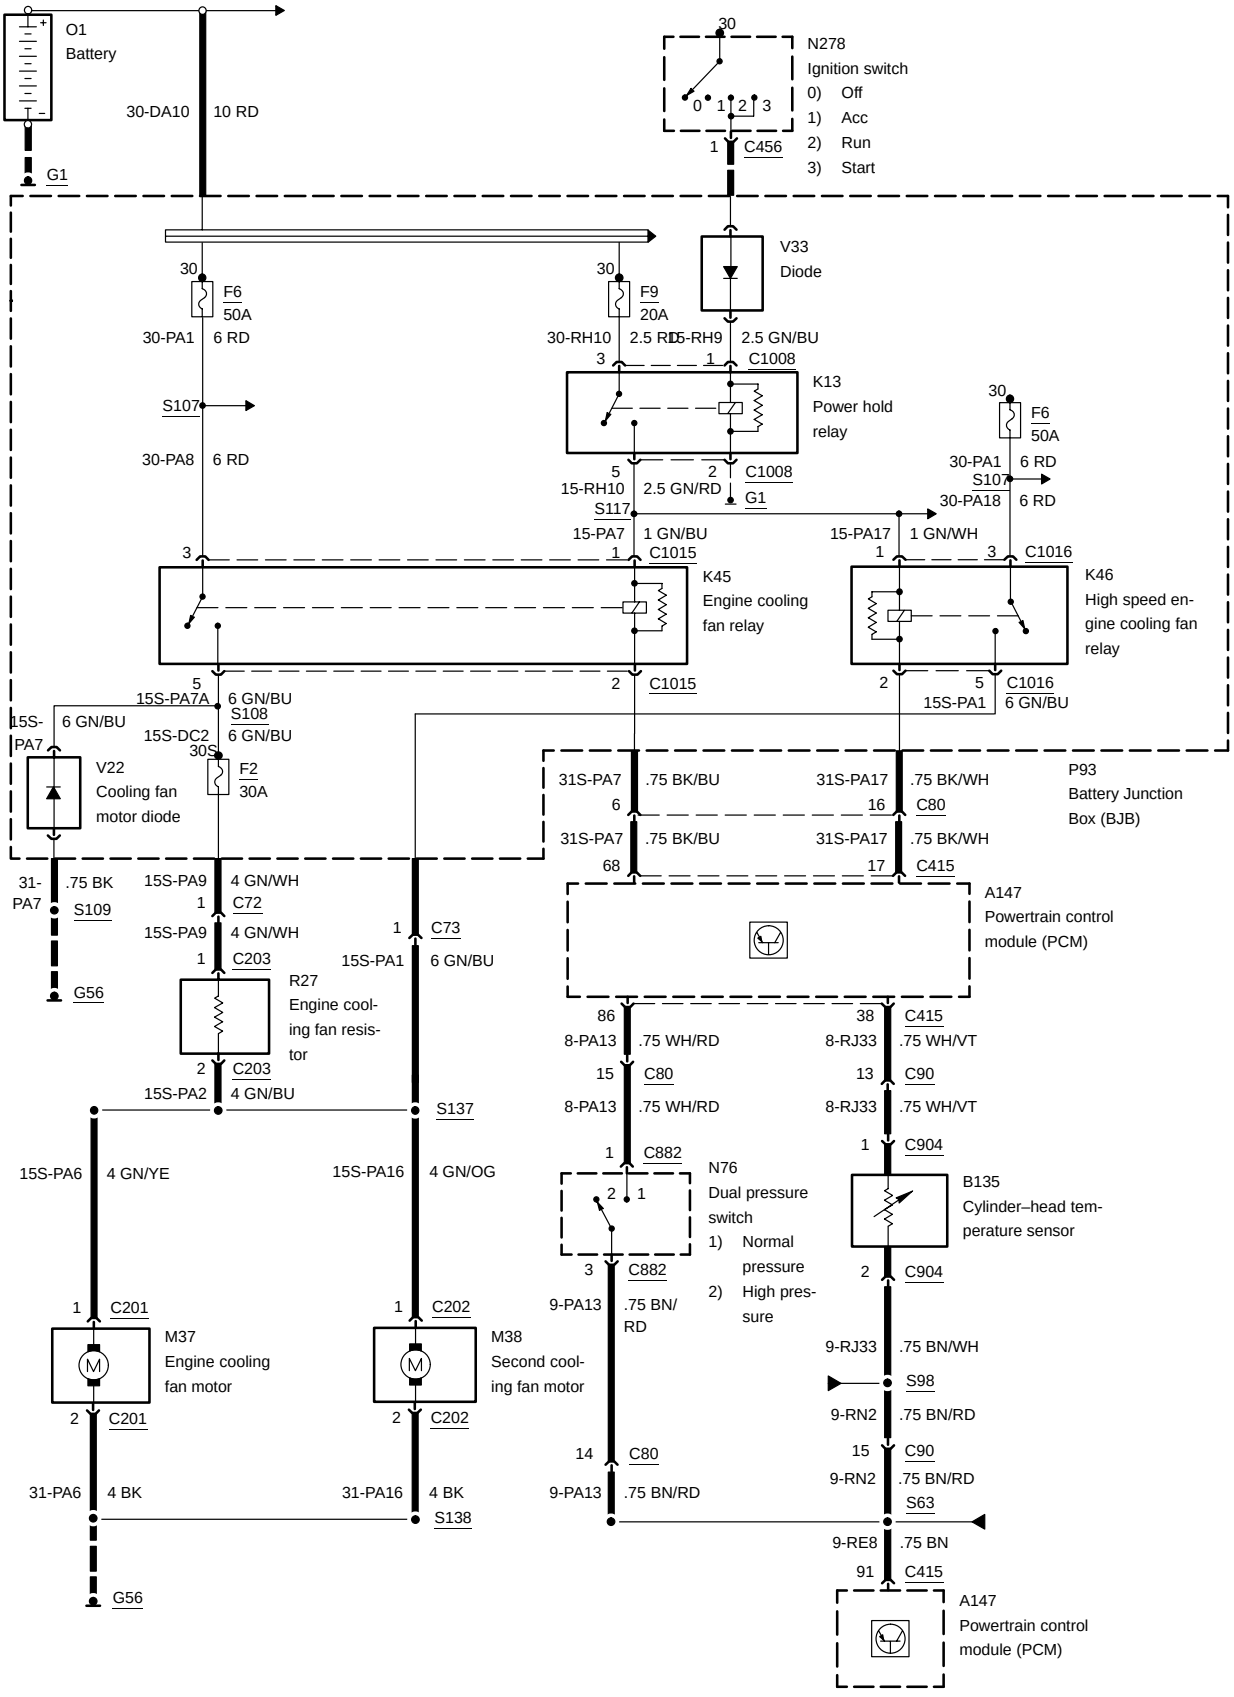
O1
Battery
30-DA10
10 RD
G1
30
N278
Ignition switch
0) Off
1) Acc
2) Run
3) Start
C456
V33
Diode
F6
50A
30-PA1
6 RD
F9
20A
30-RH10
2.5 RD
15-RH9
2.5 GN/BU
C1008
K13
Power hold relay
S107
30-PA8
6 RD
5
15-RH10
2.5 GN/RD
C1008
G1
S117
15-PA7
1 GN/BU
C1015
K45
Engine cooling fan relay
15-PA17
1 GN/WH
C1016
K46
High speed engine cooling fan relay
30-PA18
6 RD
15S-PA7A
6 GN/BU
S108
15S-DC2
6 GN/BU
15S-PA7
6 GN/BU
V22
Cooling fan motor diode
F2
30A
15S-PA1
6 GN/BU
P93
Battery Junction Box (BJB)
31S-PA7
.75 BK/BU
31S-PA17
.75 BK/WH
C80
C415
A147
Powertrain control module (PCM)
31-PA7
.75 BK
S109
G56
15S-PA9
4 GN/WH
C72
C203
R27
Engine cooling fan resistor
15S-PA2
4 GN/BU
C73
15S-PA1
6 GN/BU
S137
15S-PA6
4 GN/YE
15S-PA16
4 GN/OG
C201
C202
M37
Engine cooling fan motor
M38
Second cooling fan motor
31-PA6
4 BK
31-PA16
4 BK
S138
G56
8-PA13
.75 WH/RD
8-RJ33
.75 WH/VT
C882
N76
Dual pressure switch
1) Normal pressure
2) High pressure
9-PA13
.75 BN/RD
C904
B135
Cylinder–head temperature sensor
9-RJ33
.75 BN/WH
S98
9-RN2
.75 BN/RD
S63
9-RE8
.75 BN