7.3L DIESEL

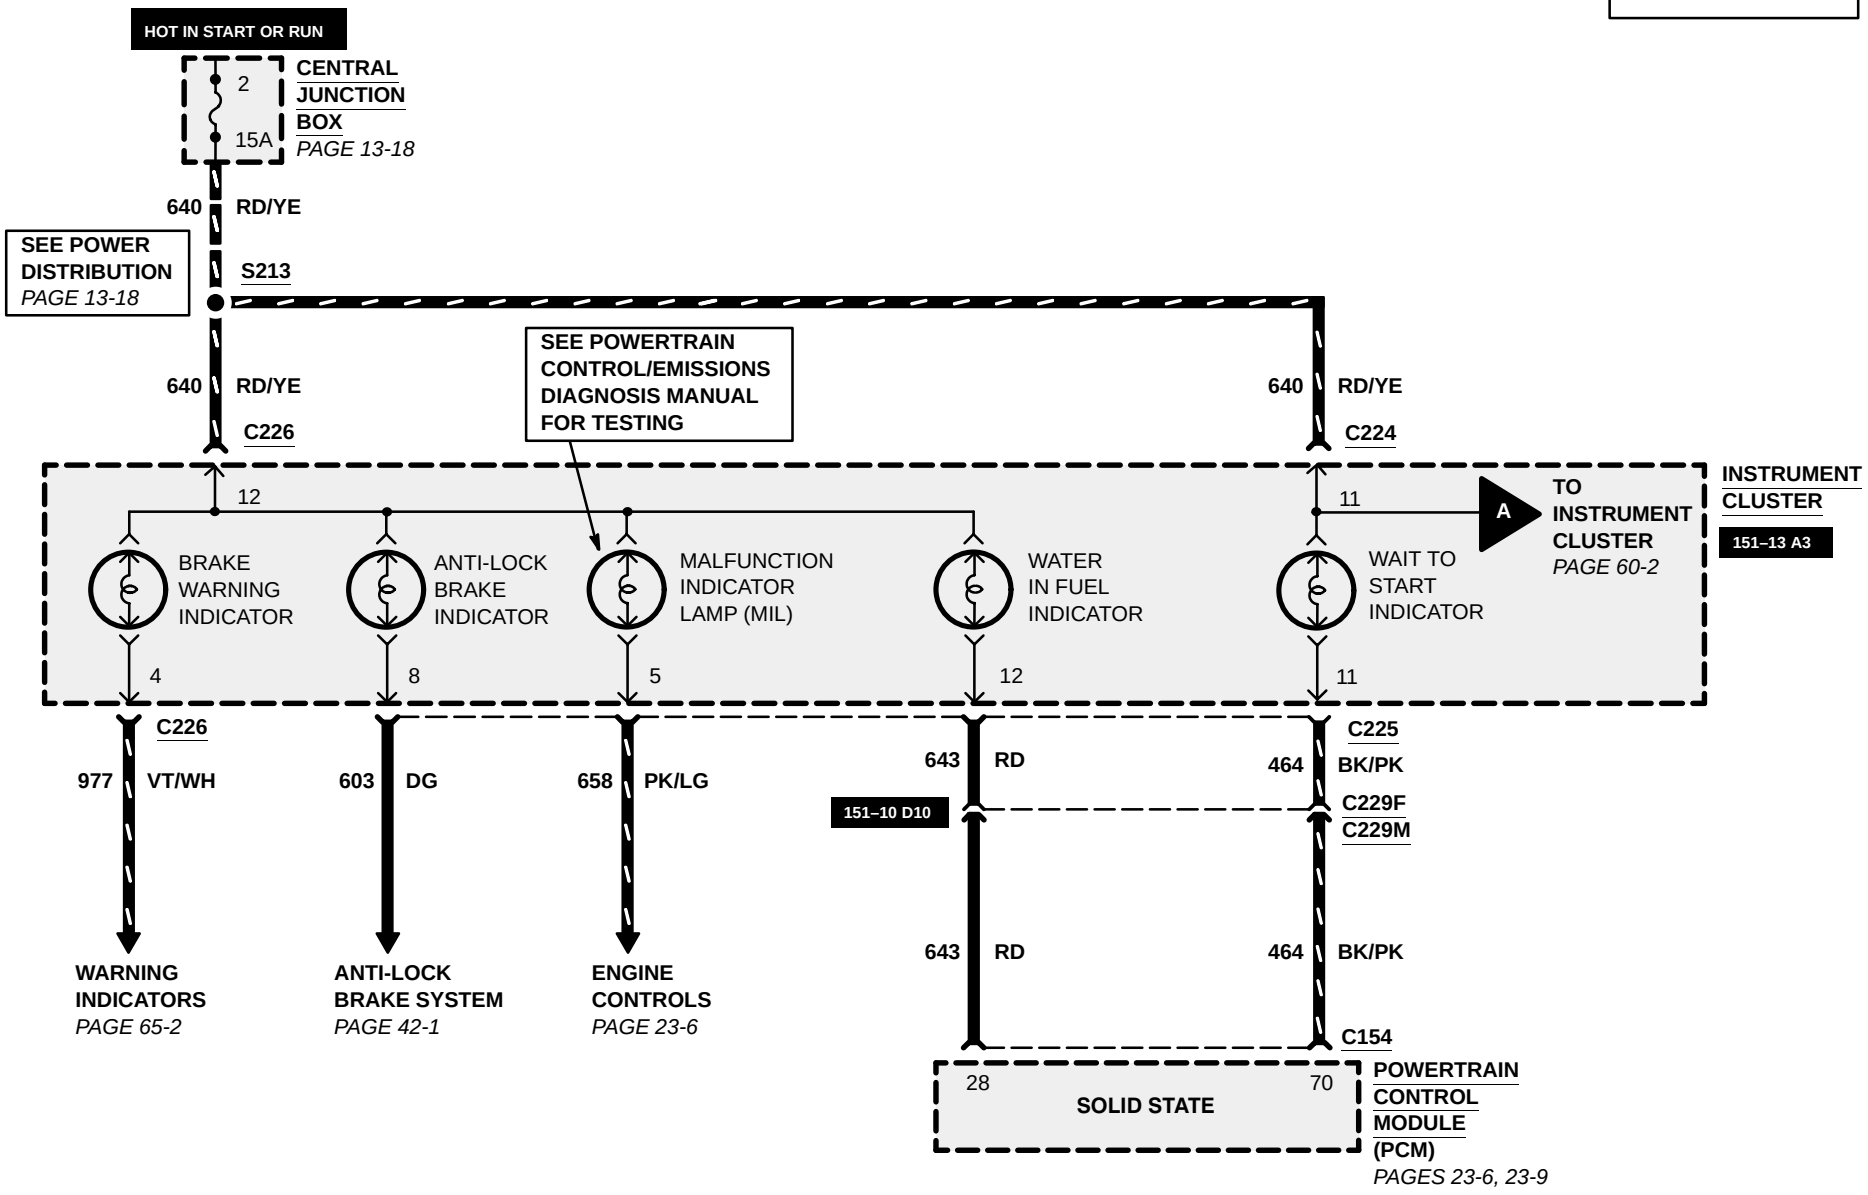
HOT IN START OR RUN
2
15A
CENTRAL JUNCTION BOX
PAGE 13-18
640 RD/YE
SEE POWER DISTRIBUTION
PAGE 13-18
S213
640 RD/YE
C226
SEE POWERTRAIN CONTROL/EMISSIONS DIAGNOSIS MANUAL FOR TESTING
640 RD/YE
C224
INSTRUMENT CLUSTER
151–13 A3
12
11
A
TO INSTRUMENT CLUSTER
PAGE 60-2
BRAKE WARNING INDICATOR
ANTI-LOCK BRAKE INDICATOR
MALFUNCTION INDICATOR LAMP (MIL)
WATER IN FUEL INDICATOR
WAIT TO START INDICATOR
4
8
5
12
11
C226
977 VT/WH
603 DG
658 PK/LG
643 RD
464 BK/PK
C225
151–10 D10
C229F
C229M
643 RD
464 BK/PK
C154
28
70
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-6, 23-9
WARNING INDICATORS
PAGE 65-2
ANTI-LOCK BRAKE SYSTEM
PAGE 42-1
ENGINE CONTROLS
PAGE 23-6