4.6L

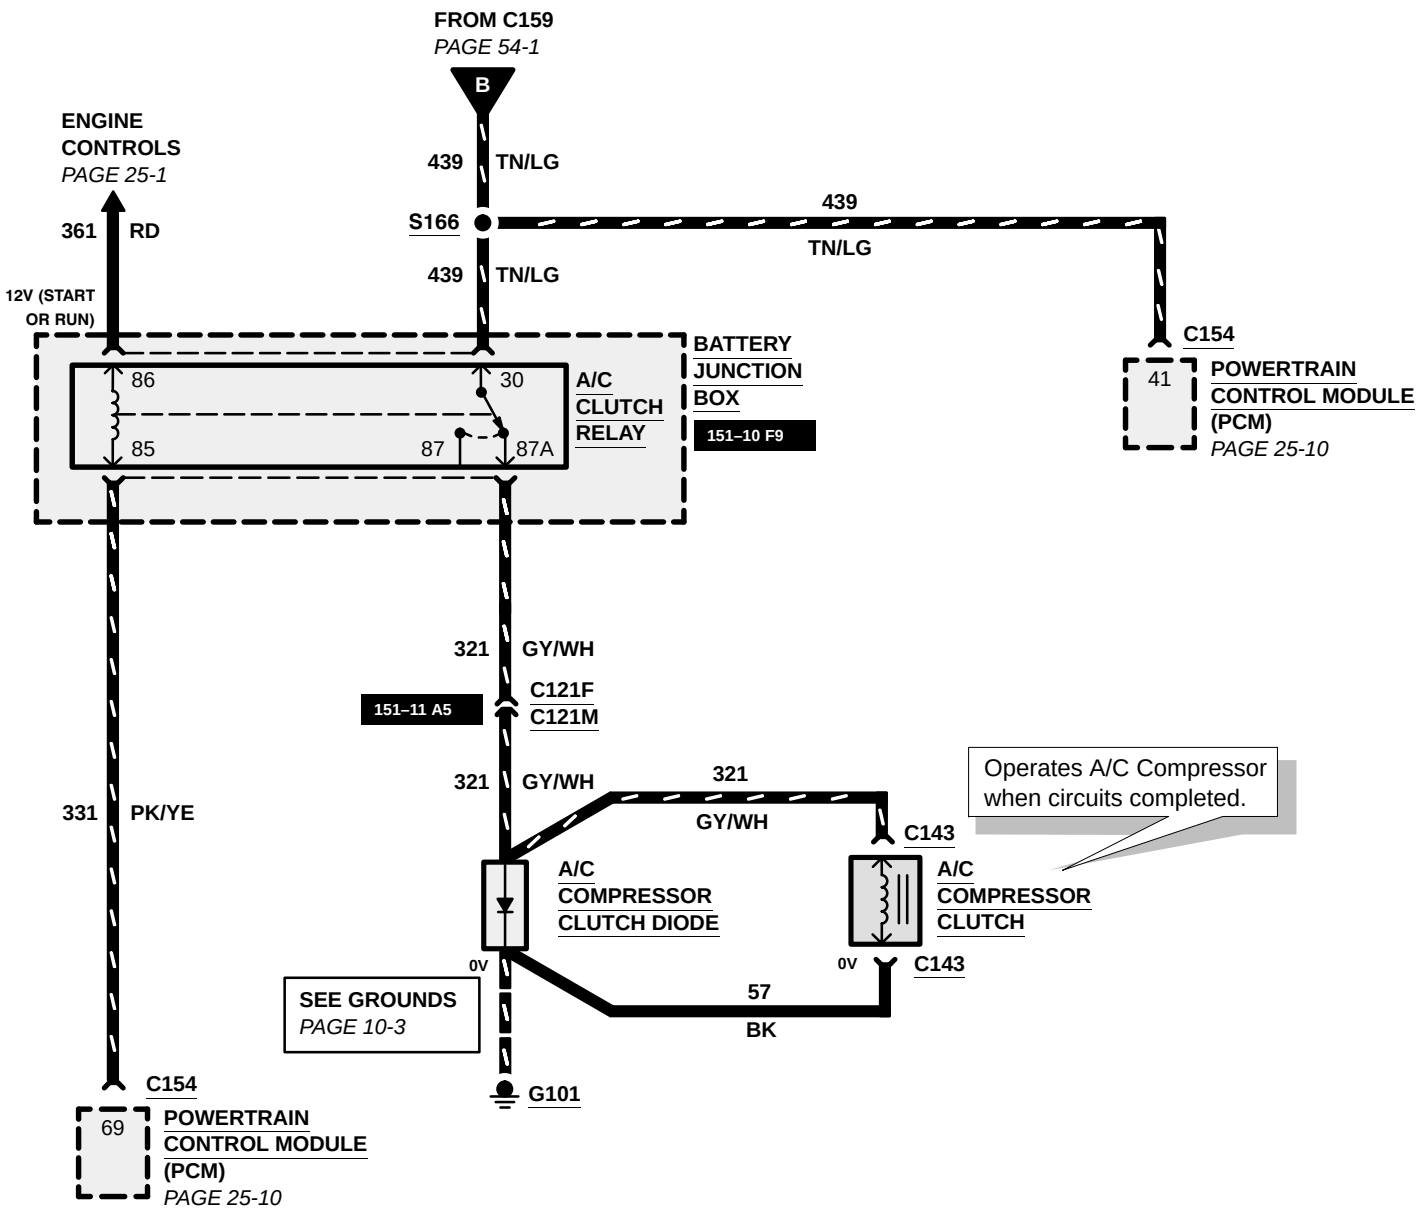
FROM C159
PAGE 54-1
B
ENGINE CONTROLS
PAGE 25-1
439 TN/LG
361 RD
S166
439 TN/LG
439 TN/LG
12V (START OR RUN)
BATTERY JUNCTION BOX
86
30
A/C CLUTCH RELAY
85
87
87A
151–10 F9
C154
41
POWERTRAIN CONTROL MODULE (PCM)
PAGE 25-10
321 GY/WH
151–11 A5
C121F
C121M
321 GY/WH
321 GY/WH
331 PK/YE
C143
Operates A/C Compressor when circuits completed.
A/C COMPRESSOR CLUTCH DIODE
A/C COMPRESSOR CLUTCH
0V
0V
C143
57 BK
SEE GROUNDS
PAGE 10-3
G101
C154
69
POWERTRAIN CONTROL MODULE (PCM)
PAGE 25-10