## C186

**9H589**

Y113
Injector 6 (9F593)




F02058

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 560 (LG/OG) | Injector 6, control |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C189

**9H589**

B8
Throttle Position
Sensor (TPS)
(9B989)

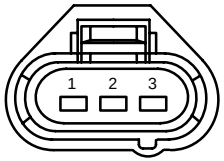


F03171

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 89 (OG) | signal, return |
| 2 | 355 (GY/WH) | Throttle Position Sensor (TPS) (9B989), input |
| 3 | 351 (BN/WH) | Reference, voltage |

## C193

**12A522**

B110a
Output Shaft Speed
(OSS) sensor
(7H103)

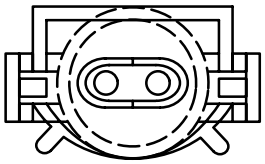

F02031

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1202 (BN/LG) | Ground |
| 2 | 136 (DB/YE) | Output Shaft Speed (OSS) sensor (7H103), input |

## C197a

**14A280**

M8
Starter motor
(11002)



F01087

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 2037 (RD) | Battery cable + |

## C197b

**14A280**

M8
Starter motor
(11002)



F01087

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 33 (WH/PK) | switched power, to starter solenoid |