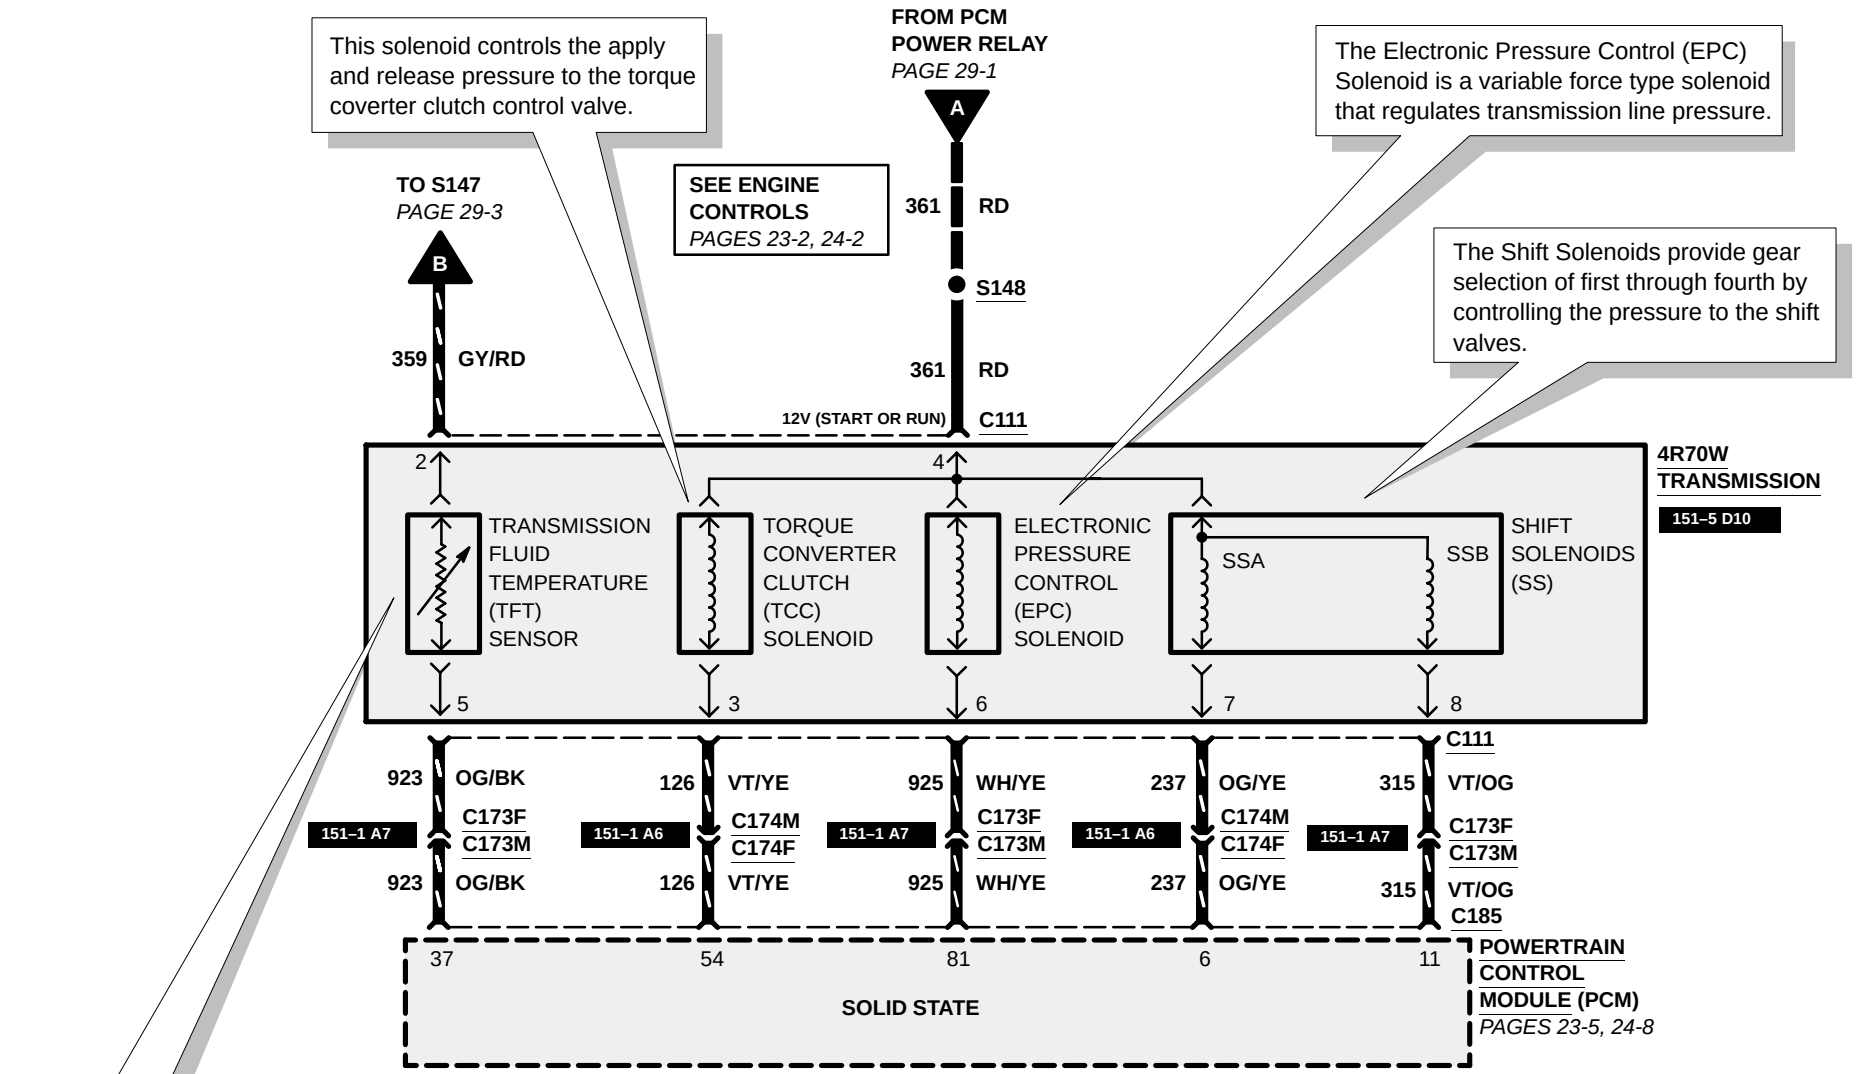

The PCM monitors the voltage drop across a temperature sensitive thermistor. The PCM uses this information to determine transmission fluid temperature for adjustment of shift schedules and torque converter clutch engagement schedules. Also used to adjust EPC pressure for temperature.

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.