56-1 REAR WINDOW DEFROST

2001 ESCORT

For diagnostic information, refer to Section 501-11 of the Workshop Manual.

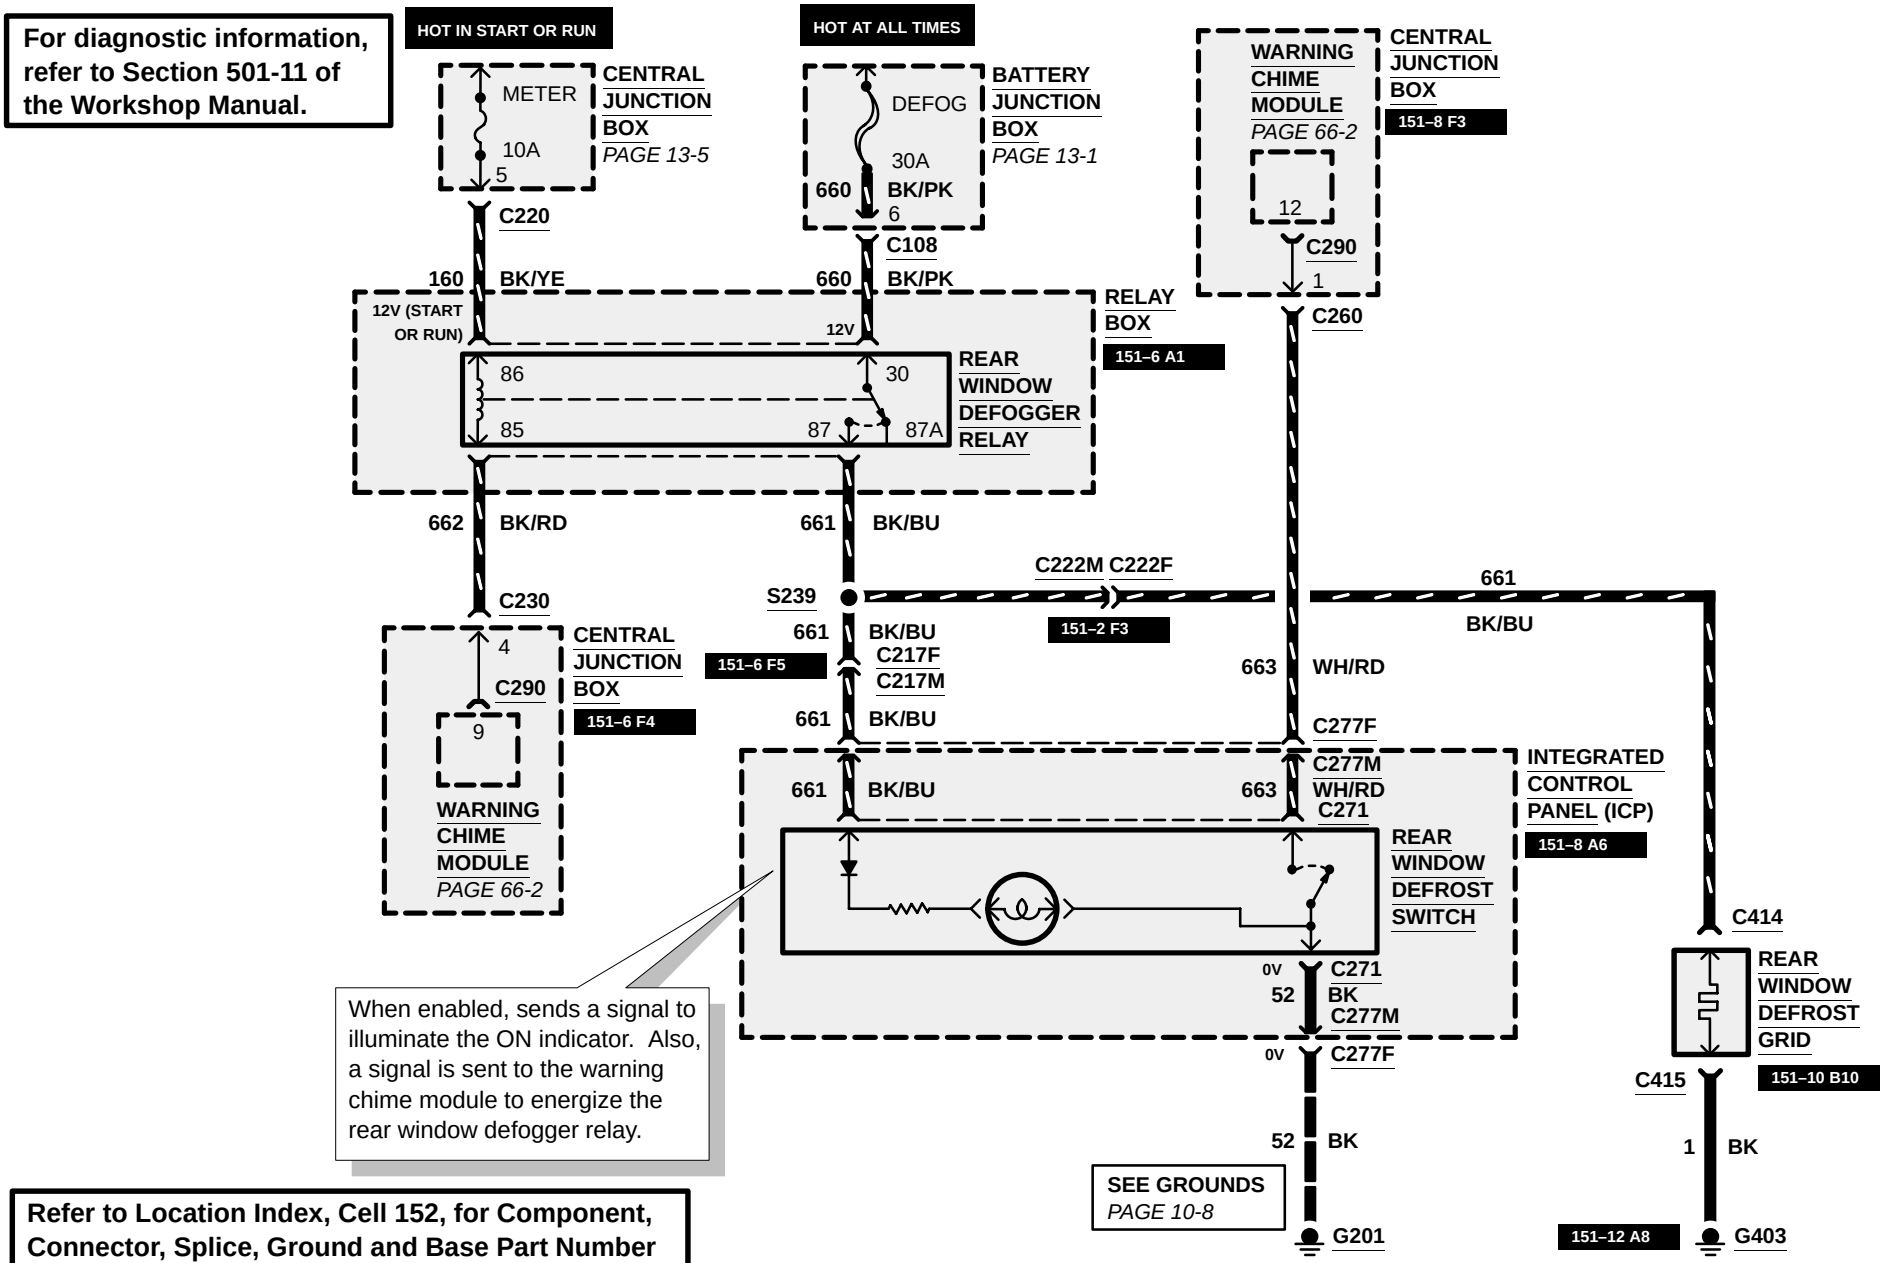

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.