C4160b (GY)

19B113

Subwoofer amplifier, luggage compartment right outboard

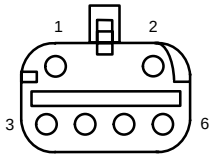

F06052

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	176 (PK/LG)	Subwoofer amplifier, luggage compartment right outboard, to, Subwoofer, luggage compartment right, +
4	179 (OG/RD)	Subwoofer amplifier, luggage compartment right outboard, to, Subwoofer, luggage compartment right, –
5	–	not used
6	–	not used

C4161 (GY)

19B113

Subwoofer, luggage compartment left

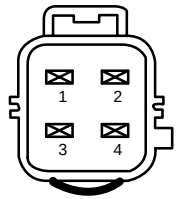

F04345

Pin	Circuit	Circuit function
1	176 (PK/LG)	Subwoofer amplifier, luggage compartment left outboard, to, Subwoofer, luggage compartment left, +
2	189 (TN/LB)	Subwoofer amplifier, luggage compartment left inboard, to, Subwoofer, luggage compartment left, +
3	179 (OG/RD)	Subwoofer amplifier, luggage compartment left outboard, to, Subwoofer, luggage compartment left, –
4	187 (DB/OG)	Subwoofer amplifier, luggage compartment left inboard, to, Subwoofer, luggage compartment left, –