C219

14401

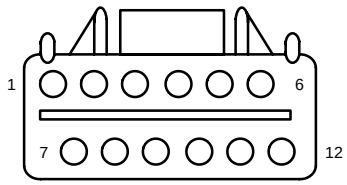

F12044

14A504

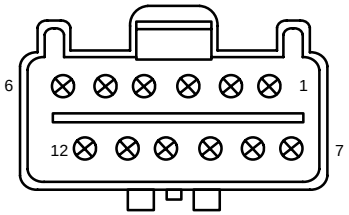

F12043

(1)
(2)
(3) 797 (LG/VT)
(4) 1462 (RD/WH)
(5)
(6)
(7)
(8) 1153 (RD/BK)
(9) 694 (BK/LG)
(10) 1543 (YE)
(11)
(12)

C220a

14401

A30
Instrument cluster

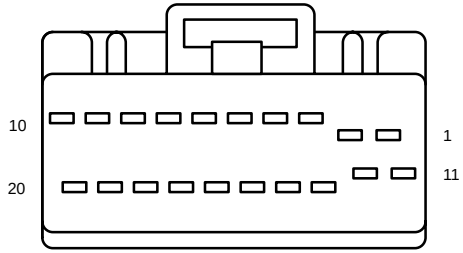

F20017

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
3	904 (LG/RD)	Generator/Battery indicator, control
4	939 (VT)	traction assist, indicator, Lamp
5	419 (DG/LG)	Air suspension module (3C142), to, Instrumentation and Warning System
6	–	not used
7	2 (WH/LB)	Turn lamps, feed, right front
8	–	not used
9	–	not used
10	729 (RD/WH)	Voltage supplied at all times (overload protected)
11	1003 (GY/YE)	Voltage in Run (overload protected)
12	932 (GY/WH)	High beam lamp, feed
13	608 (BK/YE)	Air bag indicator, control
14	–	not used
15	–	not used
16	603 (DG)	Anti–lock brake indicator
17	162 (LG/RD)	Parking brake switch (15A851)
18	531 (DG/YE)	Brake fluid level switch (2L414), signal
19	512 (TN/LG)	Brake indicator, control
20	31 (WH/RD)	Engine oil pressure indicator, control