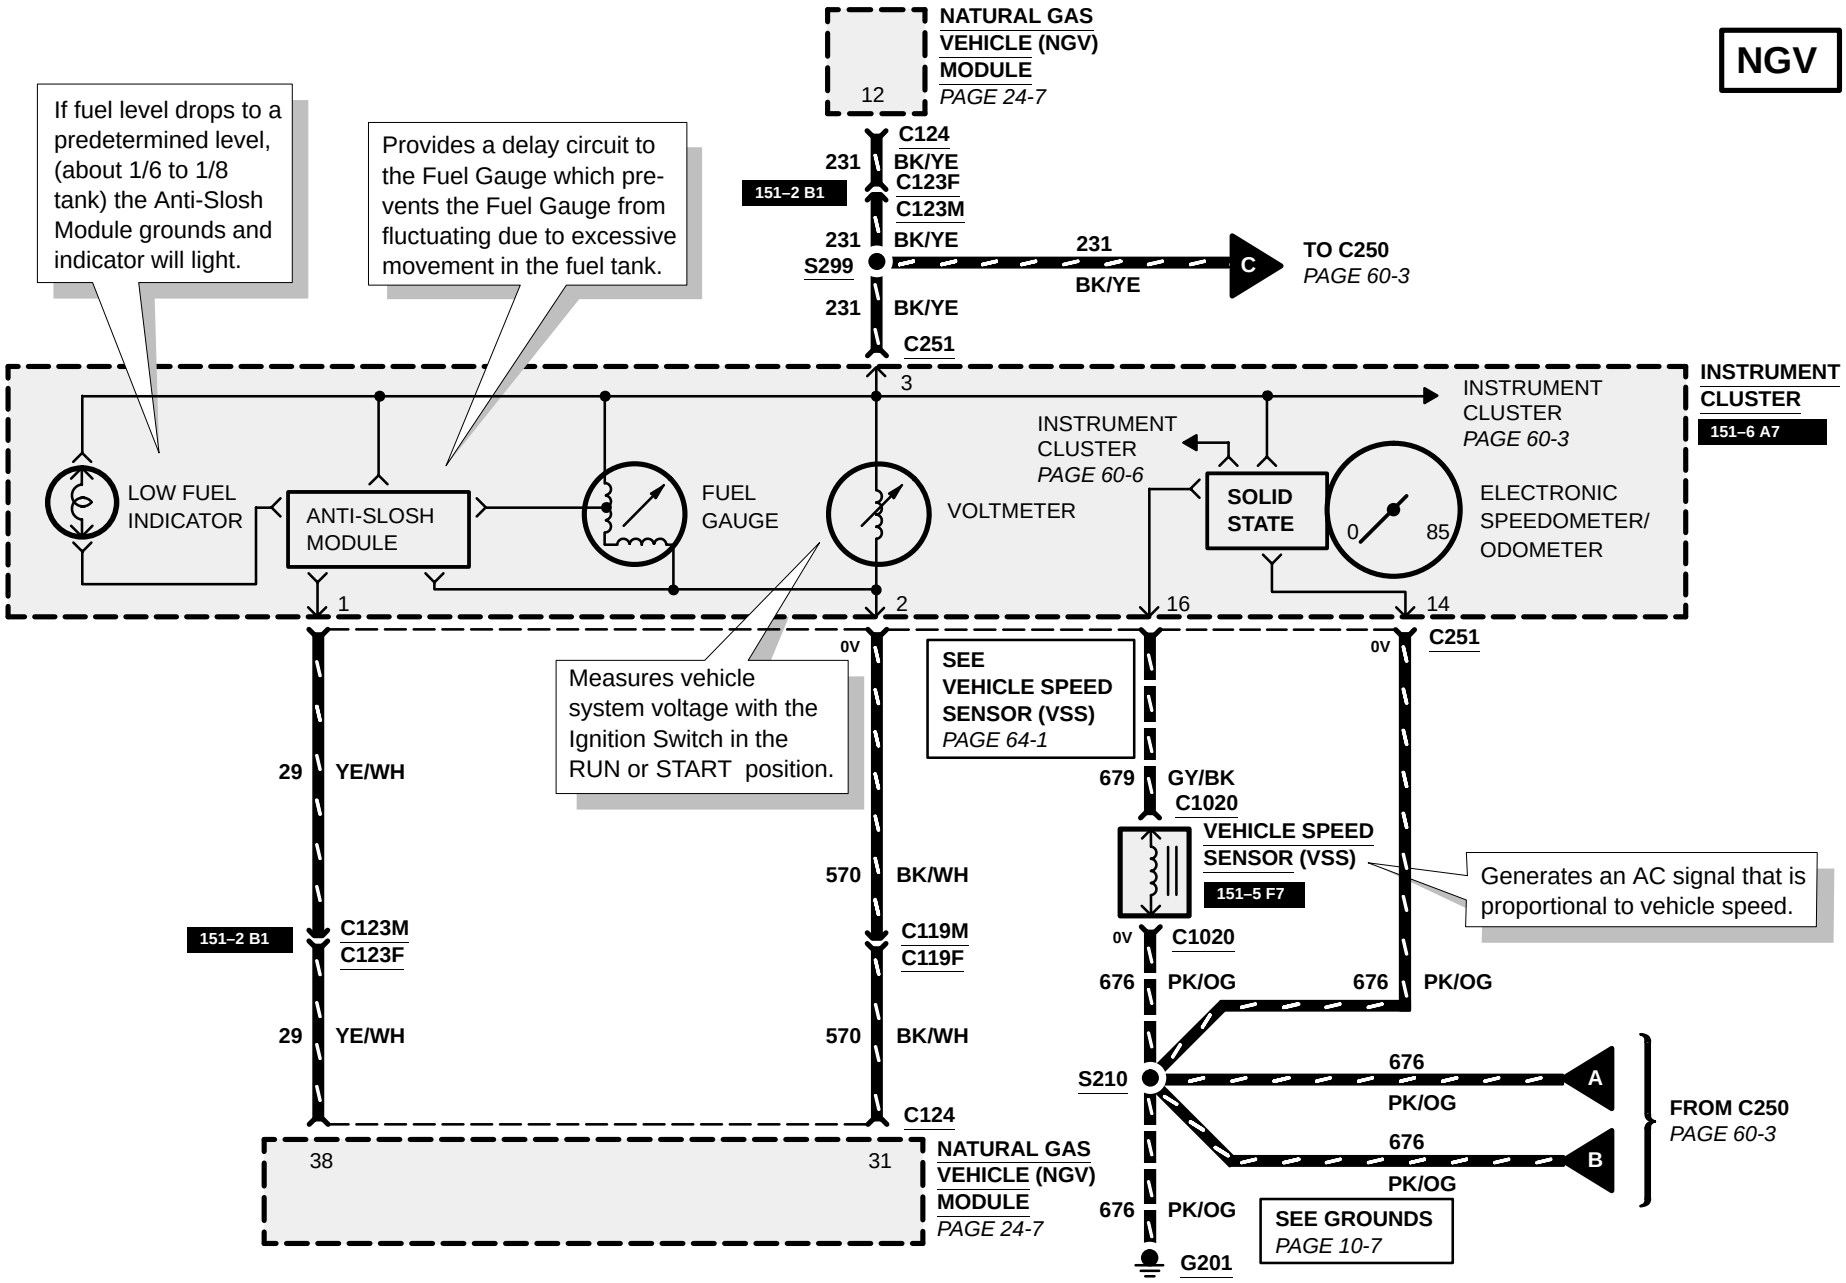
NGV
NATURAL GAS VEHICLE (NGV) MODULE
PAGE 24-7
12
C124
231 BK/YE
C123F
C123M
151–2 B1
231 BK/YE
S299
231 BK/YE
C
TO C250
PAGE 60-3
231 BK/YE
C251
If fuel level drops to a predetermined level, (about 1/6 to 1/8 tank) the Anti-Slosh Module grounds and indicator will light.
Provides a delay circuit to the Fuel Gauge which prevents the Fuel Gauge from fluctuating due to excessive movement in the fuel tank.
INSTRUMENT CLUSTER
151–6 A7
3
INSTRUMENT CLUSTER
PAGE 60-3
INSTRUMENT CLUSTER
PAGE 60-6
LOW FUEL INDICATOR
ANTI-SLOSH MODULE
FUEL GAUGE
VOLTMETER
SOLID STATE
0
85
ELECTRONIC SPEEDOMETER/ ODOMETER
1
2
16
14
Measures vehicle system voltage with the Ignition Switch in the RUN or START position.
0V
SEE VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
0V
C251
29 YE/WH
679 GY/BK
C1020
VEHICLE SPEED SENSOR (VSS)
151–5 F7
Generates an AC signal that is proportional to vehicle speed.
570 BK/WH
C119M
C119F
151–2 B1
C123M
C123F
0V
C1020
676 PK/OG
676 PK/OG
29 YE/WH
570 BK/WH
S210
676 PK/OG
A
676 PK/OG
B
FROM C250
PAGE 60-3
C124
38
31
NATURAL GAS VEHICLE (NGV) MODULE
PAGE 24-7
676 PK/OG
SEE GROUNDS
PAGE 10-7
G201