## Duratec

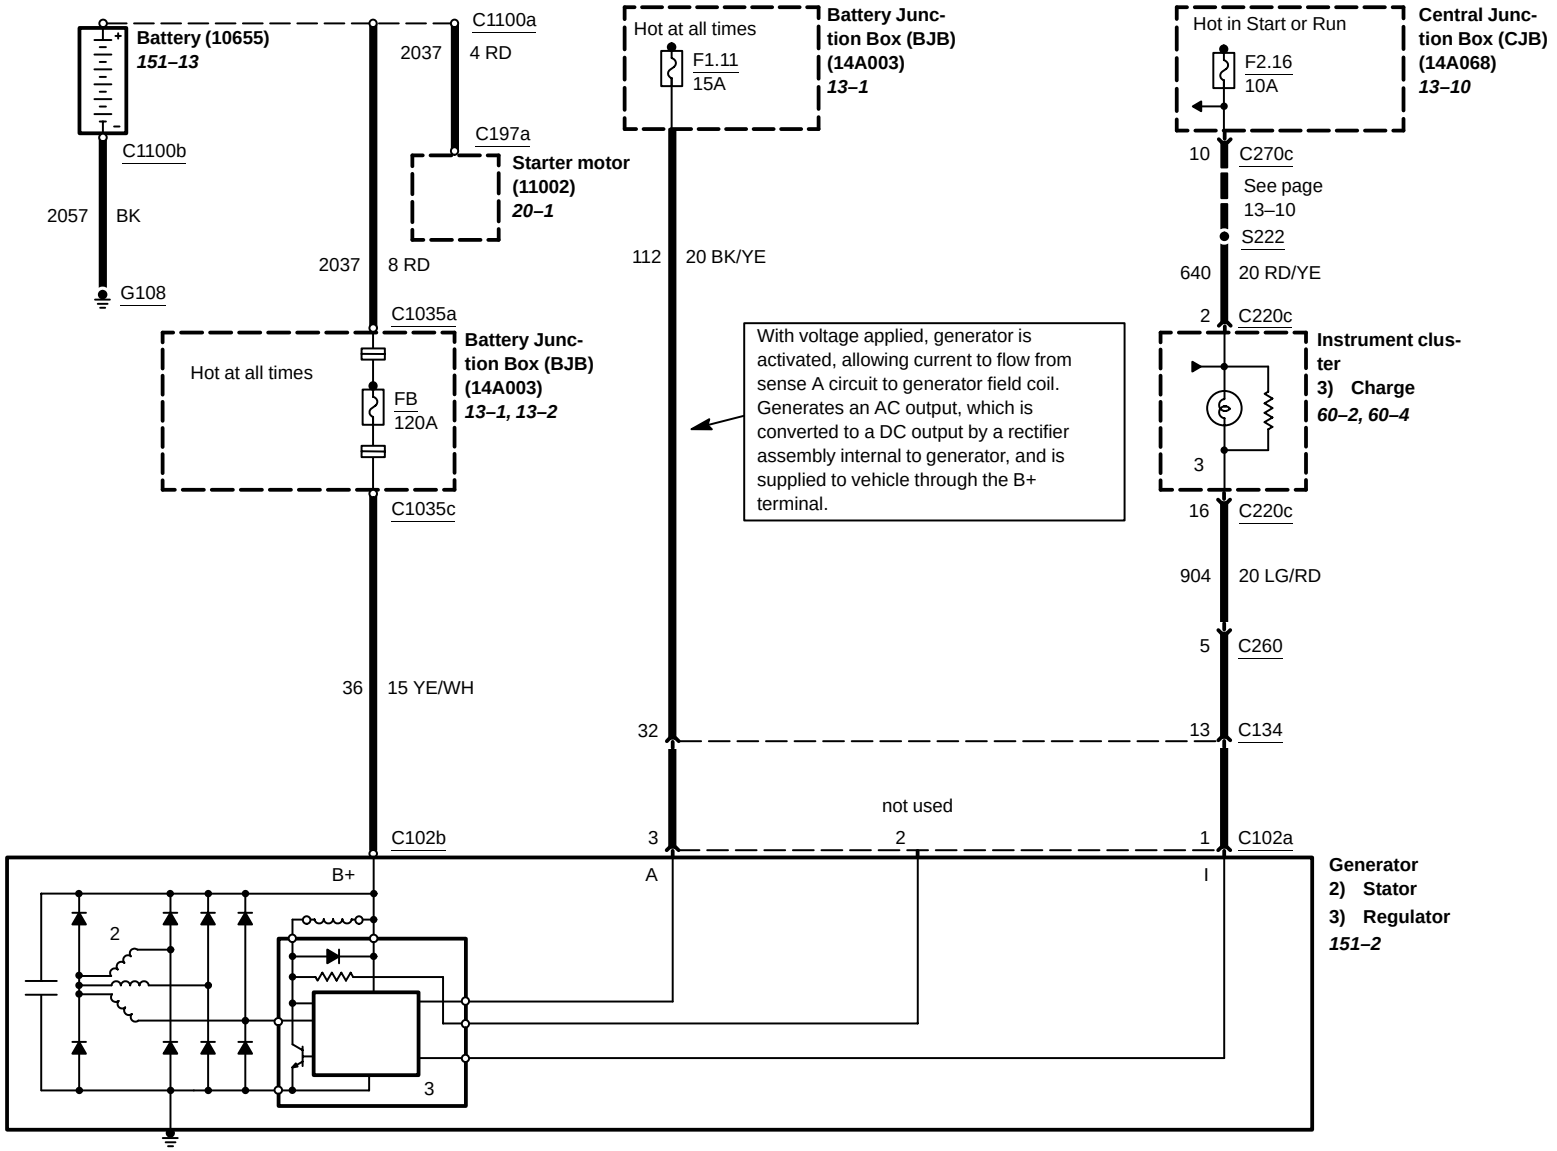
Battery (10655)
151–13
C1100b
2057 BK
G108
C1100a
2037 4 RD
C197a
Starter motor (11002)
20–1
2037 8 RD
C1035a
Hot at all times
FB 120A
Battery Junction Box (BJB) (14A003)
13–1, 13–2
C1035c
36 15 YE/WH
C102b
B+
Hot at all times
F1.11 15A
Battery Junction Box (BJB) (14A003)
13–1
112 20 BK/YE
32
3
A
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal.
Hot in Start or Run
F2.16 10A
Central Junction Box (CJB) (14A068)
13–10
10 C270c
See page 13–10
S222
640 20 RD/YE
2 C220c
Instrument cluster
3) Charge
60–2, 60–4
3
16 C220c
904 20 LG/RD
5 C260
13 C134
not used
2
1 C102a
I
Generator
2) Stator
3) Regulator
151–2
2
3