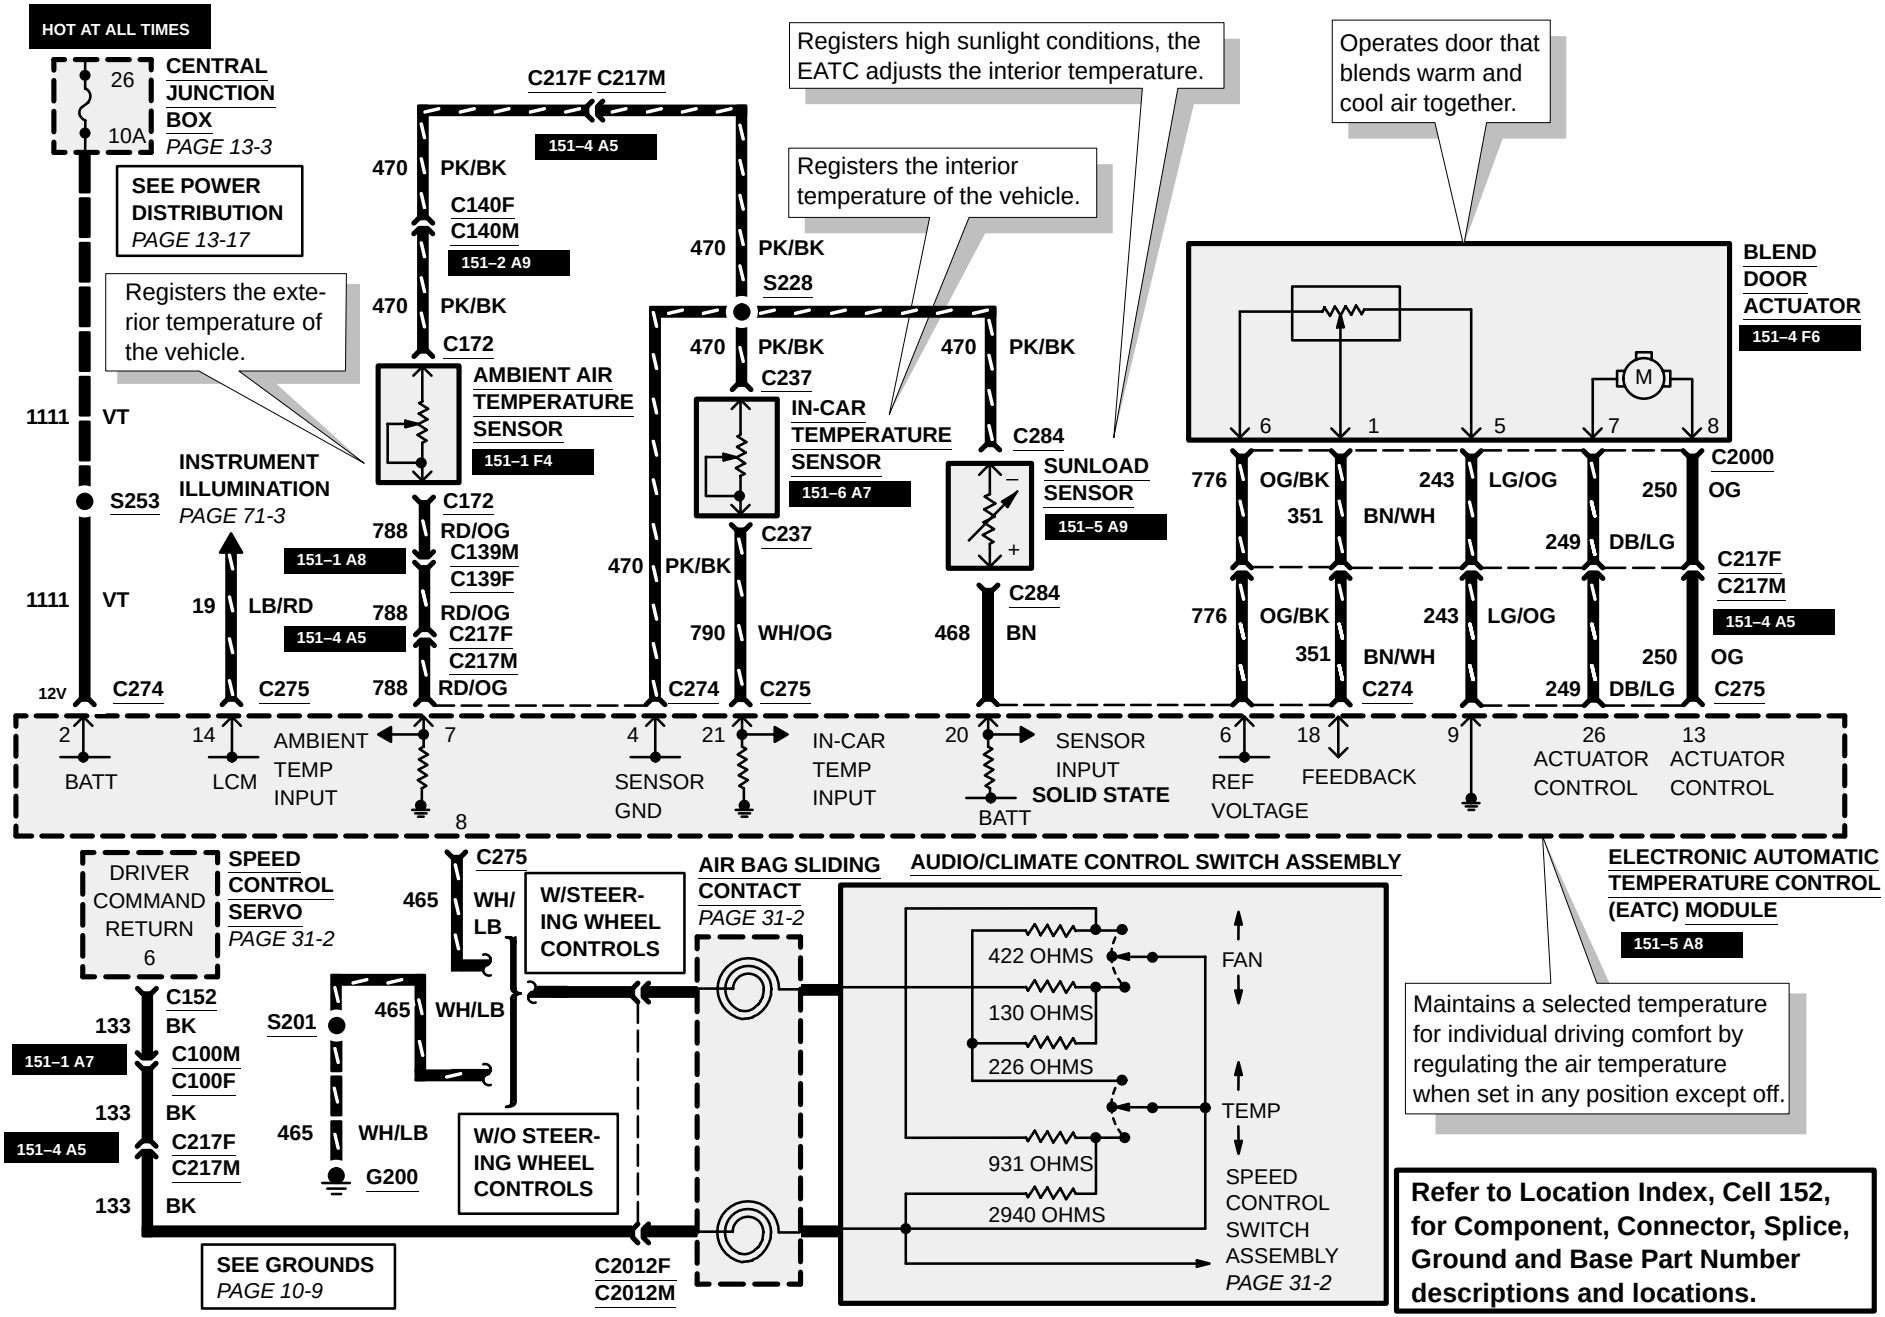
HOT AT ALL TIMES
26
10A
CENTRAL JUNCTION BOX
PAGE 13-3
SEE POWER DISTRIBUTION
PAGE 13-17
Registers the exterior temperature of the vehicle.
Registers high sunlight conditions, the EATC adjusts the interior temperature.
Registers the interior temperature of the vehicle.
Operates door that blends warm and cool air together.
C217F C217M
151–4 A5
470 PK/BK
C140F
C140M
151–2 A9
470 PK/BK
C172
AMBIENT AIR TEMPERATURE SENSOR
151–1 F4
1111 VT
INSTRUMENT ILLUMINATION
PAGE 71-3
S253
1111 VT
19 LB/RD
12V
C274
C275
C172
788 RD/OG
151–1 A8
C139M
C139F
788 RD/OG
151–4 A5
C217F
C217M
788 RD/OG
470 PK/BK
S228
470 PK/BK
C237
IN-CAR TEMPERATURE SENSOR
151–6 A7
C237
470 PK/BK
790 WH/OG
C274
C275
470 PK/BK
C284
SUNLOAD SENSOR
151–5 A9
C284
468 BN
BLEND DOOR ACTUATOR
151–4 F6
6
1
5
7
8
M
776 OG/BK
351 BN/WH
243 LG/OG
249 DB/LG
250 OG
C2000
C217F
C217M
151–4 A5
776 OG/BK
351 BN/WH
243 LG/OG
249 DB/LG
250 OG
C274
C275
2 BATT
14 LCM
AMBIENT TEMP INPUT
7
8
4 SENSOR GND
21 IN-CAR TEMP INPUT
20 SENSOR INPUT
SOLID STATE
BATT
6 REF VOLTAGE
18 FEEDBACK
9
26 ACTUATOR CONTROL
13 ACTUATOR CONTROL
DRIVER COMMAND RETURN
6
SPEED CONTROL SERVO
PAGE 31-2
C152
133 BK
151–1 A7
C100M
C100F
133 BK
151–4 A5
C217F
C217M
133 BK
S201
465 WH/LB
G200
C275
465 WH/LB
W/STEERING WHEEL CONTROLS
W/O STEERING WHEEL CONTROLS
AIR BAG SLIDING CONTACT
PAGE 31-2
AUDIO/CLIMATE CONTROL SWITCH ASSEMBLY
422 OHMS
130 OHMS
226 OHMS
931 OHMS
2940 OHMS
FAN
TEMP
SPEED CONTROL SWITCH ASSEMBLY
PAGE 31-2
SEE GROUNDS
PAGE 10-9
C2012F
C2012M
ELECTRONIC AUTOMATIC TEMPERATURE CONTROL (EATC) MODULE
151–5 A8
Maintains a selected temperature for individual driving comfort by regulating the air temperature when set in any position except off.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.