C164

7C078

B235
Intermediate Shaft
Speed (ISS) sensor
(7M183)

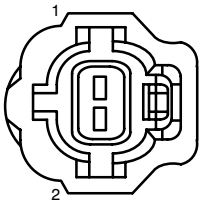

F02027

Pin	Circuit	Circuit Function
1	8-TA74 (WH/BK)	Sensor signal
2	9-TA74 (BN/YE)	Sensor signal return (reference/ground)

C167

7C078

B234
Digital Transmission
Range (DTR) sen-
sor (7F293)

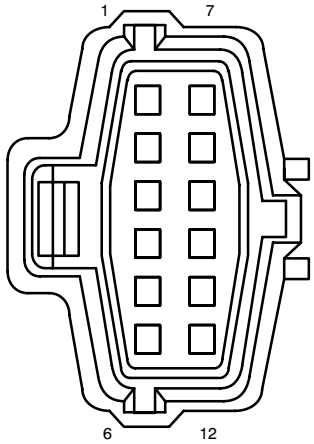

F12040

Pin	Circuit	Circuit Function
1	–	not used
2	9-TA18 (BN/YE)	Sensor signal return (reference/ground)
3	8-TA37 (WH)	Sensor signal
4	8-TA40 (WH/GN)	Sensor signal
5	8-TA39 (WH/BU)	Sensor signal
6	8-TA38 (WH/RD)	Sensor signal
7	–	not used
8	–	not used
9	–	not used
10	50-BB15 (GY/OG)	Voltage, ignition switch in Start (not overload protected)
11	–	not used
12	50S-BB12 (GY)	Voltage, ignition switch in Start (not overload protected), Switched