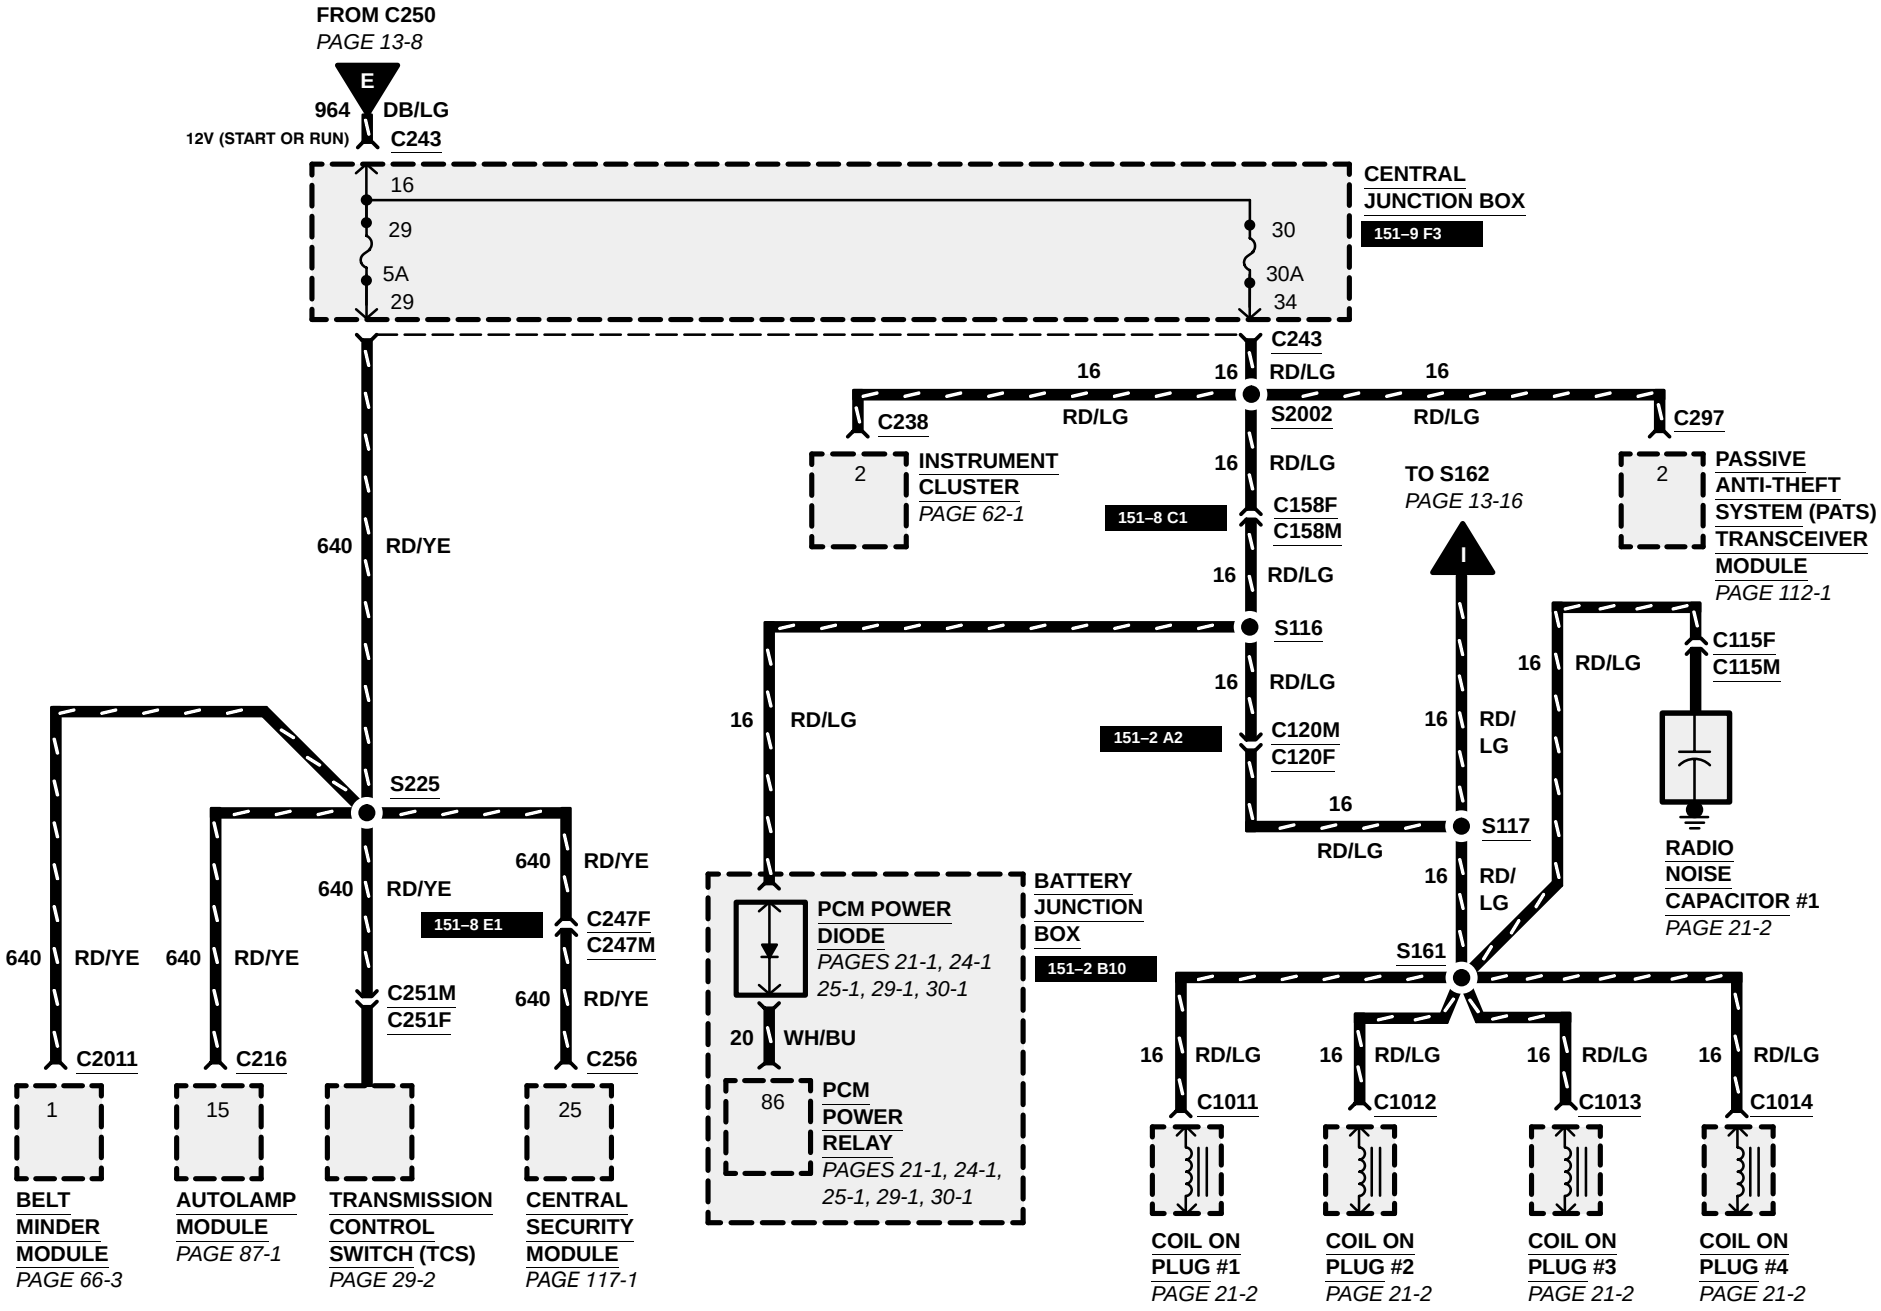
FROM C250
PAGE 13-8
E
964 DB/LG
12V (START OR RUN) C243
CENTRAL JUNCTION BOX
151–9 F3
16
29
5A
29
30
30A
34
C243
640 RD/YE
16 RD/LG
16 RD/LG
16 RD/LG
C238
2
INSTRUMENT CLUSTER
PAGE 62-1
RD/LG
S2002
RD/LG
C297
2
PASSIVE ANTI-THEFT SYSTEM (PATS) TRANSCEIVER MODULE
PAGE 112-1
16 RD/LG
C158F
C158M
151–8 C1
TO S162
PAGE 13-16
16 RD/LG
S116
16 RD/LG
C120M
C120F
151–2 A2
16 RD/LG
16 RD/LG
C115F
C115M
16 RD/LG
16 RD/LG
S117
RD/LG
16 RD/LG
S225
640 RD/YE
640 RD/YE
640 RD/YE
640 RD/YE
640 RD/YE
640 RD/YE
151–8 E1
C247F
C247M
C251M
C251F
C2011
C216
C256
1
15
25
BELT MINDER MODULE
PAGE 66-3
AUTOLAMP MODULE
PAGE 87-1
TRANSMISSION CONTROL SWITCH (TCS)
PAGE 29-2
CENTRAL SECURITY MODULE
PAGE 117-1
PCM POWER DIODE
PAGES 21-1, 24-1
25-1, 29-1, 30-1
20 WH/BU
86
PCM POWER RELAY
PAGES 21-1, 24-1,
25-1, 29-1, 30-1
BATTERY JUNCTION BOX
151–2 B10
RADIO NOISE CAPACITOR #1
PAGE 21-2
S161
16 RD/LG
16 RD/LG
16 RD/LG
16 RD/LG
C1011
C1012
C1013
C1014
COIL ON PLUG #1
PAGE 21-2
COIL ON PLUG #2
PAGE 21-2
COIL ON PLUG #3
PAGE 21-2
COIL ON PLUG #4
PAGE 21-2