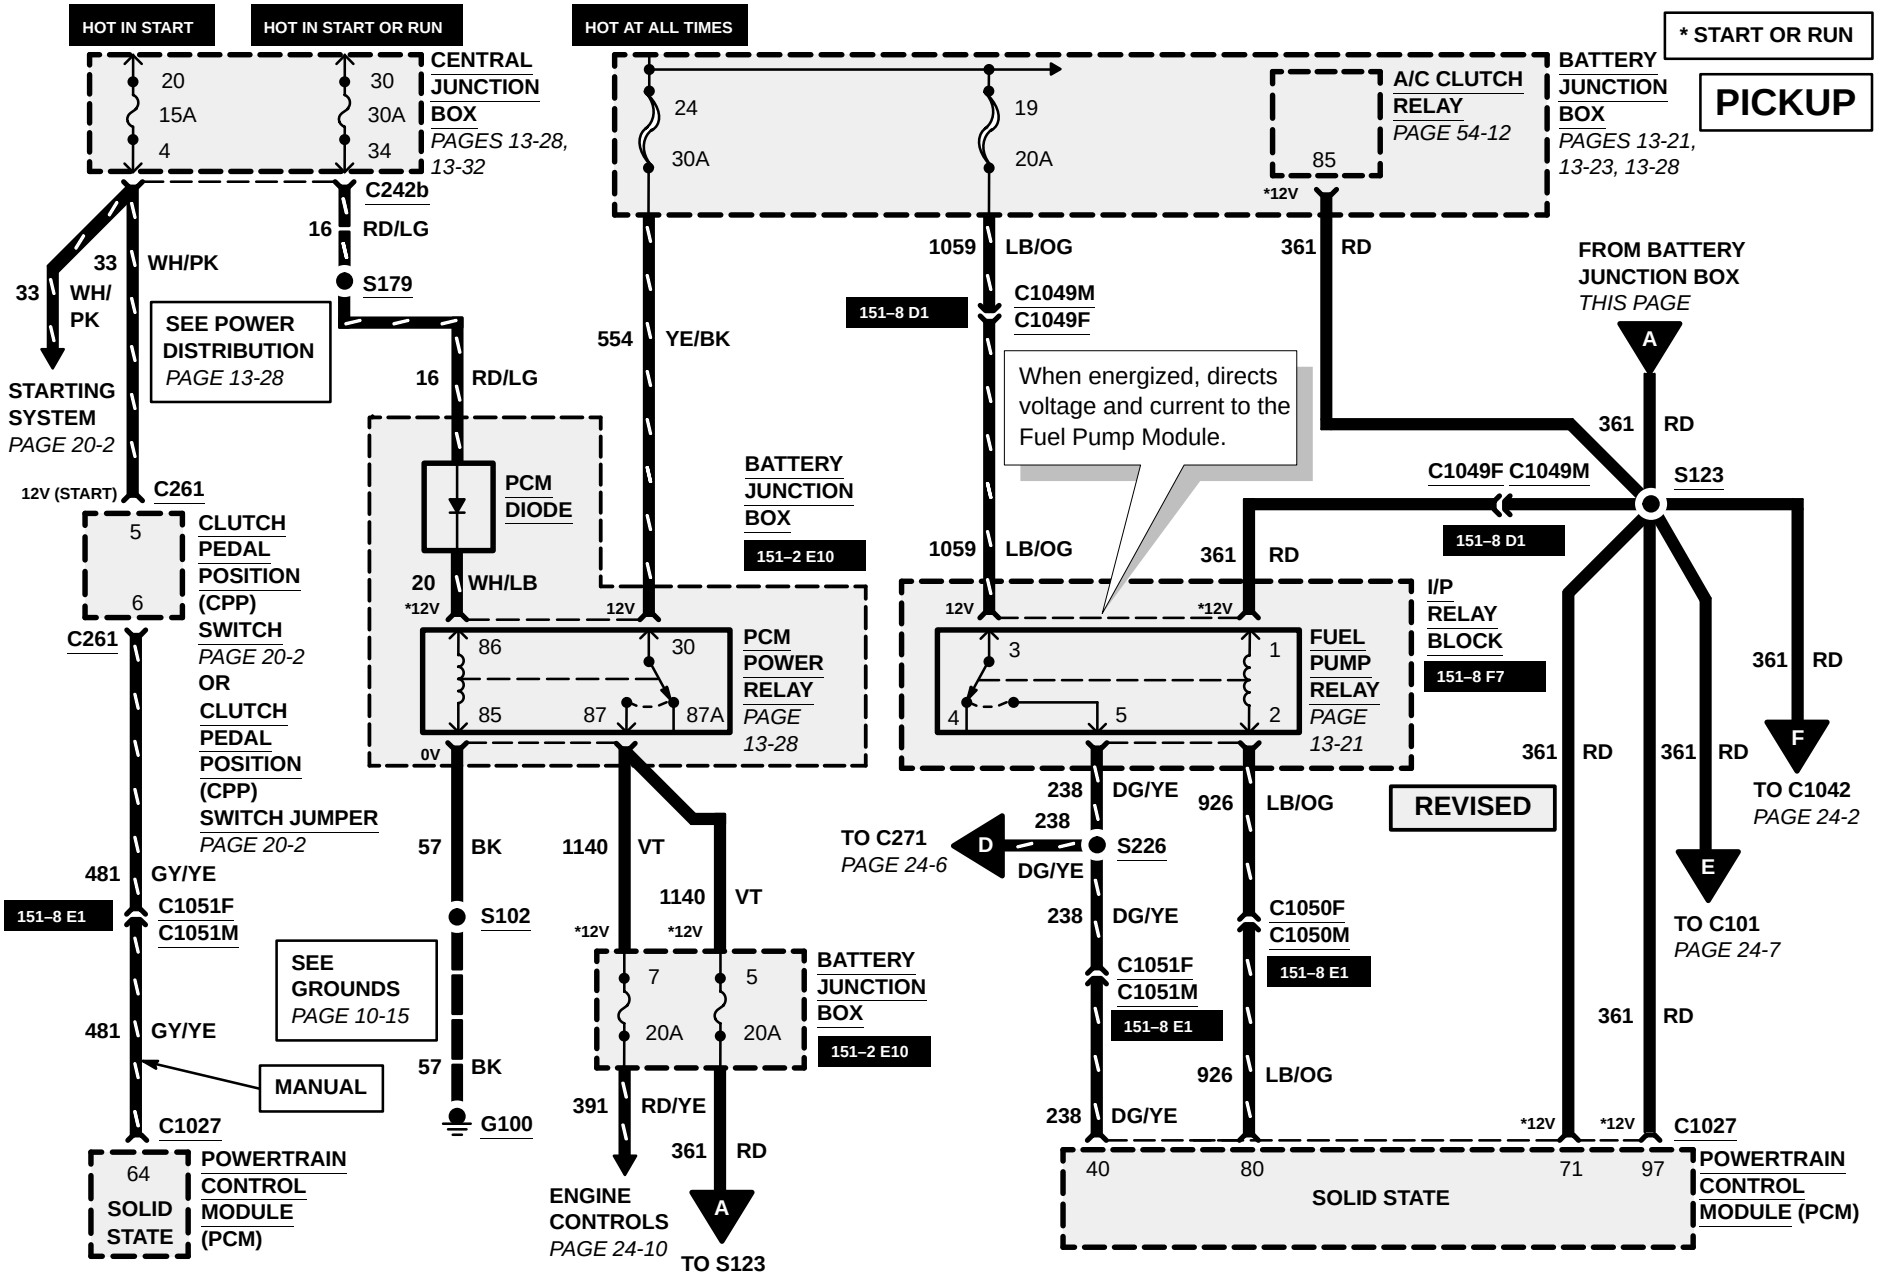
HOT IN START
HOT IN START OR RUN
HOT AT ALL TIMES
* START OR RUN
PICKUP
CENTRAL JUNCTION BOX
PAGES 13-28, 13-32
BATTERY JUNCTION BOX
PAGES 13-21, 13-23, 13-28
A/C CLUTCH RELAY
PAGE 54-12
C242b
16 RD/LG
S179
33 WH/PK
33 WH/PK
STARTING SYSTEM
PAGE 20-2
SEE POWER DISTRIBUTION
PAGE 13-28
554 YE/BK
1059 LB/OG
C1049M
C1049F
151–8 D1
361 RD
FROM BATTERY JUNCTION BOX
THIS PAGE
When energized, directs voltage and current to the Fuel Pump Module.
C1049F C1049M
S123
12V (START)
C261
CLUTCH PEDAL POSITION (CPP) SWITCH
PAGE 20-2
OR
CLUTCH PEDAL POSITION (CPP) SWITCH JUMPER
PAGE 20-2
PCM DIODE
BATTERY JUNCTION BOX
151–2 E10
20 WH/LB
PCM POWER RELAY
PAGE 13-28
I/P RELAY BLOCK
151–8 F7
FUEL PUMP RELAY
PAGE 13-21
REVISED
TO C271
PAGE 24-6
S226
238 DG/YE
926 LB/OG
TO C1042
PAGE 24-2
TO C101
PAGE 24-7
481 GY/YE
C1051F
C1051M
151–8 E1
C1050F
C1050M
57 BK
S102
1140 VT
SEE GROUNDS
PAGE 10-15
MANUAL
G100
BATTERY JUNCTION BOX
391 RD/YE
ENGINE CONTROLS
PAGE 24-10
TO S123
THIS PAGE
C1027
POWERTRAIN CONTROL MODULE (PCM)
SOLID STATE