C4115

13407

E276
Park/stop/turn lamp
2, right rear

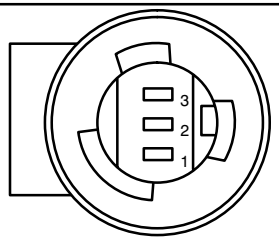

F03113

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	14 (BN)	Power, Exterior lamps
3	5 (OG/LB)	Turn lamps, feed, right rear

C4116

14A005

Y202
EVAP canister vent
control solenoid

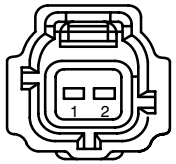

F02101

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	101 (GY/YE)	EVAP canister vent control solenoid, control

C4157a

19B113

A441
Subwoofer amplifier,
luggage compart-
ment left outboard

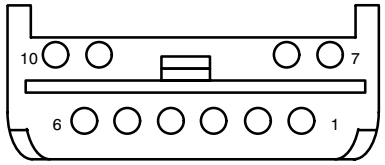

F10009

Pin	Circuit	Circuit function
1	174 (GY/BK)	Radio (18806) – Subwoofer, Low, mute
	174 (GY/BK)	Radio (18806) – Subwoofer, Low, mute
2	694 (BK/LG)	Ground
3	–	not used
4	–	not used
5	828 (VT/LB)	Voltage supplied at all times (overload protected)
6	–	not used
7	169 (LG/BK)	Radio (18806) – Subwoofer, Low, +
	169 (LG/BK)	Radio (18806) – Subwoofer, Low, +
8	172 (LB/RD)	Radio (18806) – Subwoofer, Low, –
	172 (LB/RD)	Radio (18806) – Subwoofer, Low, –
9	–	not used
10	–	not used