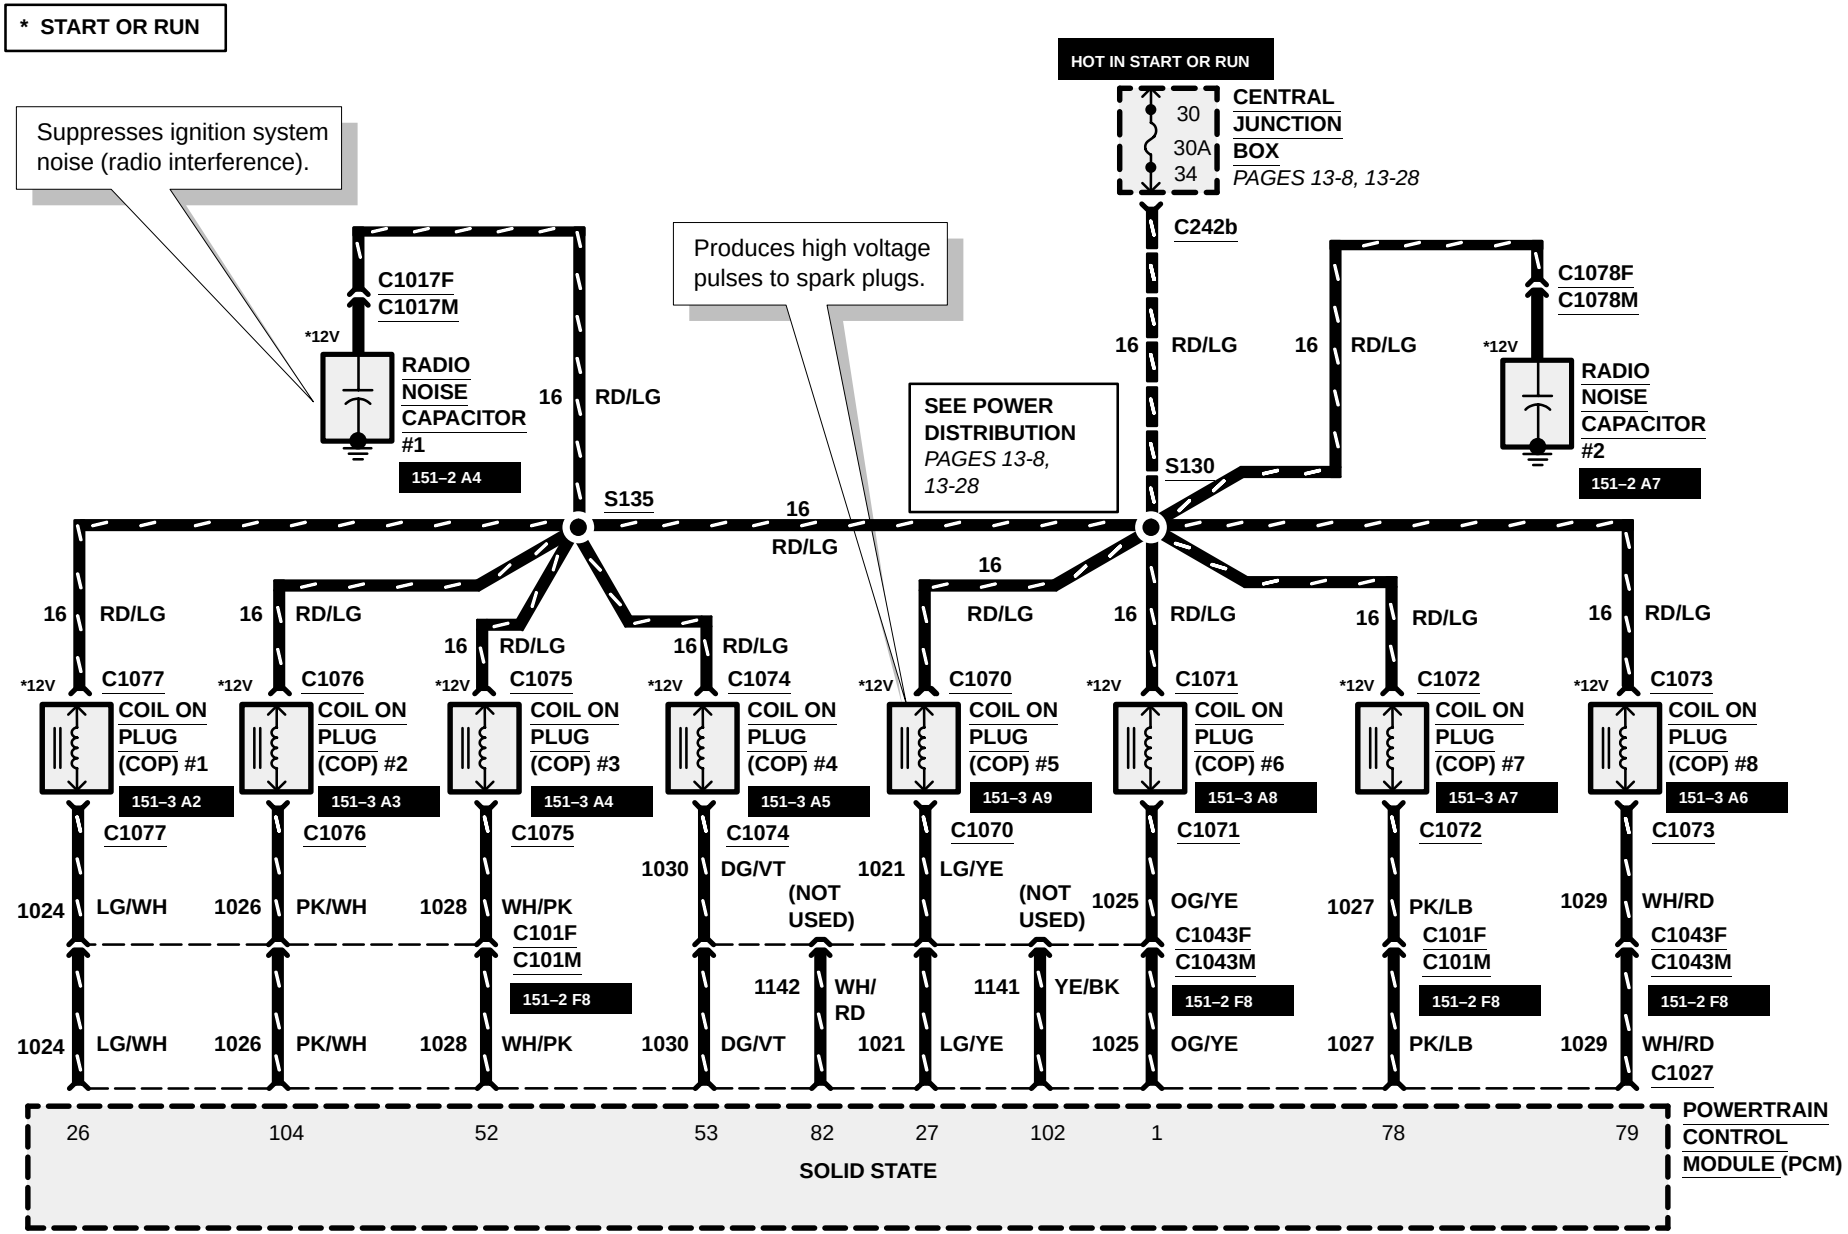
* START OR RUN
HOT IN START OR RUN
Suppresses ignition system noise (radio interference).
Produces high voltage pulses to spark plugs.
CENTRAL JUNCTION BOX
30
30A
34
PAGES 13-8, 13-28
C242b
C1017F
C1017M
*12V
RADIO NOISE CAPACITOR #1
151–2 A4
16 RD/LG
S135
SEE POWER DISTRIBUTION
PAGES 13-8, 13-28
S130
C1078F
C1078M
RADIO NOISE CAPACITOR #2
151–2 A7
C1077 COIL ON PLUG (COP) #1
151–3 A2
C1076 COIL ON PLUG (COP) #2
151–3 A3
C1075 COIL ON PLUG (COP) #3
151–3 A4
C1074 COIL ON PLUG (COP) #4
151–3 A5
C1070 COIL ON PLUG (COP) #5
151–3 A9
C1071 COIL ON PLUG (COP) #6
151–3 A8
C1072 COIL ON PLUG (COP) #7
151–3 A7
C1073 COIL ON PLUG (COP) #8
151–3 A6
1024 LG/WH
1026 PK/WH
1028 WH/PK
1030 DG/VT
1021 LG/YE
1025 OG/YE
1027 PK/LB
1029 WH/RD
C101F
C101M
151–2 F8
1142 WH/RD
1141 YE/BK
(NOT USED)
C1043F
C1043M
C1027
POWERTRAIN CONTROL MODULE (PCM)
SOLID STATE
26
104
52
53
82
27
102
1
78
79