C1313

12B637

Y209
Fuel injector 8
(9F593)

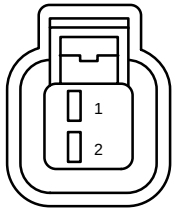

F02069

Pin	Circuit	Circuit function
1	562 (LB)	Fuel injector 8, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1317

9D930

P168
Valve cover assembly, left



Pin	Circuit	Circuit function
A	110 (BN)	glow plug 8, Power
B	110 (BN)	glow plug 6, Power
C	562 (LB)	Fuel injector 8, control
D	560 (LG/OG)	Fuel injector 6, control
E	878 (PK/YE)	Fuel injectors, Power
F	558 (BN/LB)	Fuel injector 4, control
G	556 (WH)	Fuel injector 2, control
H	110 (BN)	glow plug 4, Power
J	110 (BN)	glow plug 2, Power

C1318

9D930

P169
Valve cover assembly, right



Pin	Circuit	Circuit function
A	110 (BN)	glow plug 1, Power
B	110 (BN)	glow plug 3, Power
C	555 (TN)	Fuel injector 1, control
D	557 (BN/YE)	Fuel injector 3, control
E	1087 (OG)	Fuel injectors, Power
F	559 (TN/BK)	Fuel injector 5, control
G	561 (TN/RD)	Fuel injector 7, control
H	110 (BN)	glow plug 5, Power
J	110 (BN)	glow plug 7, Power

C2008

14401

Y215
Brake shift interlock

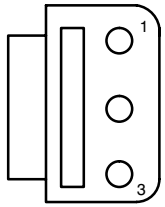

F03080

Pin	Circuit	Circuit function
1	298 (BK/OG)	Voltage in Run (overload protected)
2	57 (BK)	Ground
3	511 (LG)	Brake pedal position switch (13480), to stoplamps