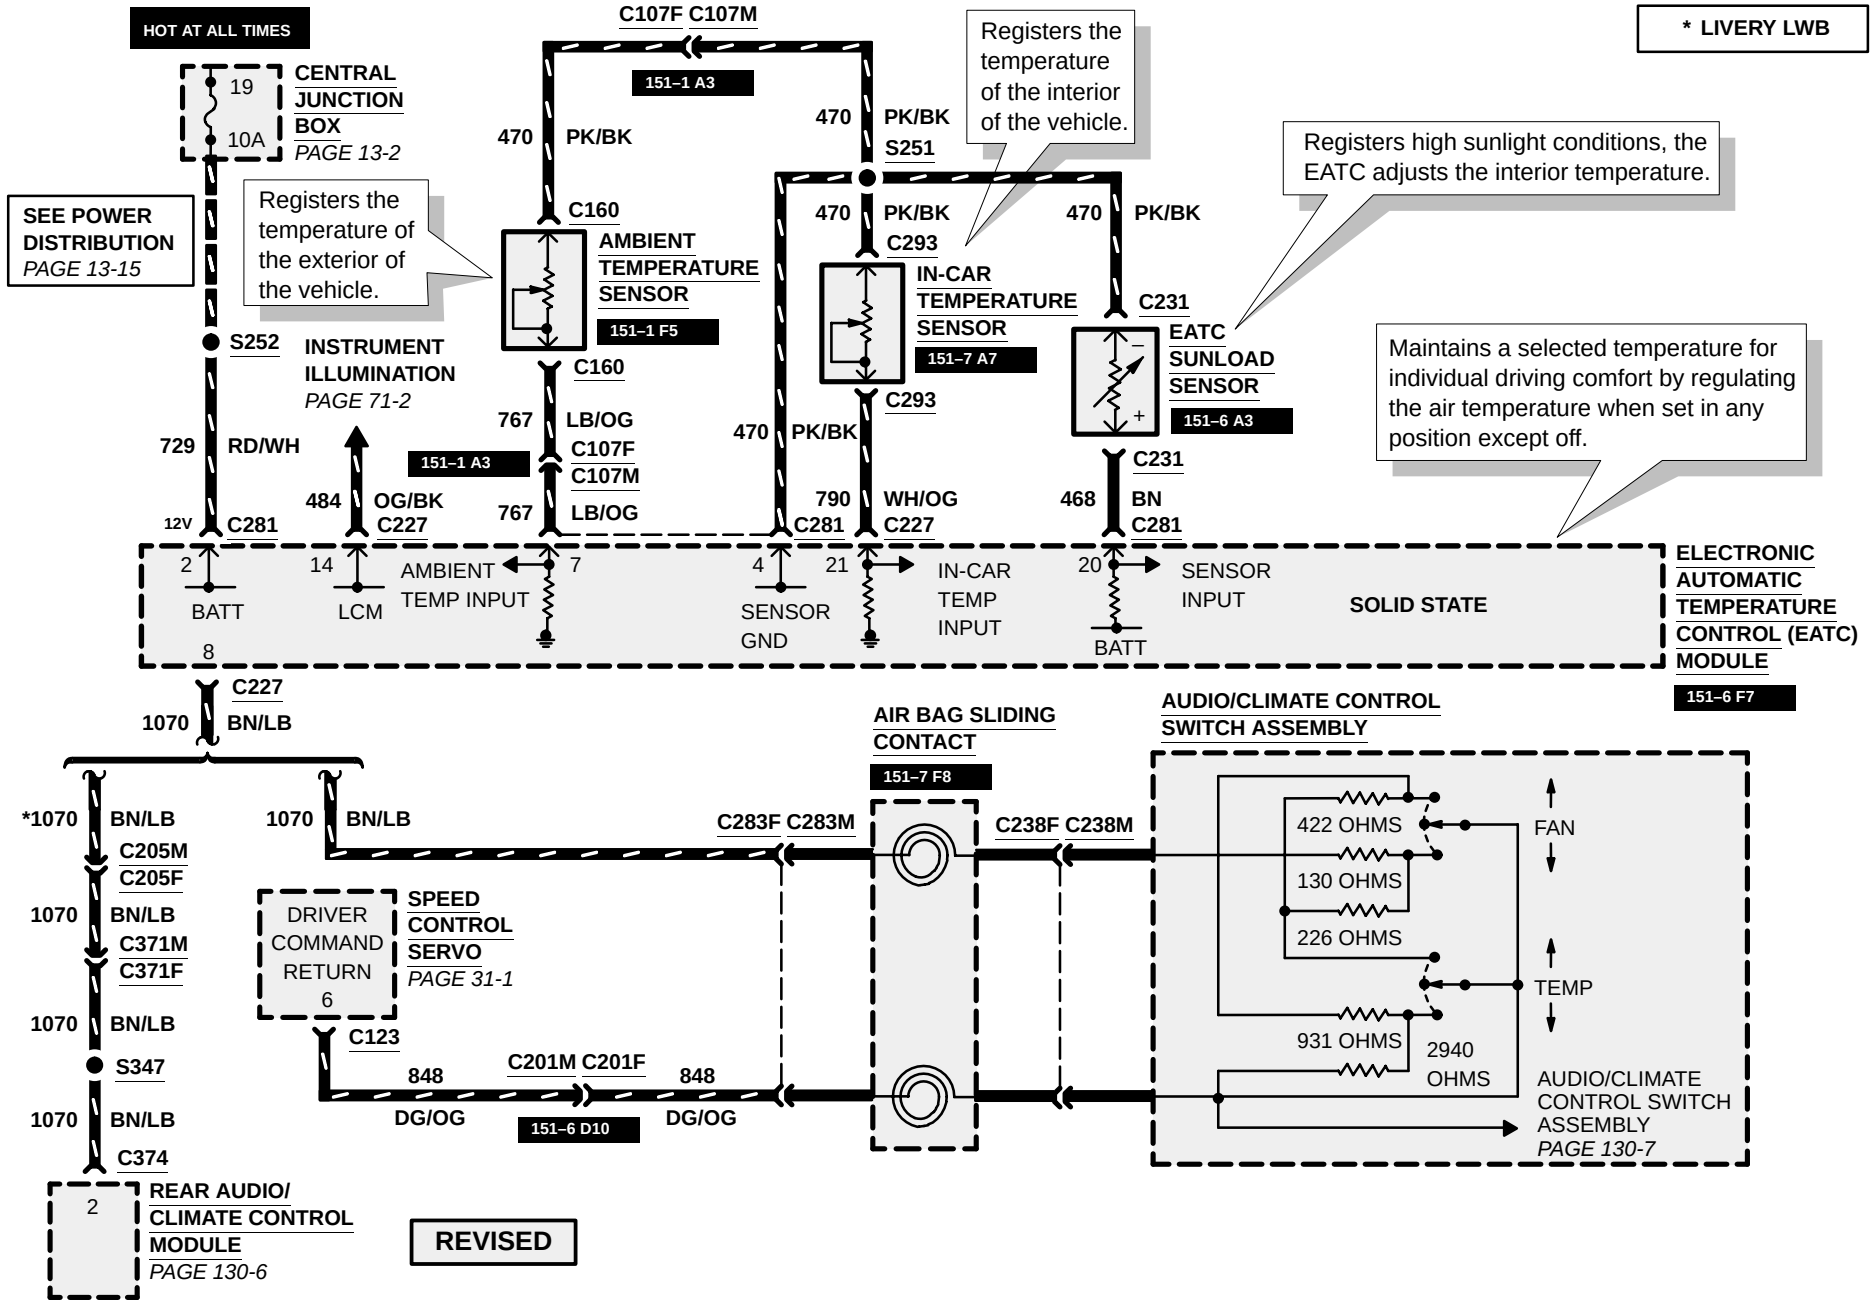
HOT AT ALL TIMES
* LIVERY LWB
C107F C107M
151–1 A3
19
10A
CENTRAL JUNCTION BOX
PAGE 13-2
SEE POWER DISTRIBUTION
PAGE 13-15
Registers the temperature of the exterior of the vehicle.
Registers the temperature of the interior of the vehicle.
Registers high sunlight conditions, the EATC adjusts the interior temperature.
Maintains a selected temperature for individual driving comfort by regulating the air temperature when set in any position except off.
470 PK/BK
C160
AMBIENT TEMPERATURE SENSOR
151–1 F5
470 PK/BK
S251
470 PK/BK
C293
IN-CAR TEMPERATURE SENSOR
151–7 A7
470 PK/BK
C231
EATC SUNLOAD SENSOR
151–6 A3
S252
INSTRUMENT ILLUMINATION
PAGE 71-2
729 RD/WH
12V
C281
484 OG/BK
C227
767 LB/OG
C160
C107F
C107M
151–1 A3
767 LB/OG
470 PK/BK
C281
790 WH/OG
C227
C293
468 BN
C231
C281
2 BATT
14 LCM
AMBIENT TEMP INPUT
7
4 SENSOR GND
21
IN-CAR TEMP INPUT
20 BATT
SENSOR INPUT
SOLID STATE
ELECTRONIC AUTOMATIC TEMPERATURE CONTROL (EATC) MODULE
151–6 F7
8
C227
1070 BN/LB
AIR BAG SLIDING CONTACT
151–7 F8
AUDIO/CLIMATE CONTROL SWITCH ASSEMBLY
*1070 BN/LB
C205M
C205F
1070 BN/LB
C371M
C371F
1070 BN/LB
S347
1070 BN/LB
C374
1070 BN/LB
C283F C283M
C238F C238M
DRIVER COMMAND RETURN
6
SPEED CONTROL SERVO
PAGE 31-1
C123
848 DG/OG
C201M C201F
151–6 D10
848 DG/OG
422 OHMS
130 OHMS
226 OHMS
931 OHMS
2940 OHMS
FAN
TEMP
AUDIO/CLIMATE CONTROL SWITCH ASSEMBLY
PAGE 130-7
2
REAR AUDIO/ CLIMATE CONTROL MODULE
PAGE 130-6
REVISED