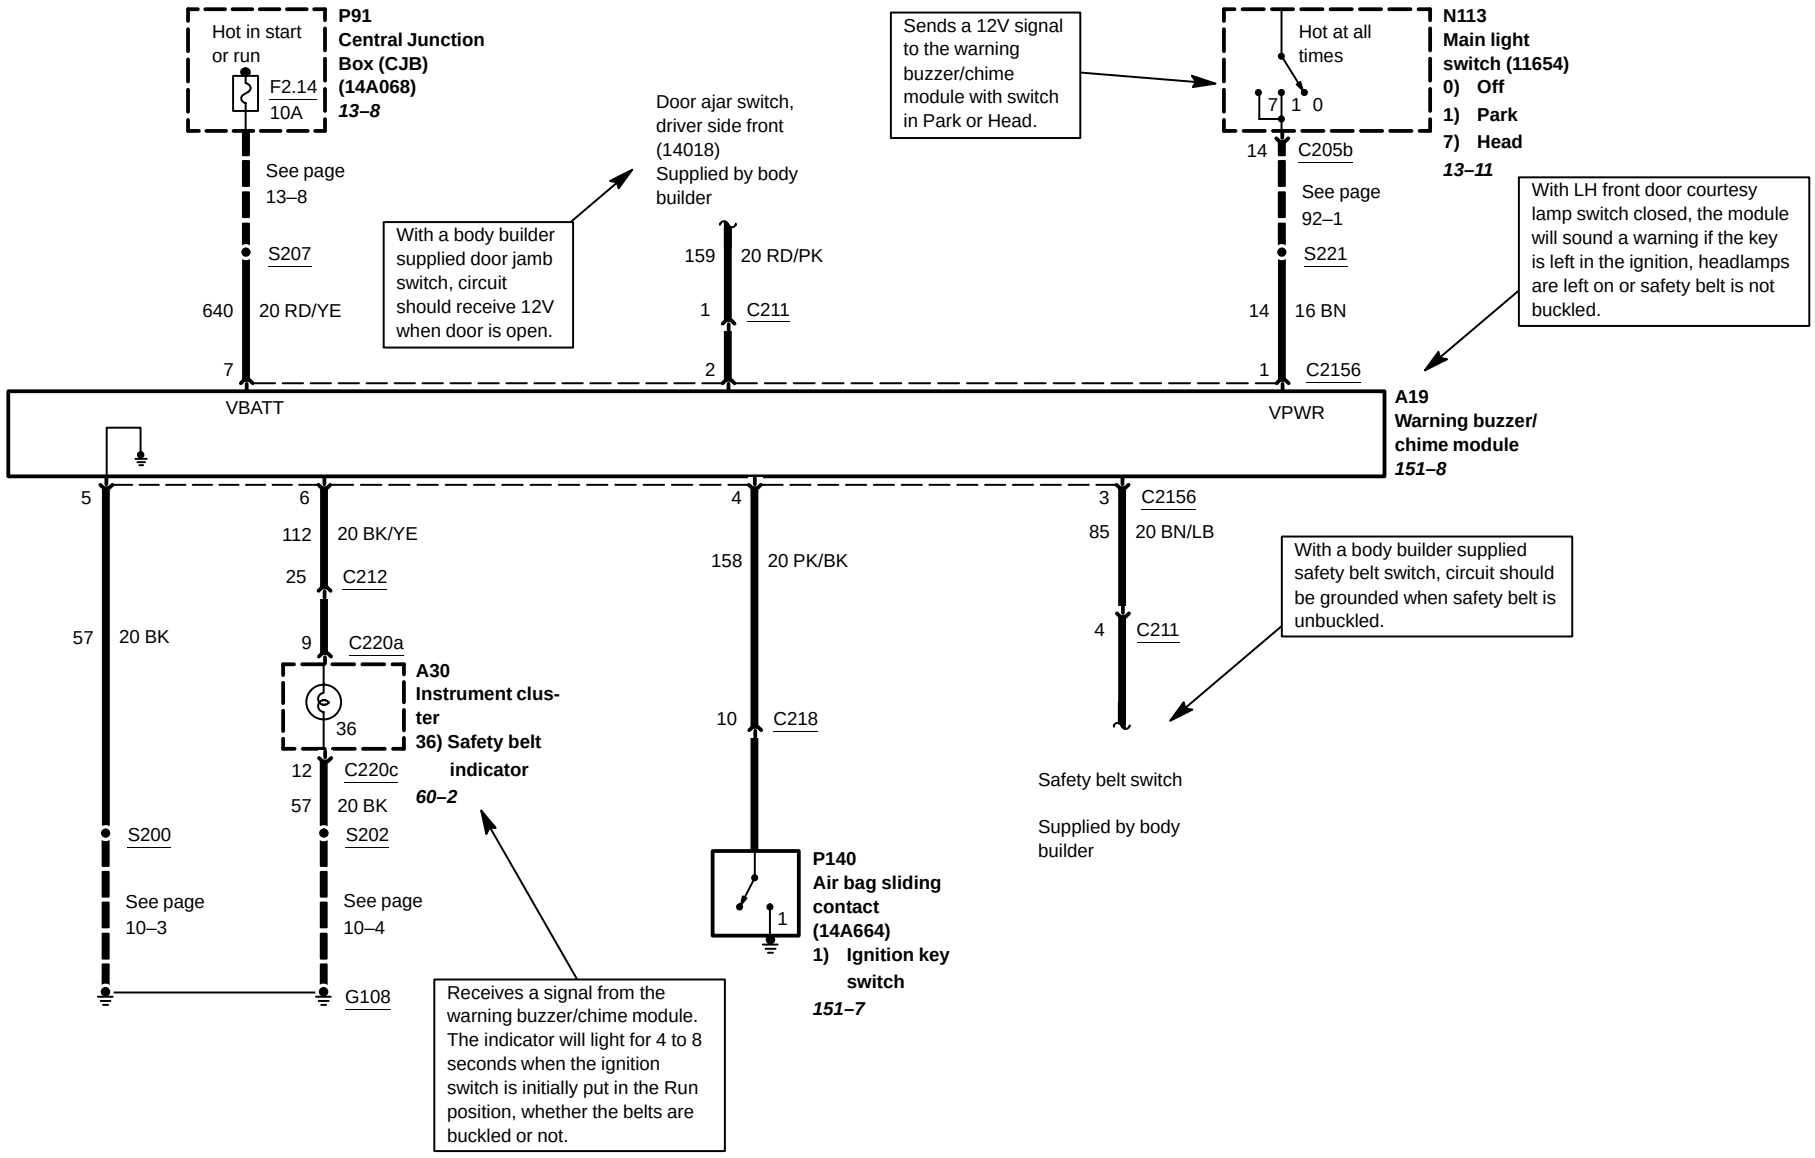
Hot in start or run
F2.14
10A
P91
Central Junction Box (CJB)
(14A068)
13–8
See page 13–8
S207
640
20 RD/YE
7
VBATT
With a body builder supplied door jamb switch, circuit should receive 12V when door is open.
Door ajar switch, driver side front (14018)
Supplied by body builder
159
20 RD/PK
1
C211
2
Sends a 12V signal to the warning buzzer/chime module with switch in Park or Head.
Hot at all times
7 1 0
N113
Main light switch (11654)
0) Off
1) Park
7) Head
13–11
14
C205b
See page 92–1
S221
14
16 BN
1
C2156
VPWR
With LH front door courtesy lamp switch closed, the module will sound a warning if the key is left in the ignition, headlamps are left on or safety belt is not buckled.
A19
Warning buzzer/ chime module
151–8
5
6
112
20 BK/YE
25
C212
57
20 BK
9
C220a
A30
Instrument cluster
36) Safety belt indicator
60–2
36
12
C220c
57
20 BK
S200
S202
See page 10–3
See page 10–4
G108
4
158
20 PK/BK
10
C218
P140
Air bag sliding contact
(14A664)
1) Ignition key switch
151–7
1
3
C2156
85
20 BN/LB
4
C211
With a body builder supplied safety belt switch, circuit should be grounded when safety belt is unbuckled.
Safety belt switch
Supplied by body builder
Receives a signal from the warning buzzer/chime module. The indicator will light for 4 to 8 seconds when the ignition switch is initially put in the Run position, whether the belts are buckled or not.