C114

12B637

Coil On Plug (COP) 4 (12029)

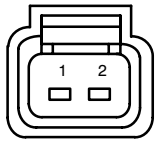

F02331

Pin	Circuit	Circuit function
1	91S-RR8 (BN/GN)	Coil On Plug (COP) 4 (12029), control
2	15-RR8 (GN/BK)	Voltage supplied in Start and Run (overload protected)

C115

12B637

Coil On Plug (COP) 5 (12029)

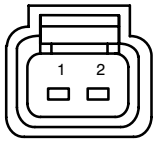

F02331

Pin	Circuit	Circuit function
1	91S-RR9 (BN/YE)	Coil On Plug (COP) 5 (12029), control
2	15-RR9 (GN/OG)	Voltage supplied in Start and Run (overload protected)

C116

12B637

Coil On Plug (COP) 6 (12029)

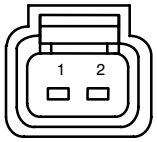

F02331

Pin	Circuit	Circuit function
1	91S-RR10 (BN/WH)	Coil On Plug (COP) 6 (12029), control
2	15-RR10 (GN/WH)	Voltage supplied in Start and Run (overload protected)

C117

12B637

Coil On Plug (COP) 7 (12029)

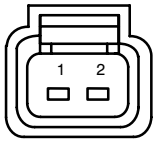

F02331

Pin	Circuit	Circuit function
1	91S-RR11 (BN)	Coil On Plug (COP) 7 (12029), control
2	15-RR11 (GN/YE)	Voltage supplied in Start and Run (overload protected)

C118

12B637

Coil On Plug (COP) 8 (12029)

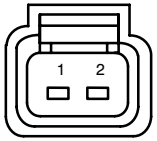

F02331

Pin	Circuit	Circuit function
1	91S-RR12 (BN/RD)	Coil On Plug (COP) 8 (12029), control
2	15-RR12 (GN/BU)	Voltage supplied in Start and Run (overload protected)

C120

12B637

Power steering valve solenoid (3783)

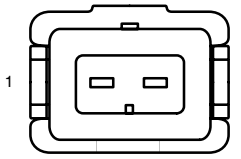

F02089

Pin	Circuit	Circuit function
1	9-CE9 (BN/GN)	Signal return
2	8-CE9 (WH/GN)	Power steering valve solenoid (3783), feed