C3049

14A005

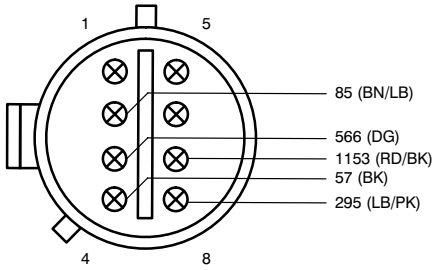

F08049

14B084

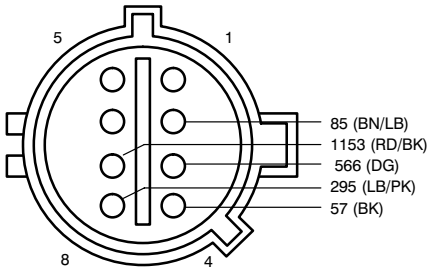

F08048

C3076

14B079

A270
Video cassette player

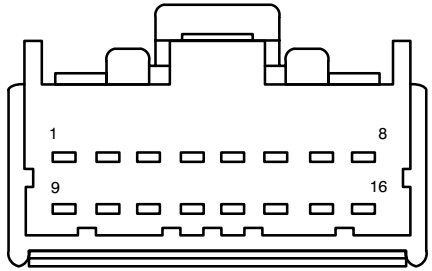

F16119

Pin	Circuit	Circuit function
1	1564 (RD)	Accessory delay
2	–	not used
3	–	not used
4	1802 (DG)	audio Switch illumination
5	1540 (DG)	VCP IR data +
6	99 (LG/BK)	Audio signal positive, Left
7	891 (RD/BK)	Audio signal positive, Right
8	47 (LB/WH)	VCP video +
9	–	not used
10	–	not used
11	–	not used
12	1541 (DB)	VCP IR data –
13	694 (BK/LG)	Ground
14	1402 (RD/WH)	Audio signal negative, Drain wire, Right
15	76 (LG/WH)	Audio signal negative, Drain wire, Left
16	48	VCP video Drain wire