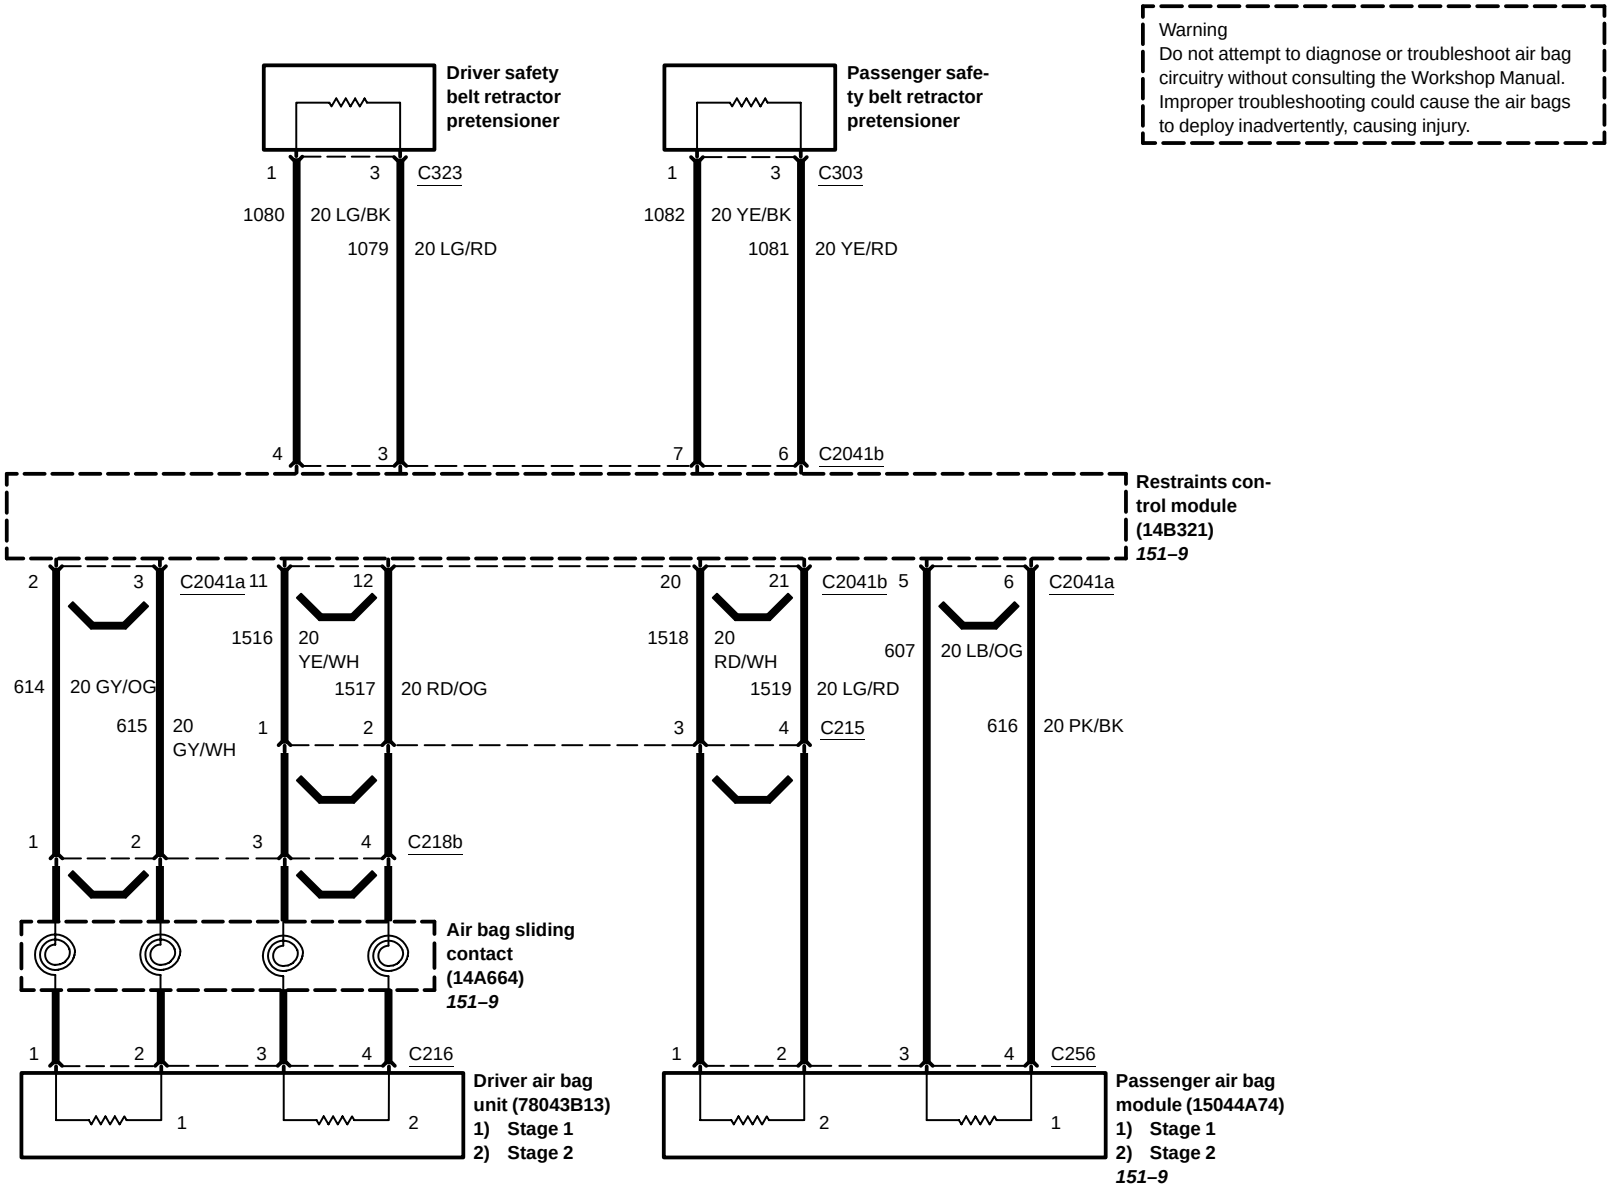
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Driver safety belt retractor pretensioner
Passenger safety belt retractor pretensioner
C323
C303
1080 20 LG/BK
1079 20 LG/RD
1082 20 YE/BK
1081 20 YE/RD
C2041b
Restraints control module (14B321) 151–9
C2041a
C2041b
C2041a
614 20 GY/OG
615 20 GY/WH
1516 20 YE/WH
1517 20 RD/OG
1518 20 RD/WH
1519 20 LG/RD
607 20 LB/OG
616 20 PK/BK
C215
C218b
Air bag sliding contact (14A664) 151–9
C216
C256
Driver air bag unit (78043B13)
1) Stage 1
2) Stage 2
Passenger air bag module (15044A74)
1) Stage 1
2) Stage 2
151–9