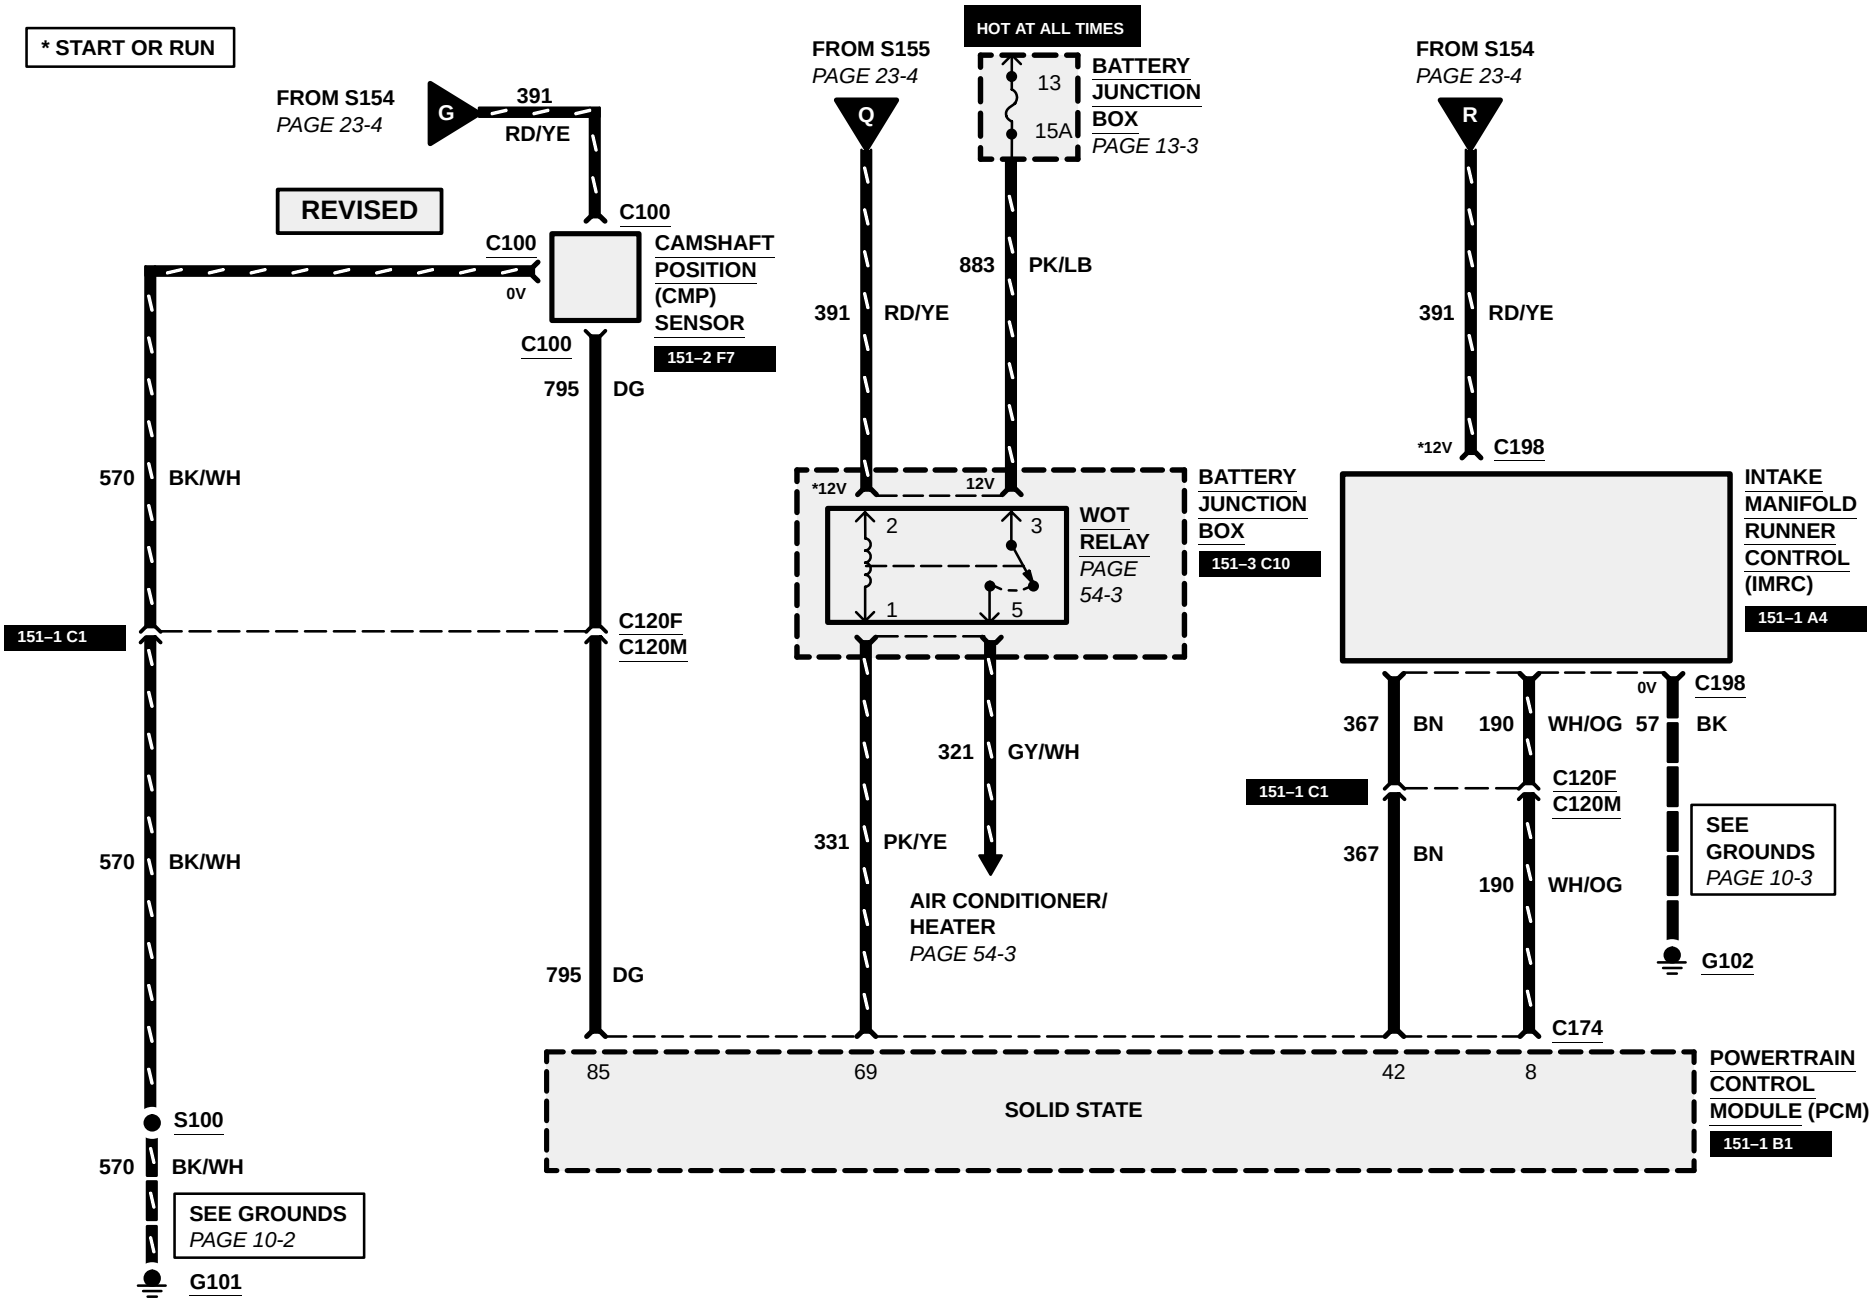
* START OR RUN
FROM S154
PAGE 23-4
G
391
RD/YE
REVISED
C100
C100
0V
CAMSHAFT POSITION (CMP) SENSOR
151–2 F7
C100
795
DG
570
BK/WH
151–1 C1
C120F
C120M
570
BK/WH
S100
570
BK/WH
SEE GROUNDS
PAGE 10-2
G101
FROM S155
PAGE 23-4
Q
391
RD/YE
HOT AT ALL TIMES
13
15A
BATTERY JUNCTION BOX
PAGE 13-3
883
PK/LB
*12V
12V
2
3
1
5
WOT RELAY
PAGE 54-3
BATTERY JUNCTION BOX
151–3 C10
321
GY/WH
331
PK/YE
AIR CONDITIONER/ HEATER
PAGE 54-3
795
DG
FROM S154
PAGE 23-4
R
391
RD/YE
*12V
C198
INTAKE MANIFOLD RUNNER CONTROL (IMRC)
151–1 A4
0V
C198
367
BN
190
WH/OG
57
BK
151–1 C1
C120F
C120M
367
BN
190
WH/OG
SEE GROUNDS
PAGE 10-3
G102
C174
85
69
42
8
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 B1