## C931

**14335**

E238
Interior/map lamps
assembly, front



F03269

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 53 (BK/LB) | Interior lamp relay, switched power, output |
| 3 | 54 (LG/YE) | Voltage supplied at all times (overload protected) |

## C932

**14334**

E239
Interior/map lamps
assembly, rear

F03269

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 53 (BK/LB) | Interior lamp relay, switched power, output |
| 3 | 54 (LG/YE) | Voltage supplied at all times (overload protected) |

## C951

**14334**

P83
Function selector
switch assembly,
rear

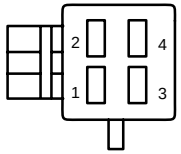

F04193

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 757 (RD/WH) | Auxiliary blower motor resistor assembly (19A706), to, Auxiliary blower motor (19805) |
| 2 | 754 (LG/WH) | Blower switch speed control, to resistor |
| 3 | 752 (YE/RD) | Blower switch speed control, to resistor |
| 4 | 751 (DB/WH) | Auxiliary blower motor resistor assembly (19A706), output |

## C970

**15A404**

E16
Roof marker lamp,
left

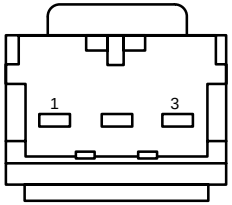

F03235

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | – | not used |
| 3 | 14 (BN) | Power, Exterior lamps |

## C971

**15A404**

E266
Roof marker lamp,
left center

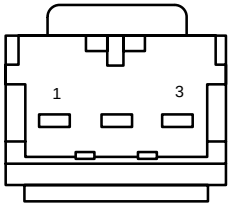

F03235

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | – | not used |
| 3 | 14 (BN) | Power, Exterior lamps |