## C220a

**14401**

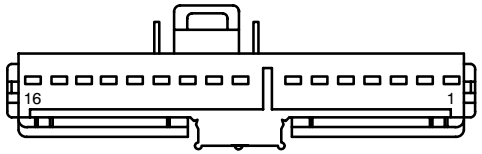


F16057

A30
Instrument cluster

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | – | not used |
| 3 | 3 (LG/WH) | Turn lamps, feed, left front |
| 4 | 12 (LG/BK) | High beam lamp, indicator, control |
| 5 | 385 (WH/RD) | Voltage supplied at all times (overload protected) |
| 6 | 343 (DB/LG) | Anti–theft, indicator, input |
| 7 | 29 (YE/WH) | Fuel pump/fuel gauge sender |
| | 27 (OG/LG) | Flexible fuel sensor module |
| 8 | 398 (BK/YE) | Ground |
| 9 | 39 (RD/WH) | Engine Coolant Temperature (ECT) sender, input |
| 10 | 640 (RD/YE) | Voltage supplied in Start and Run (overload protected) |
| 11 | 1412 (WH/PK) | Traction control override, input |
| 12 | 464 (BK/PK) | Low coolant indicator, control |
| 13 | 871 (YE) | Safety belt indicator, control |
| 14 | 627 (BK/OG) | Door ajar indicator, control |
| 15 | 658 (PK/LG) | Malfunction Indicator Lamp (MIL), control |
| 16 | 1045 (DB/WH) | Illumination dimmer, output |

## C220b

**14401**

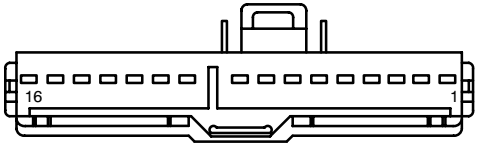


F16022

A30
Instrument cluster

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 603 (DG) | Anti–lock brake indicator, control |
| 2 | 1017 (BK/WH) | Check cap indicator lamp |
| 3 | 31 (WHRD) | Engine oil pressure indicator, control |
| 4 | 547 (LG/YE) | Brake indicator, control |
| 5 | 203 (OG/LB) | Cruise set, indicator, control |
| 6 | 640 (RD/YE) | Voltage supplied in Start and Run (overload protected) |
| 7 | – | not used |
| 8 | 11 (TN/YE) | Tachometer |
| 9 | 904 (LG/RD) | Generator/Battery indicator, control |
| 10 | 640 (RD/YE) | Voltage supplied in Start and Run (overload protected) |
| 11 | 608 (BK/YE) | Air bag indicator, control |
| 12 | 2 (WH/LB) | Turn lamps, feed, right front |
| 13 | 398 (BK/YE) | Ground |
| 14 | 911 (WH/LG) | Check Transaxle lamp |
| 15 | – | Illumination dimmer, output |
| 16 | 679 (GY/BK) | Vehicle Speed Sensor (VSS) + |