C2026a (BK)

14N104/ 14588

A11
Radio (18806)

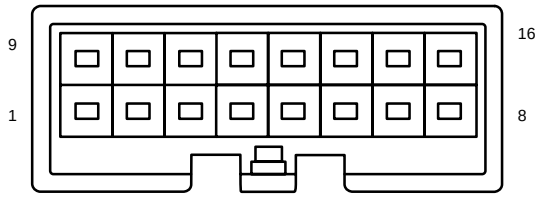

F26017

Pin	Circuit	Circuit function
1	LF01 (PK)	Illumination, feed
2	LF91 (PK/BK)	Illumination, Ground
3	–	not used
4	–	not used
5	RA46 (RD/BU)	Radio (18806), to Radio control, rear
	RA56 (RD/BU)	Speaker, right rear (18808)
6	RA47 (YE/RD)	Speaker, right rear (18808)
	RA57 (BU/BK)	Speaker, right rear (18808)
7	RA52 (BU)	Speaker, right front (18808)
	RA42 (RD)	Speaker, right front (18808)
8	RA53 (YE)	Speaker, right front (18808)
	RA43 (RD/WH)	Speaker, right front (18808)
9	RA01 (BN/WH)	Voltage supplied at all times (overload protected)
10	RA03 (OG)	Voltage in Run or Accessory (overload protected)
11	RBE1 (BK)	Ground
12	RA44 (BU/WH)	Radio (18806), to Radio control, rear
	RA54 (BU/WH)	Speaker, left rear (18808)
13	RA45 (LB)	Speaker, left rear (18808)
	RA55 (BU/YE)	Speaker, left rear (18808)
14	RA50 (GY/BU)	Speaker, left front (18808)
	RA40 (GN)	Speaker, left front (18808)
15	RA51 (YE/BU)	Speaker, left front (18808)
	RA41 (GN/RD)	Speaker, left front (18808)
16	RBE7 (BK)	Ground

C2026b (BK)

14N104

A11
Radio (18806)

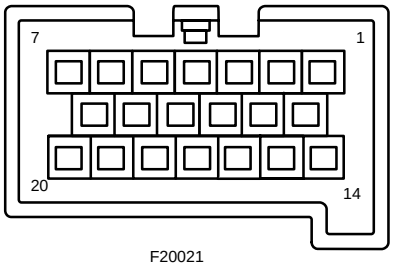

F20021

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	RB64 (YE/RD)	Radio to CD changer
	RB04 (YE/RD)	Radio to CD changer
6	RB63 (LG)	Radio to CD changer
	RB36 (LG)	Radio to CD changer
7	RB62 (VT)	Radio to CD changer
	RB35 (VT)	Radio to CD changer
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	–	not used
14	RB06 (WH/BK)	Steering wheel radio switch +
15	RB07 (WH/RD)	Steering wheel radio switch –
16	RB95	Shield
	RC95	Shield
17	RB27 (RD)	Radio to CD changer
	RC27 (RD)	Audio unit (18808) – Right –
18	RB25 (GN)	Radio to CD changer
	RC25 (GN)	Audio unit (18808) – Right +
19	RB19 (BK)	Radio (18806), to CD changer
	RC19 (BK)	Audio unit (18808) – Left +
20	RB20 (WH)	Radio (18806), to CD changer
	RC20 (WH)	Audio unit (18808) – Left –