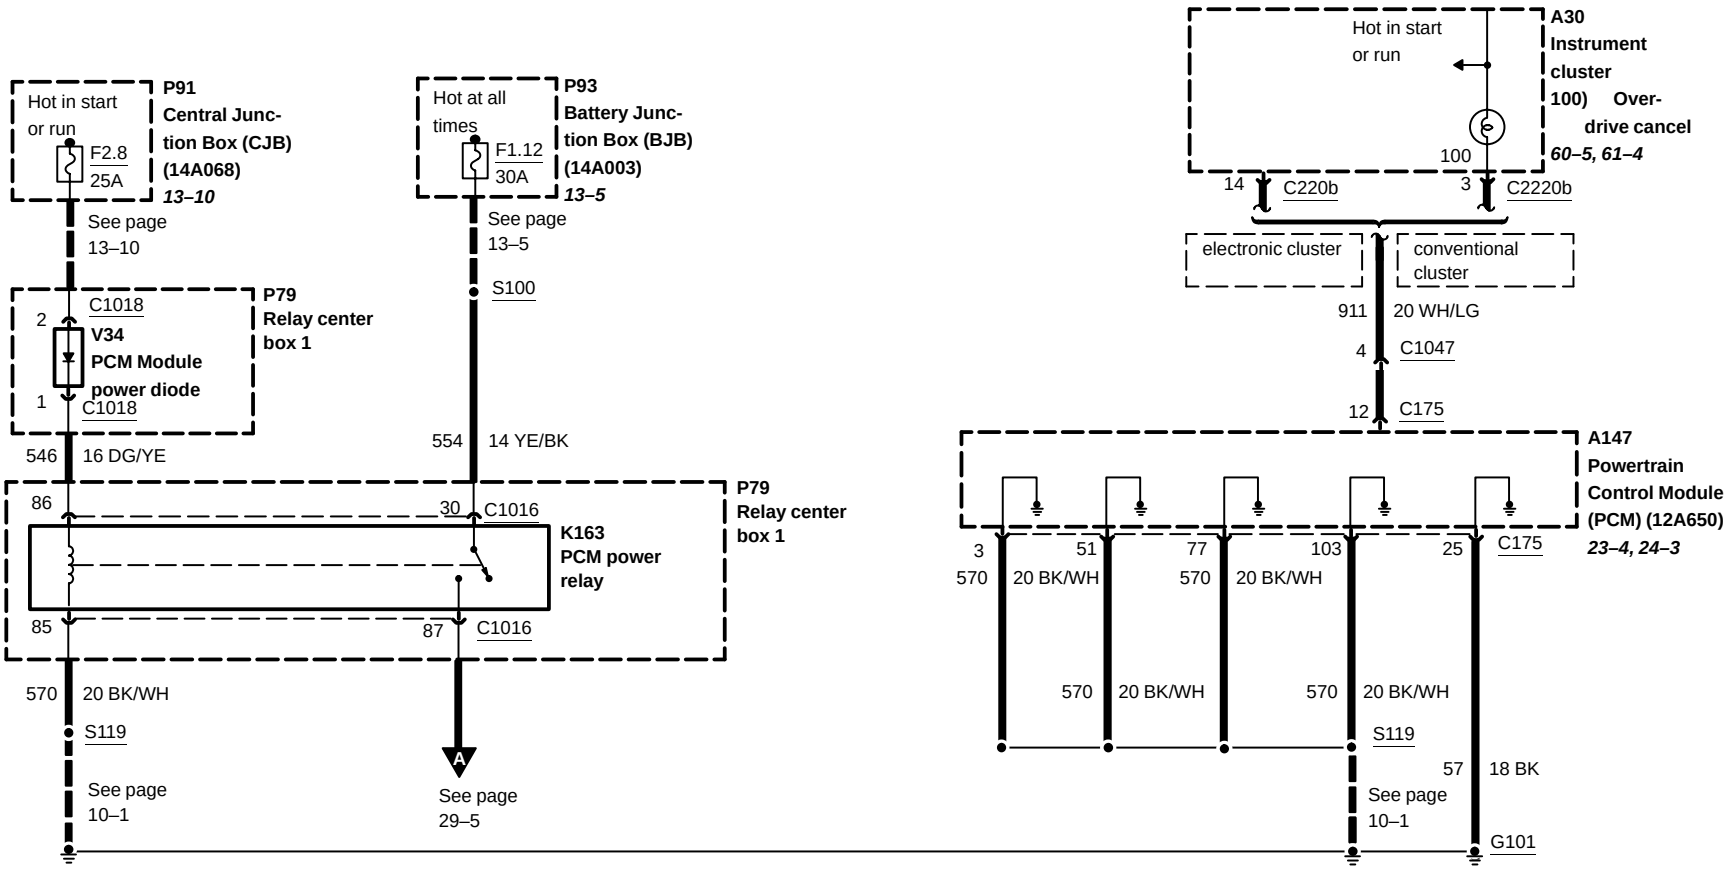
Hot in start or run
F2.8
25A
P91
Central Junction Box (CJB)
(14A068)
13–10
See page 13–10
Hot at all times
F1.12
30A
P93
Battery Junction Box (BJB)
(14A003)
13–5
See page 13–5
S100
Hot in start or run
A30
Instrument cluster
100) Overdrive cancel
60–5, 61–4
100
14
C220b
3
C2220b
electronic cluster
conventional cluster
911
20 WH/LG
4
C1047
12
C175
A147
Powertrain Control Module (PCM) (12A650)
23–4, 24–3
C175
2
C1018
V34
PCM Module power diode
1
C1018
P79
Relay center box 1
546
16 DG/YE
554
14 YE/BK
86
30
C1016
K163
PCM power relay
85
87
C1016
P79
Relay center box 1
3
570
20 BK/WH
51
77
570
20 BK/WH
103
570
20 BK/WH
25
570
20 BK/WH
S119
57
18 BK
G101
See page 10–1
See page 10–1
A
See page 29–5