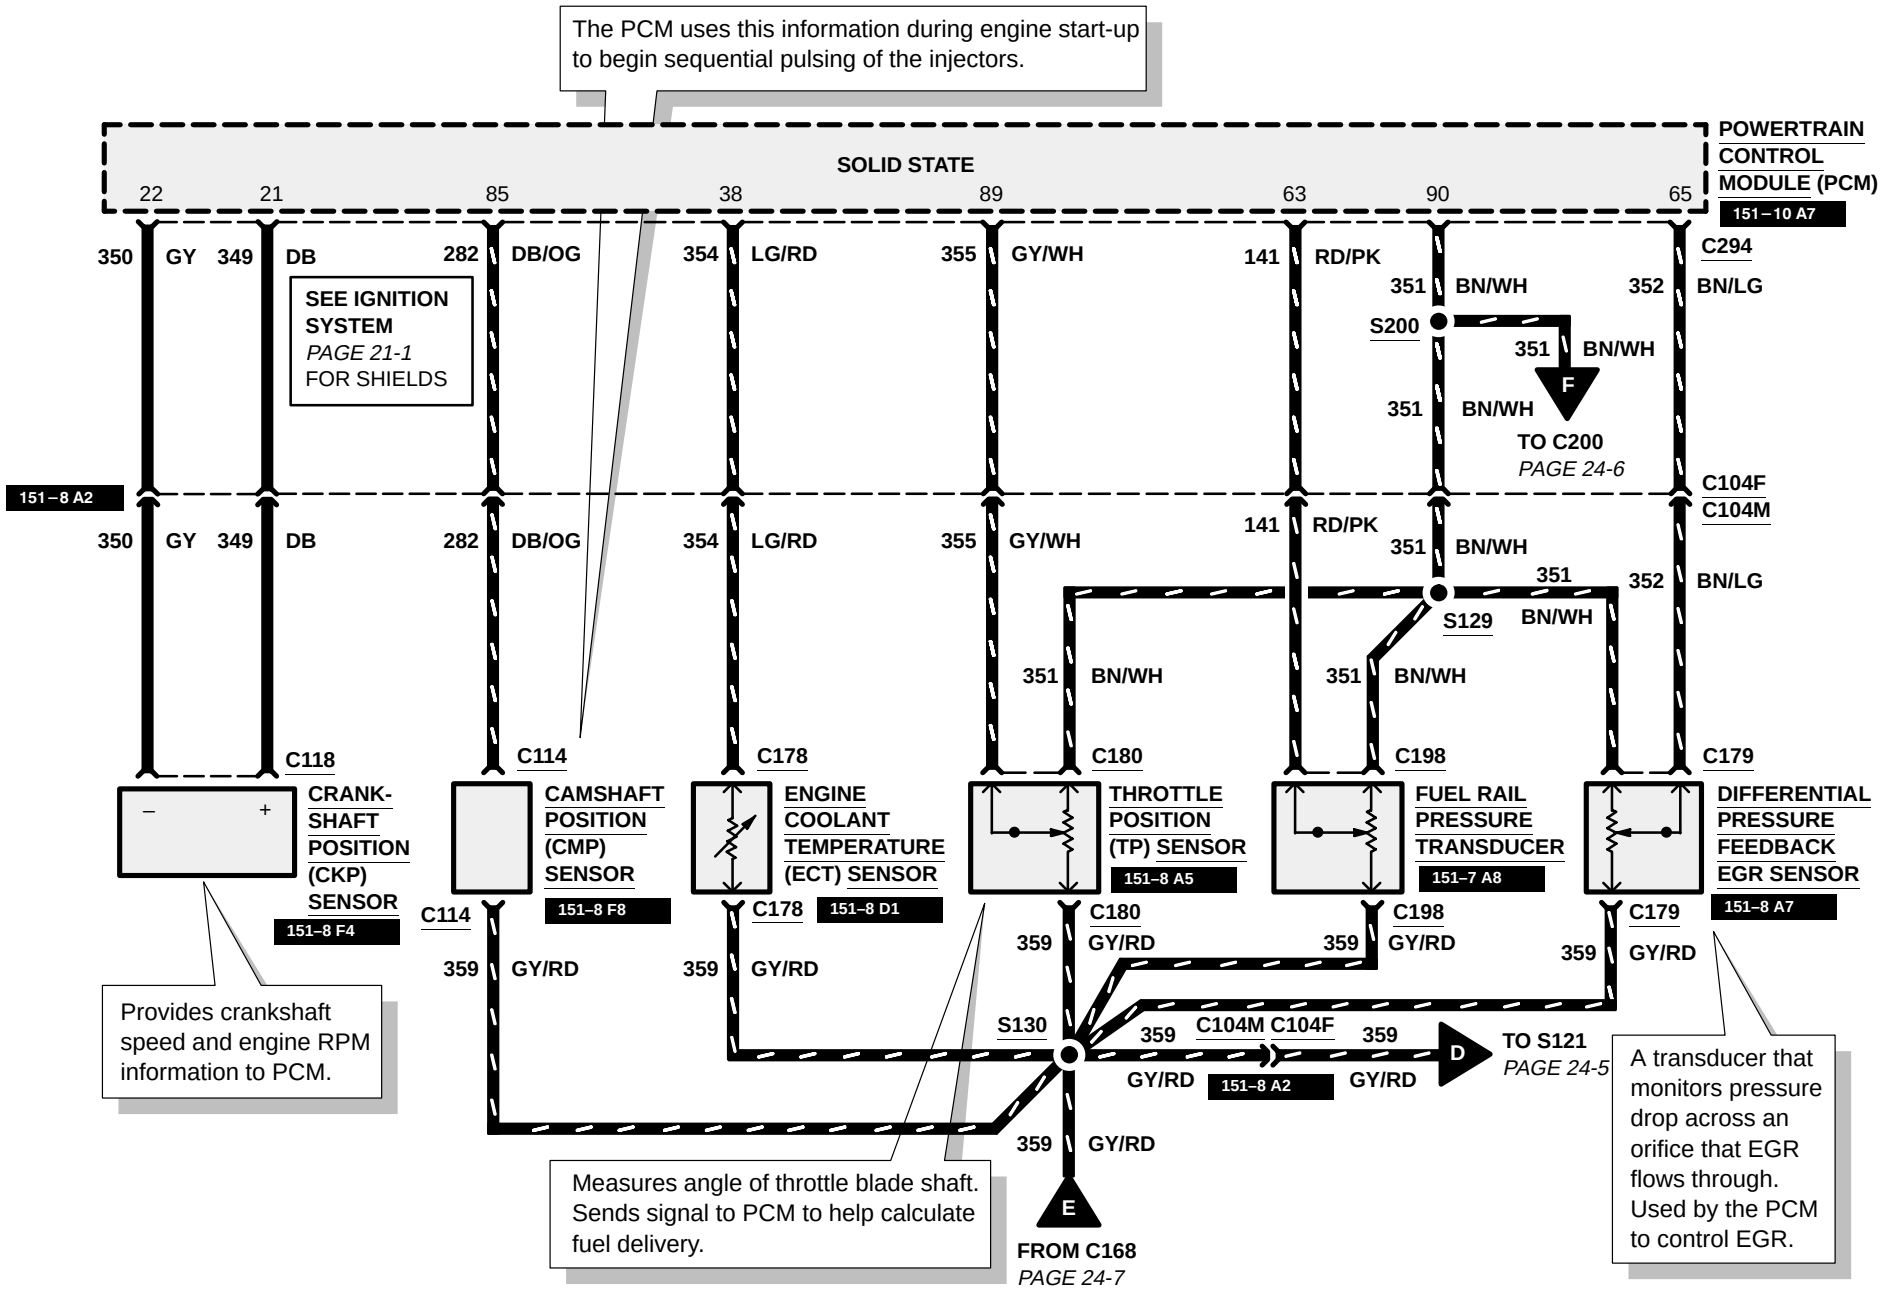
The PCM uses this information during engine start-up to begin sequential pulsing of the injectors.
SOLID STATE
22
21
85
38
89
63
90
65
POWERTRAIN CONTROL MODULE (PCM)
151 – 10 A7
C294
C104F
C104M
350 GY
349 DB
282 DB/OG
354 LG/RD
355 GY/WH
141 RD/PK
351 BN/WH
352 BN/LG
S200
F
TO C200
PAGE 24-6
SEE IGNITION SYSTEM
PAGE 21-1
FOR SHIELDS
151 – 8 A2
S129
C118
C114
C178
C180
C198
C179
CRANK-SHAFT POSITION (CKP) SENSOR
151–8 F4
CAMSHAFT POSITION (CMP) SENSOR
151–8 F8
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
151–8 D1
THROTTLE POSITION (TP) SENSOR
151–8 A5
FUEL RAIL PRESSURE TRANSDUCER
151–7 A8
DIFFERENTIAL PRESSURE FEEDBACK EGR SENSOR
151–8 A7
359 GY/RD
S130
C104M C104F
D
TO S121
PAGE 24-5
151–8 A2
E
FROM C168
PAGE 24-7
Provides crankshaft speed and engine RPM information to PCM.
Measures angle of throttle blade shaft. Sends signal to PCM to help calculate fuel delivery.
A transducer that monitors pressure drop across an orifice that EGR flows through. Used by the PCM to control EGR.