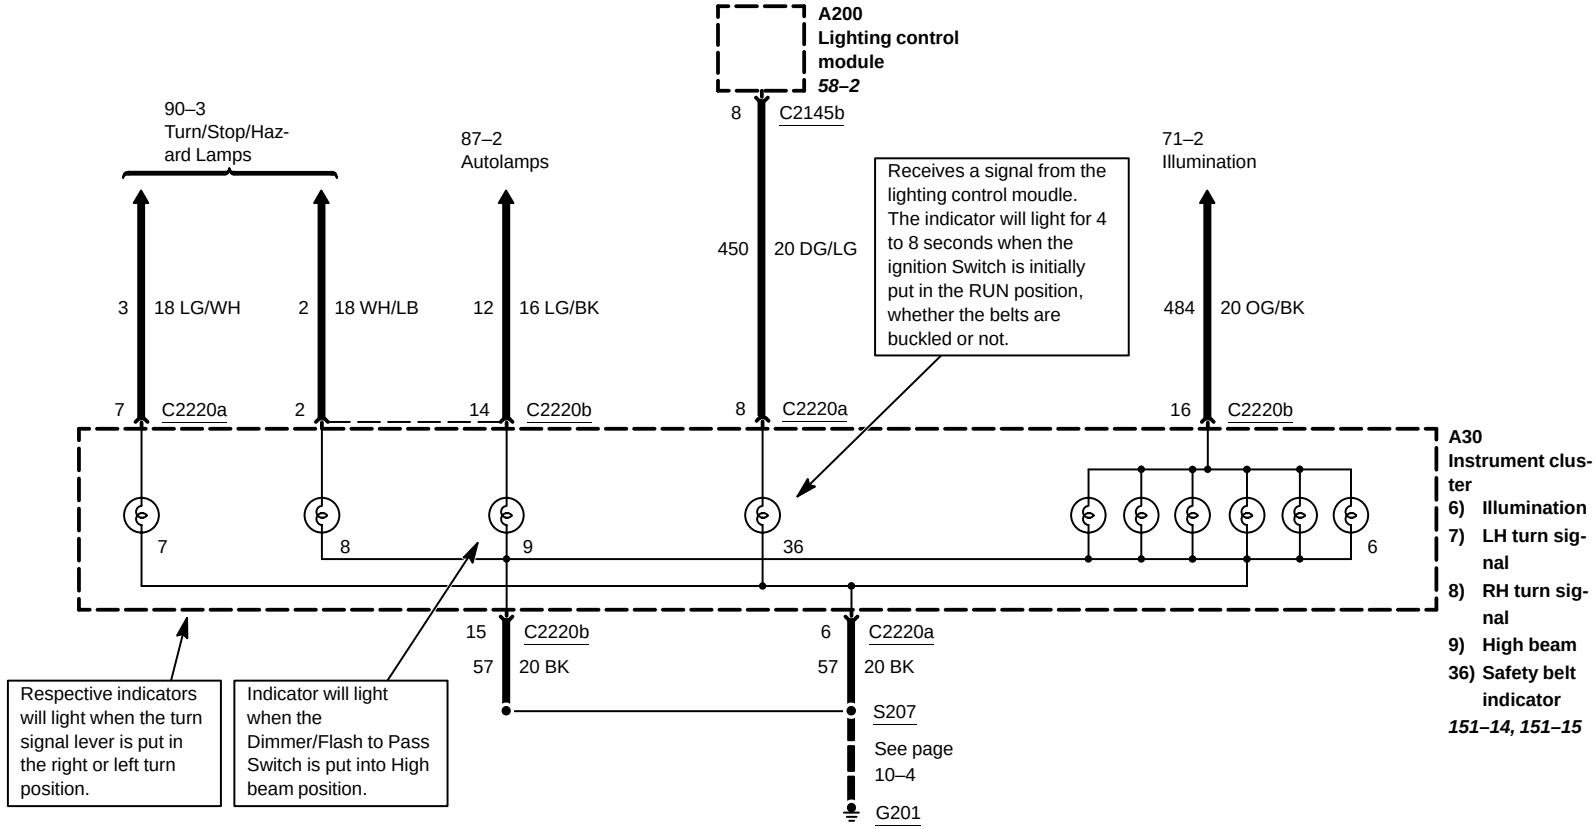
A200
Lighting control module
58–2
8
C2145b
90–3
Turn/Stop/Haz-ard Lamps
87–2
Autolamps
71–2
Illumination
Receives a signal from the lighting control moudle. The indicator will light for 4 to 8 seconds when the ignition Switch is initially put in the RUN position, whether the belts are buckled or not.
450
20 DG/LG
3
18 LG/WH
2
18 WH/LB
12
16 LG/BK
484
20 OG/BK
7
C2220a
2
14
C2220b
8
C2220a
16
C2220b
A30
Instrument clus-ter
6) Illumination
7) LH turn sig-nal
8) RH turn sig-nal
9) High beam
36) Safety belt indicator
151–14, 151–15
7
8
9
36
6
15
C2220b
57
20 BK
6
C2220a
57
20 BK
S207
See page 10–4
G201
Respective indicators will light when the turn signal lever is put in the right or left turn position.
Indicator will light when the Dimmer/Flash to Pass Switch is put into High beam position.