C504b

14A005

Master window adjust switch (14529)

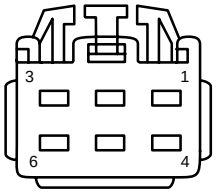

F06213

Pin	Circuit	Circuit function
1	–	not used
2	319 (YE/BK)	Window switch, feed, left rear, Down
3	320 (RD/BK)	Window switch, feed, right rear, Down
4	193 (YE/LG)	Window safety relay, switched output
5	316 (YE/LB)	Window switch, feed, left rear, Up
6	317 (GY/OG)	Window switch, feed, left rear, Down

C505

14A005

Door lock switch, driver side (14028)

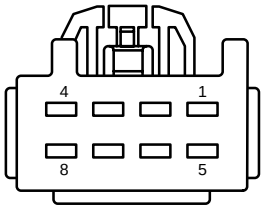

F08193

Pin	Circuit	Circuit function
1	57 (BK)	Illumination Ground
2	57 (BK)	switch common – without remote keyless entry not used – with remote keyless entry
2	–	not used
3	120 (PK/LG)	Unlock Switch Circuit – without remote keyless entry
3	1210 (BK/WH)	Unlock Switch Circuit – with remote keyless entry
4	116 (RD/BK)	Voltage supplied at all times (overload protected) – without remote keyless entry
4	57 (BK)	Ground – with remote keyless entry
5	194 (PK)	Switch illumination
6	–	not used
7	119 (PK/YE)	Lock Switch Circuit – without remote keyless entry
7	1211 (WH/RD)	Lock Switch Circuit – with remote keyless entry
8	57 (BK)	switch common – without remote keyless entry
8	–	not used – with remote keyless entry

C506

14A005

Door entry lamp, left front (13776)

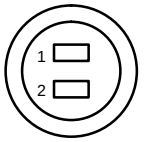

F02086

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	53 (BK/LB)	Interior lamp relay, switched power, output