CAT

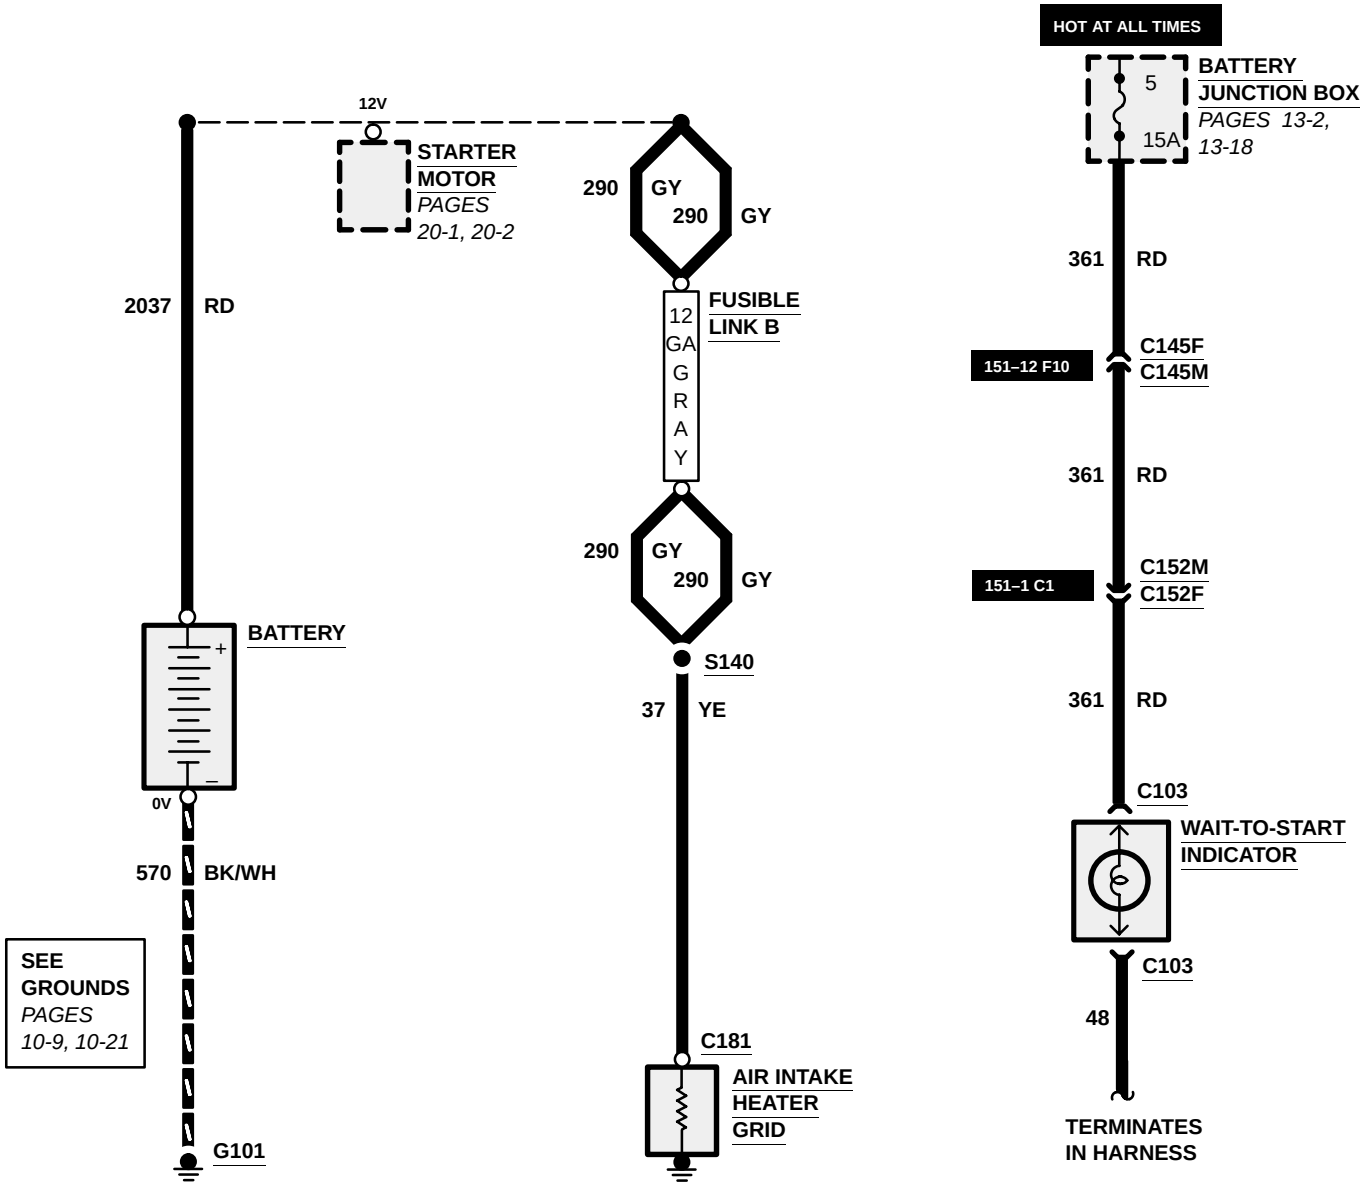
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGES 13-2, 13-18
5
15A
361 RD
C145F
C145M
151–12 F10
361 RD
C152M
C152F
151–1 C1
361 RD
C103
WAIT-TO-START INDICATOR
C103
48
TERMINATES IN HARNESS
12V
STARTER MOTOR
PAGES 20-1, 20-2
290 GY
290 GY
FUSIBLE LINK B
12 GA GRAY
290 GY
290 GY
S140
37 YE
C181
AIR INTAKE HEATER GRID
2037 RD
BATTERY
+
–
0V
570 BK/WH
SEE GROUNDS
PAGES 10-9, 10-21
G101