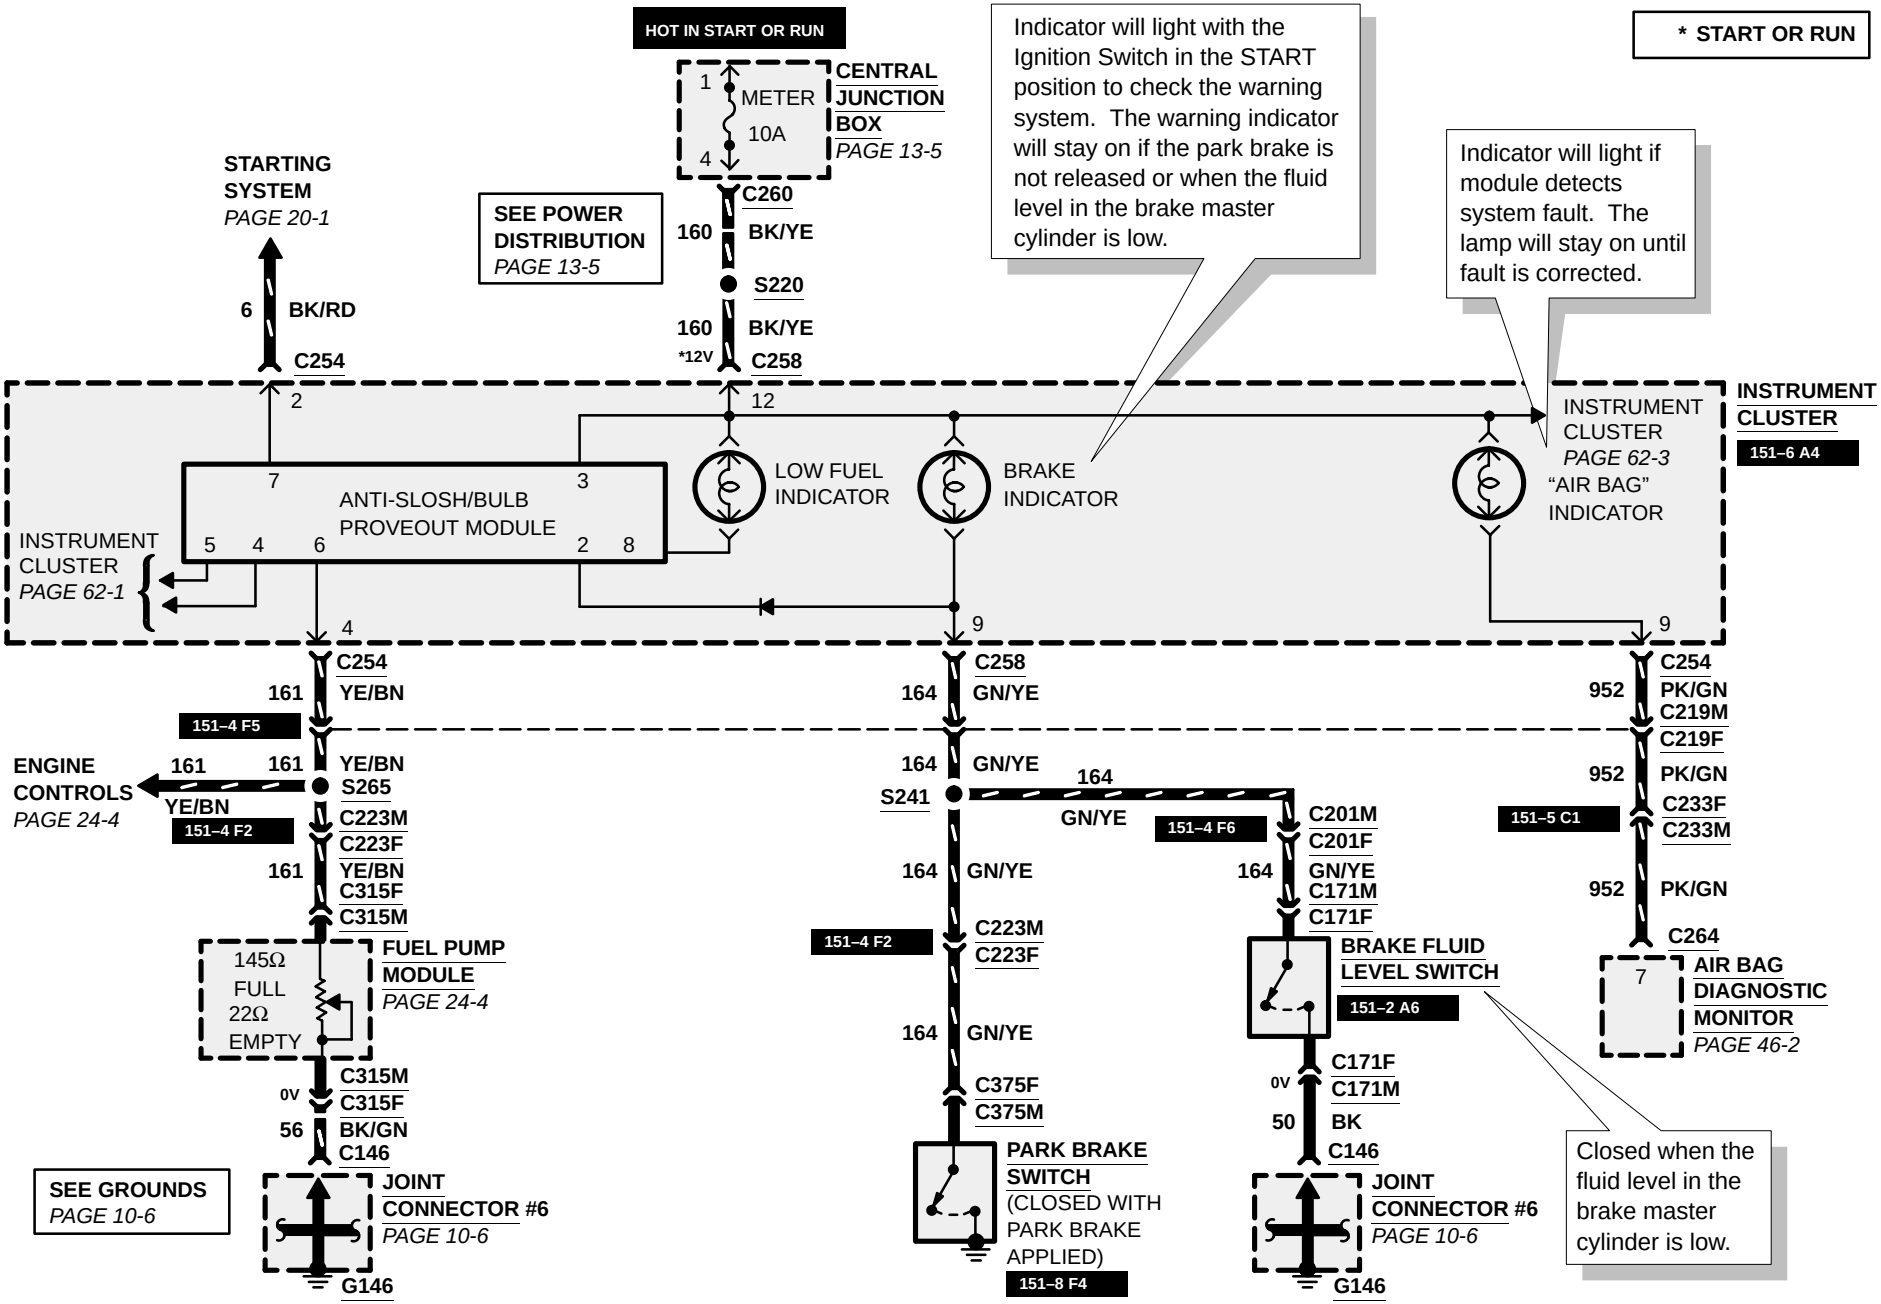
HOT IN START OR RUN
* START OR RUN
CENTRAL JUNCTION BOX
PAGE 13-5
METER
10A
STARTING SYSTEM
PAGE 20-1
SEE POWER DISTRIBUTION
PAGE 13-5
C260
160 BK/YE
S220
160 BK/YE
*12V
C258
6 BK/RD
C254
Indicator will light with the Ignition Switch in the START position to check the warning system. The warning indicator will stay on if the park brake is not released or when the fluid level in the brake master cylinder is low.
Indicator will light if module detects system fault. The lamp will stay on until fault is corrected.
INSTRUMENT CLUSTER
151–6 A4
INSTRUMENT CLUSTER
PAGE 62-3
"AIR BAG" INDICATOR
LOW FUEL INDICATOR
BRAKE INDICATOR
ANTI-SLOSH/BULB PROVEOUT MODULE
INSTRUMENT CLUSTER
PAGE 62-1
C254
161 YE/BN
151–4 F5
ENGINE CONTROLS
PAGE 24-4
161 YE/BN
S265
YE/BN
151–4 F2
C223M
C223F
161 YE/BN
C315F
C315M
145Ω FULL 22Ω EMPTY
FUEL PUMP MODULE
PAGE 24-4
C315M
0V
C315F
56 BK/GN
C146
SEE GROUNDS
PAGE 10-6
JOINT CONNECTOR #6
PAGE 10-6
G146
C258
164 GN/YE
164 GN/YE
S241
164 GN/YE
151–4 F6
C223M
C223F
164 GN/YE
C375F
C375M
PARK BRAKE SWITCH
(CLOSED WITH PARK BRAKE APPLIED)
151–8 F4
C201M
C201F
164 GN/YE
C171M
C171F
BRAKE FLUID LEVEL SWITCH
151–2 A6
C171F
0V
C171M
50 BK
C146
JOINT CONNECTOR #6
PAGE 10-6
G146
Closed when the fluid level in the brake master cylinder is low.
C254
952 PK/GN
C219M
C219F
952 PK/GN
151–5 C1
C233F
C233M
952 PK/GN
C264
AIR BAG DIAGNOSTIC MONITOR
PAGE 46-2