F7, F9, F41

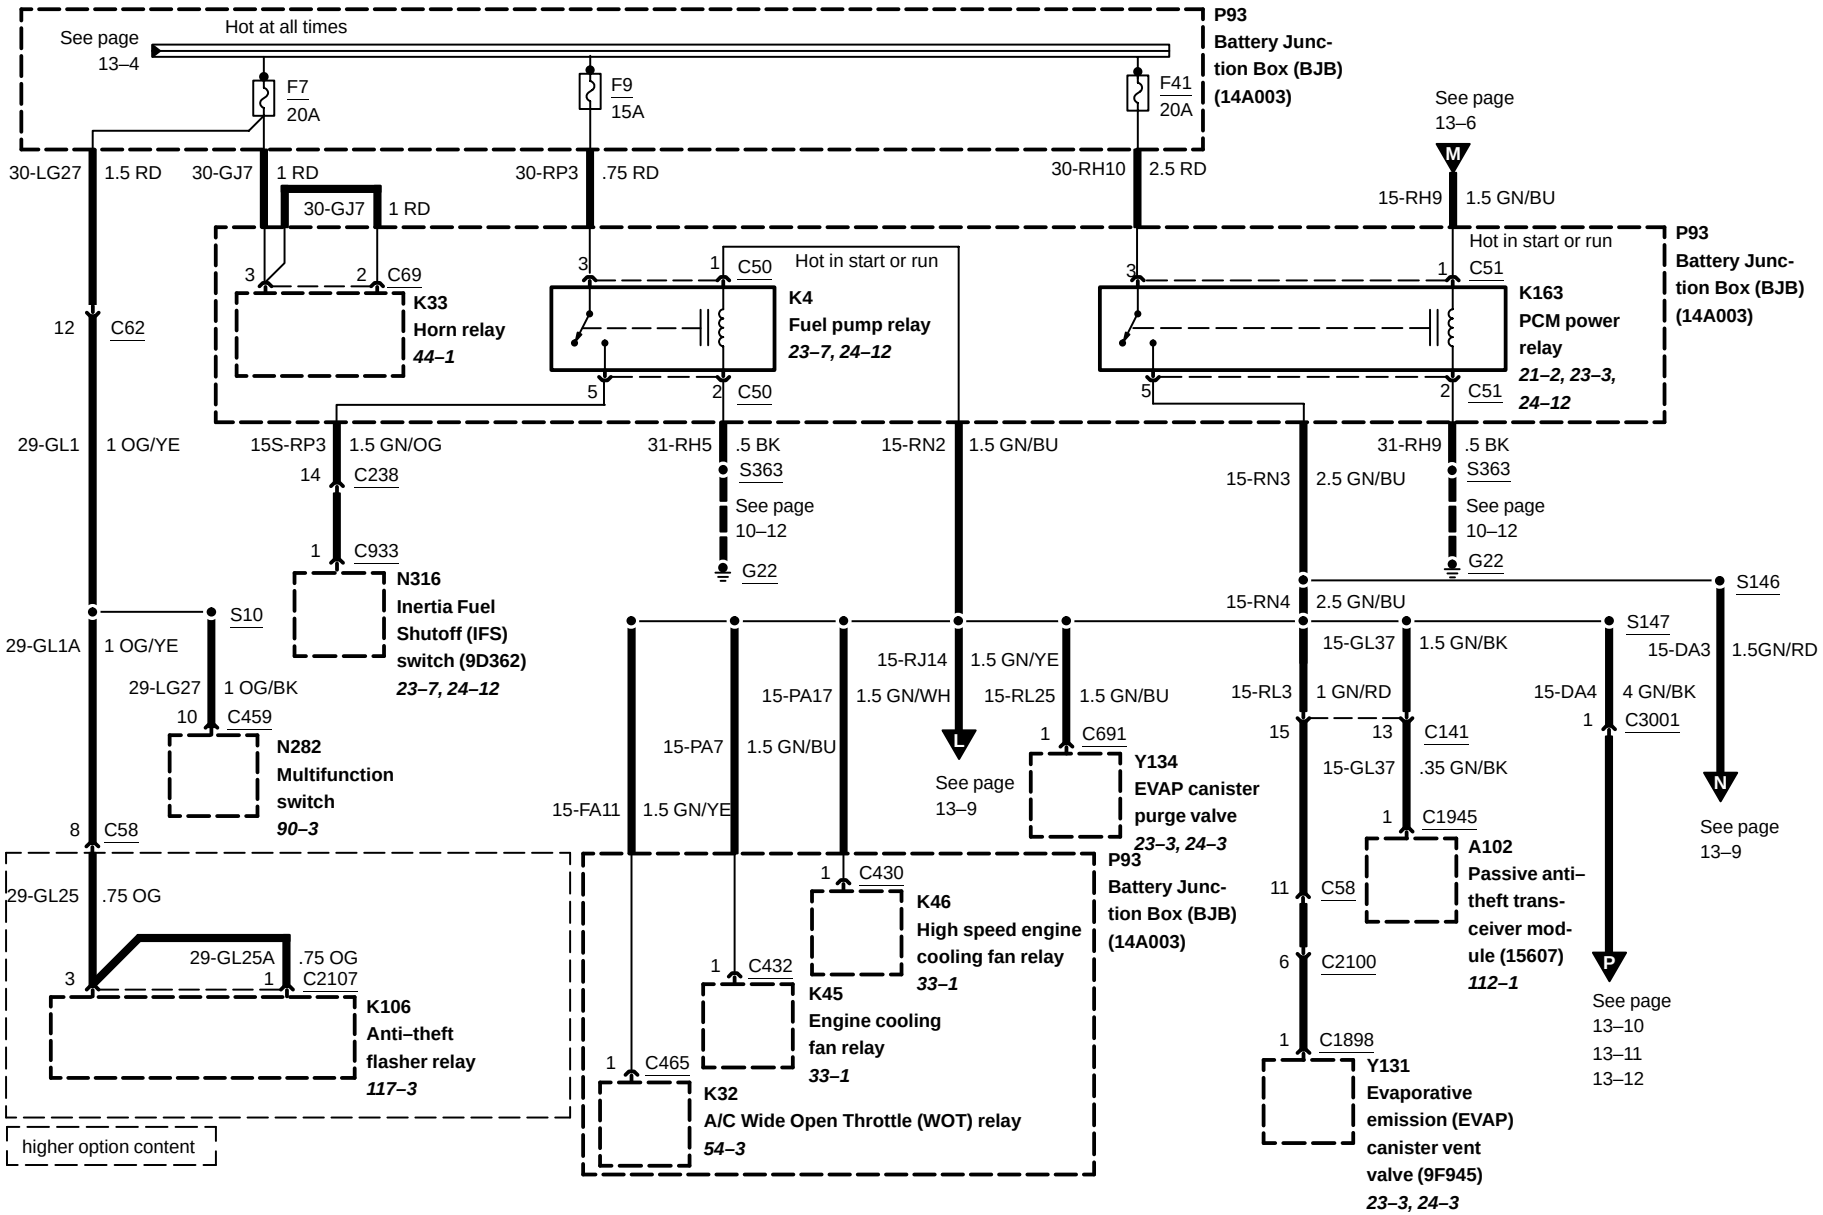
P93 Battery Junction Box (BJB) (14A003)
See page 13–4
Hot at all times
F7 20A
F9 15A
F41 20A
30-LG27 1.5 RD
30-GJ7 1 RD
30-RP3 .75 RD
30-RH10 2.5 RD
See page 13–6
15-RH9 1.5 GN/BU
Hot in start or run
K33 Horn relay 44–1
K4 Fuel pump relay 23–7, 24–12
K163 PCM power relay 21–2, 23–3, 24–12
12 C62
29-GL1 1 OG/YE
15S-RP3 1.5 GN/OG
31-RH5 .5 BK
15-RN2 1.5 GN/BU
31-RH9 .5 BK
15-RN3 2.5 GN/BU
S363
See page 10–12
G22
15-RN4 2.5 GN/BU
S146
S147
15-DA3 1.5GN/RD
See page 13–9
N316 Inertia Fuel Shutoff (IFS) switch (9D362) 23–7, 24–12
29-GL1A 1 OG/YE
29-LG27 1 OG/BK
15-GL37 1.5 GN/BK
15-DA4 4 GN/BK
N282 Multifunction switch 90–3
15-RJ14 1.5 GN/YE
15-PA17 1.5 GN/WH
15-RL25 1.5 GN/BU
15-RL3 1 GN/RD
15-PA7 1.5 GN/BU
15-FA11 1.5 GN/YE
Y134 EVAP canister purge valve 23–3, 24–3
15-GL37 .35 GN/BK
A102 Passive anti–theft transceiver module (15607) 112–1
29-GL25 .75 OG
29-GL25A .75 OG
K106 Anti–theft flasher relay 117–3
K46 High speed engine cooling fan relay 33–1
K45 Engine cooling fan relay 33–1
K32 A/C Wide Open Throttle (WOT) relay 54–3
Y131 Evaporative emission (EVAP) canister vent valve (9F945) 23–3, 24–3
See page 13–10
13–11
13–12
higher option content