SEDAN

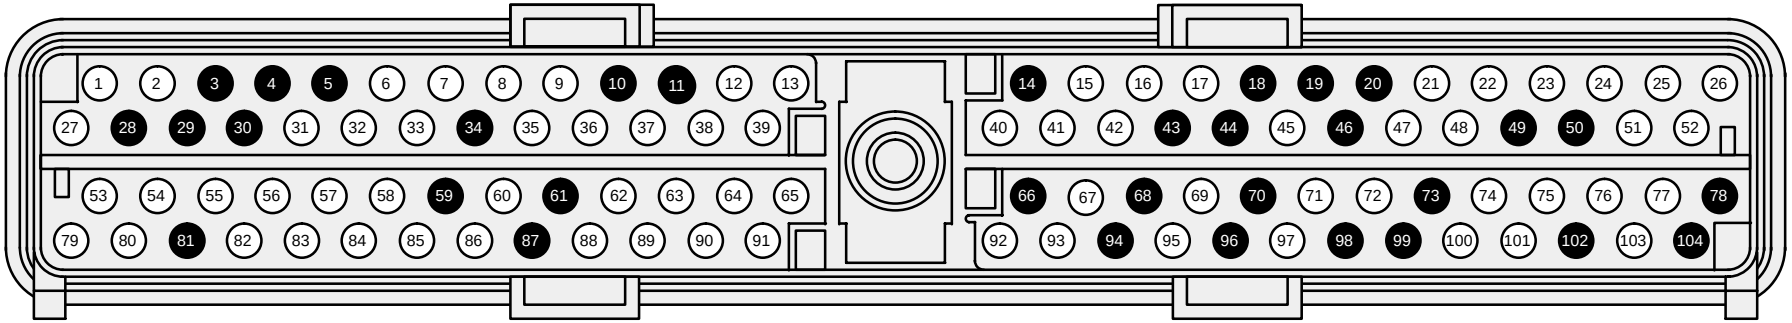

C212

POWERTRAIN CONTROL MODULE (PCM)

*** AUTOMATIC TRANSMISSION**
**** MANUAL TRANSMISSION**

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	*876 (PK/BK)	Shift Solenoid B	18	–	NOT USED
2	129 (YE/BK)	Malfunction Indicator Lamp (MIL)	19	–	NOT USED
3	–	NOT USED	20	–	NOT USED
4	–	NOT USED	21	138 (BK)	Crankshaft Position (CKP+) Sensor
5	–	NOT USED	22	141 (WH)	Crankshaft Position (CKP–) Sensor
6	*855 (BN/BU)	Transmission Range-Overdrive	23	*859 (RD)	Turbine Speed Sensor Input (–)
7	*856 (BN/GN)	Transmission Range-Low	24	999 (BK/YE)	Ground
8	114 (PK/BU)	Intake Runner Manifold (IRM) Solenoid	25	135 (RD/BU)	Shield/Case Ground
9	*857 (BN/YE)	Transmission Range-Drive	26	147 (GN/YE)	Coil Output A
10	–	NOT USED	27	*853 (LG/BU)	Shift Solenoid A
11	–	NOT USED	28	–	NOT USED
12	161 (YE/BN)	Fuel Gauge Signal	29	–	NOT USED
13	130 (PK/GN)	Flash EPROM Power Supply (FEPS)	30	–	NOT USED
14	–	NOT USED	31	134 (YE/RD)	Power Steering Pressure (PSP) Sensor
15	132 (BK/BU)	Data Link Connector (DLC) #2 Bus 1–	32	*365 (RD/GN)	Transmission Range-Reverse
16	131 (WH/BU)	Data Link Connector (DLC) #2 Bus 2+	33	57 (BU)	Vehicle Speed Sensor VSS (–)
17	866 (RD/BK)	High Fan Control Output	34	–	NOT USED

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
35	98 (GY)	Heated Oxygen Sensor (HO2S) #12 (Rear)	62	86 (BK/WH)	Fuel Tank Pressure Sensor
			63	76 (WH/VT)	Injection Pressure Sensor Input
36	87 (OG/BU)	Mass Air Flow (MAF) Sensor Return	64	*5 (RD)	Transmission Range (TR) Sensor,
37	*878 (OG)	Transmission Fluid Temperature (TFT) Sensor Input		**82 (BN/YE)	Clutch Pedal Position Switch and Neutral Switch Input
38	62 (BU/WH)	Engine Coolant Temperature (ECT) Sensor Input	65	145 (BU/YE)	Differential Feedback Pressure EGR (DPFE) Sensor
39	109 (WH/GN)	Intake Air Temperature (IAT) Sensor Input	66	–	NOT USED
			67	93 (BU/PK)	Evaporative Emission (EVAP) Canister Vent Solenoid
40	104 (BK/RD)	Fuel Pump Relay Monitor (FPM)			
41	717 (WH)	A/C On Input	68	–	NOT USED
42	113 (RD/YE)	Intake Runner Manifold (IRM) Solenoid	69	*702 (BU/BK)	Wide Open Throttle A/C Cutout (WAC)
43	–	NOT USED	70	–	NOT USED
44	–	NOT USED	71	101 (WH/RD)	Power (Start or Run)
45	719 (PK/WH)	Low Fan Control Output	72	**124 (PK)	Shift Indicator Light
46	–	NOT USED	73	–	NOT USED
47	108 (VT/RD)	EGR Vacuum Regulator (EVR)	74	105 (BN/WH)	Injector #3
48	73 (LG/RD)	Tachometer Output (TACH) Solenoid Signal	75	106 (YE)	Injector #1
			76	127 (BU)	Camshaft Position (CMP) Sensor (–)
49	–	NOT USED	77	999 (BK/YE)	Ground
50	–	NOT USED	78	–	NOT USED
51	999 (BK/YE)	Ground	79	111 (YE/GN)	Fuel Cap Off Indicator
52	146 (BN/RD)	Coil Output B	80	110 (WH/OG)	Fuel Pump Control
53	*852 (OG/GN)	Shift Solenoid C	81	–	NOT USED
54	*851 (GY/WH)	Torque Converter Clutch (TCC) Solenoid Output	82	*863 (YE/VT)	Transmission Range
			83	83 (BU/OG)	Idle Air Control (IAC) Valve
55	360 (BK/RD)	Power (Hot at All Times)	84	*858 (WH)	Turbine Speed Sensor (+)
56	94 (OG/WH)	EVAP Canister Purge Valve	85	128 (GN)	Camshaft Position (CMP) Sensor (+)
57	92 (RD)	Knock Sensor	86	133 (GN/BK)	Air Conditioning Pressure (ACP) Sensor
58	159 (WH/BK)	Vehicle Speed Sensor (VSS+)			
59	–	NOT USED	87	–	NOT USED
60	96 (GY/GN)	Heated Oxygen Sensor (HO2S) #11 (Front)	88	143 (BN/BK)	Mass Air Flow (MAF) Sensor
			89	71 (RD/WH)	Throttle Position (TP) Sensor
61	–	NOT USED	90	85 (LG/WH)	Reference Voltage

PIN	CIRCUIT	CIRCUIT FUNCTION
91	63 (LG/BK)	Signal Return
92	*351 (GN)	Brake Pedal Position (BPP) Switch
93	95 (OG/BK)	Heater #11 Front Oxygen Sensor (HTR #11)
94	–	NOT USED
95	97 (VT)	Heater #12 Rear Oxygen Sensor (HTR #12)
96	–	NOT USED
97	101 (WH/RD)	Power (Start or Run)
98	–	NOT USED
99	–	NOT USED
100	115 (GN/OG)	Injector #4
101	116 (VT/YE)	Injector #2
102	–	NOT USED
103	999 (BK/YE)	Ground
104	–	NOT USED

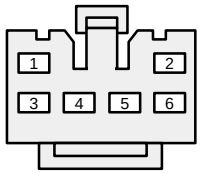

C315 (WHITE)
FUEL PUMP MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	118 (BU/BK)	Fuel Pump Driver Module
2	56 (BK/GN)	Ground
3	161 (YE/BN)	Fuel Gauge Signal
4	118 (BU/BK)	Fuel Pump Driver Module
5	119 (BU/WH)	Fuel Pump Driver Module
6	119 (BU/WH)	Fuel Pump Driver Module

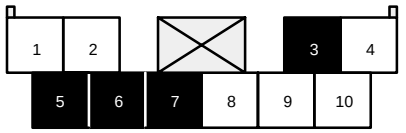

C407
FUEL PUMP DRIVER MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	119 (BU/WH)	Driver Module to Fuel Pump (Fuel Pump Power)
2	107 (BU)	Power (Inertia Fuel Shutoff)
3	–	NOT USED
4	104 (BK/RD)	Driver Module to PCM
5	–	NOT USED
6	–	NOT USED
7	–	NOT USED
8	118 (BU/BK)	Driver Module to Fuel Pump (Fuel Pump Ground)
9	53 (BK)	Ground
10	110 (WH/OG)	PCM to Driver Module (Fuel Pump Command Line)