C931

F08009

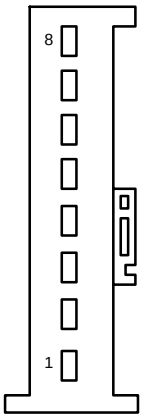

14K024

N93
Gearshift lever unit

Pin	Circuit	Circuit Function
1	15-TA33 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
	15-TA33 (GN/WH) + 15-FA39 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-TA33 (BK/WH)	Ground, switched
3	29-TA34 (OG/YE)	Voltage supplied at all times (overload protected)
4	29S-TA34 (OG/YE)	Voltage supplied at all times (overload protected), switched
5	64S-LK21 (BU/BK)	Variable D.C. voltage (not overload protected), switched
	64S-LK21 (BU/BK) + 64S-LK15 (BU/WH)	Variable D.C. voltage (not overload protected), switched
6	31-LK21 (BK)	Ground
7	15S-TA21 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
8	15-TA21 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)

C933

14014

N316
Inertia fuel shutoff (IFS) switch

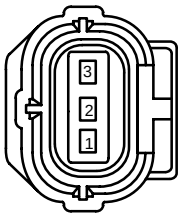

F03130

Pin	Circuit	Circuit Function
1	15S-RP3 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	–	not used
3	15S-RG2 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched

C934 (GN)

12A522

Duratec–VE

B48
Heated Oxygen Sensor (HO2S) #11

ZETEC–VCT

B208
Heated Oxygen Sensor (HO2S), front

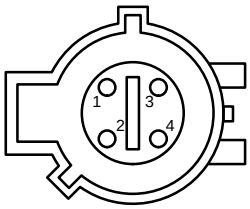

F04124

Pin	Circuit	Circuit Function
1	15-RJ14 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RJ14 (BK/YE)	Ground, switched
3	9-RJ14 (BN)	Sensor signal return (reference/ground)
4	8-RJ14 (WH)	Sensor signal