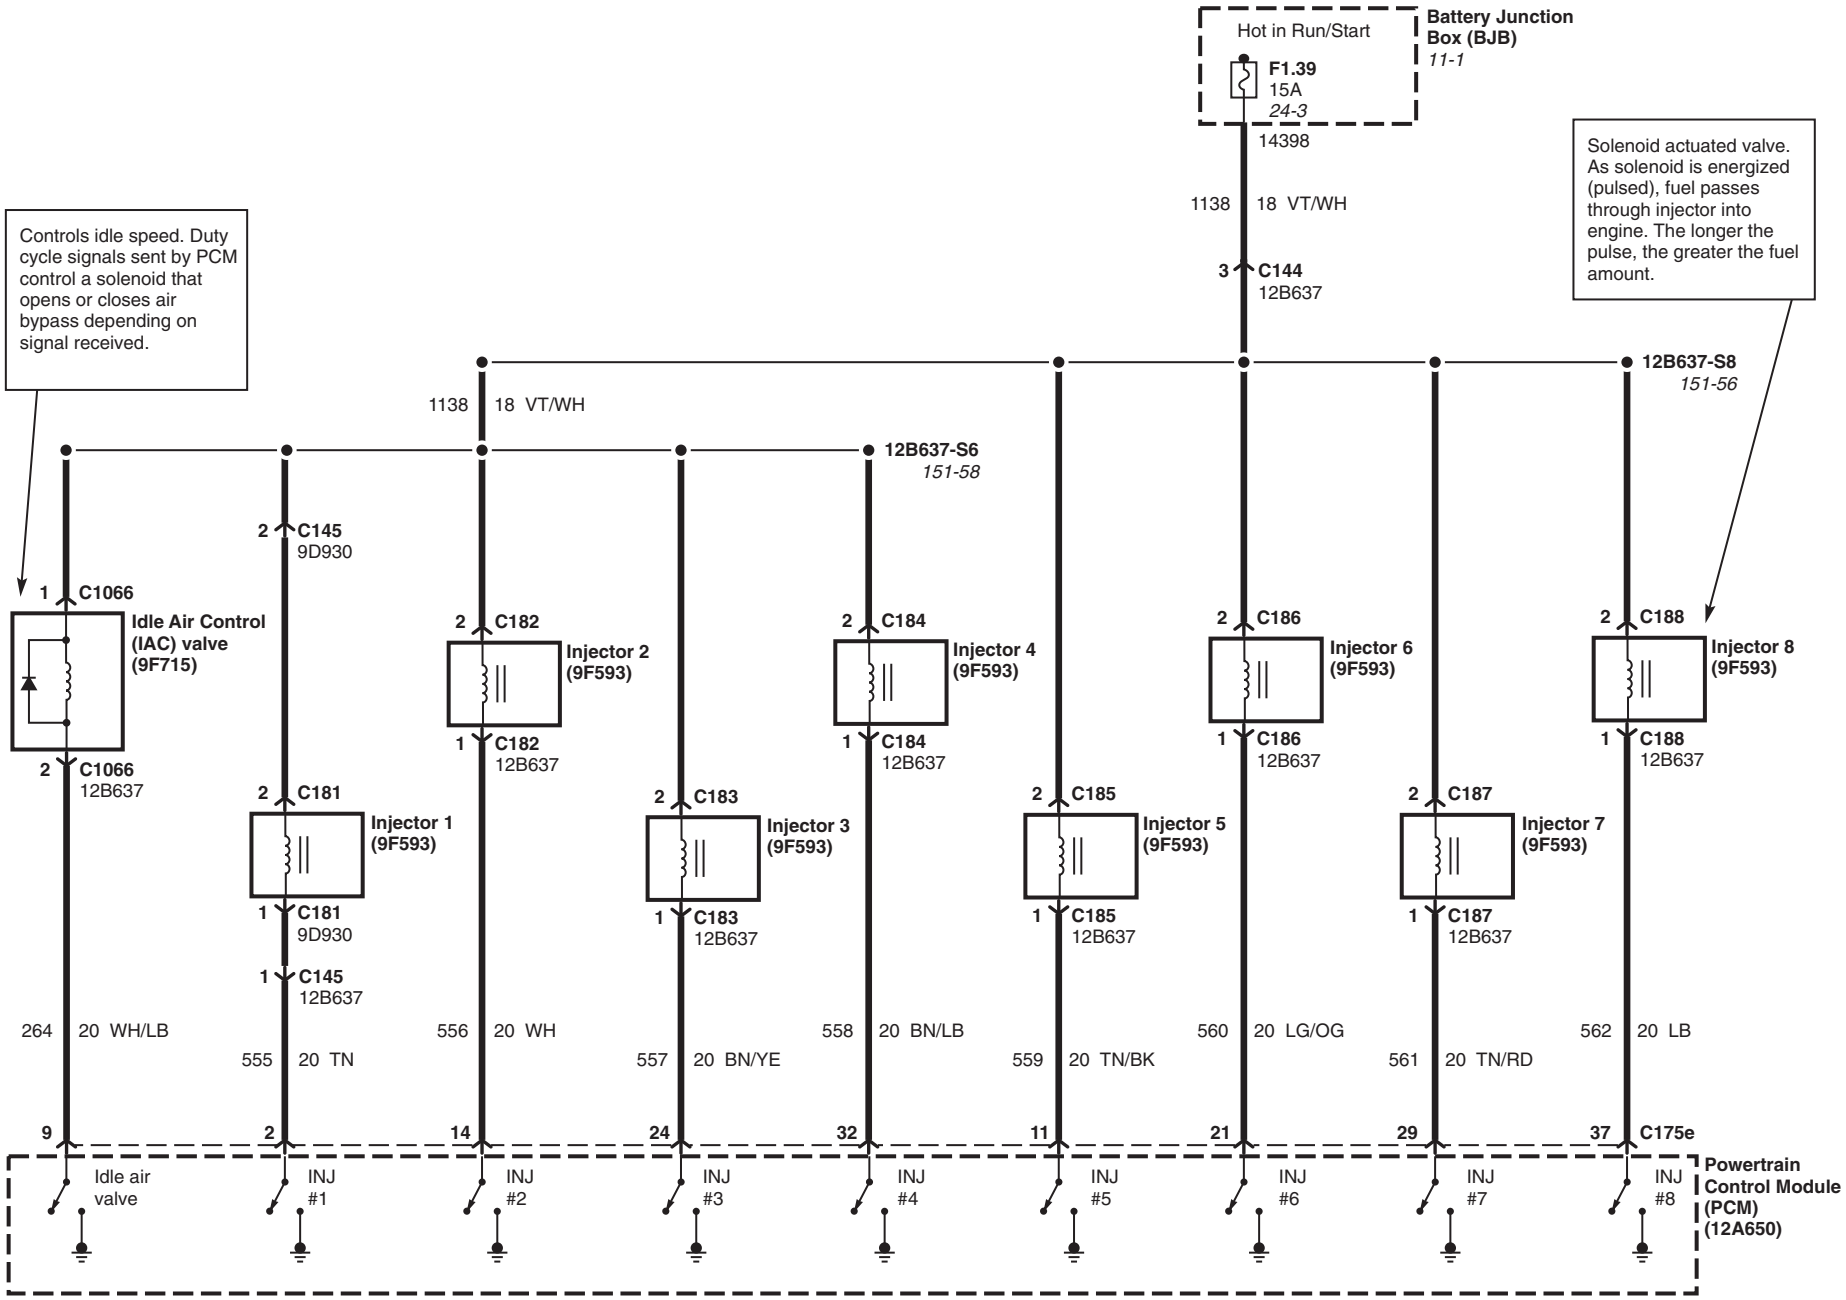
Hot in Run/Start
Battery Junction Box (BJB)
11-1
F1.39
15A
24-3
14398
1138 18 VT/WH
3 C144
12B637
Solenoid actuated valve. As solenoid is energized (pulsed), fuel passes through injector into engine. The longer the pulse, the greater the fuel amount.
Controls idle speed. Duty cycle signals sent by PCM control a solenoid that opens or closes air bypass depending on signal received.
12B637-S8
151-56
1138 18 VT/WH
12B637-S6
151-58
1 C1066
Idle Air Control (IAC) valve (9F715)
2 C1066
12B637
2 C145
9D930
1 C145
12B637
2 C181
Injector 1 (9F593)
1 C181
9D930
2 C182
Injector 2 (9F593)
1 C182
12B637
2 C183
Injector 3 (9F593)
1 C183
12B637
2 C184
Injector 4 (9F593)
1 C184
12B637
2 C185
Injector 5 (9F593)
1 C185
12B637
2 C186
Injector 6 (9F593)
1 C186
12B637
2 C187
Injector 7 (9F593)
1 C187
12B637
2 C188
Injector 8 (9F593)
1 C188
12B637
264 20 WH/LB
555 20 TN
556 20 WH
557 20 BN/YE
558 20 BN/LB
559 20 TN/BK
560 20 LG/OG
561 20 TN/RD
562 20 LB
9
2
14
24
32
11
21
29
37 C175e
Idle air valve
INJ #1
INJ #2
INJ #3
INJ #4
INJ #5
INJ #6
INJ #7
INJ #8
Powertrain Control Module (PCM) (12A650)