Telescoping Steering Column Control Section

Schematic

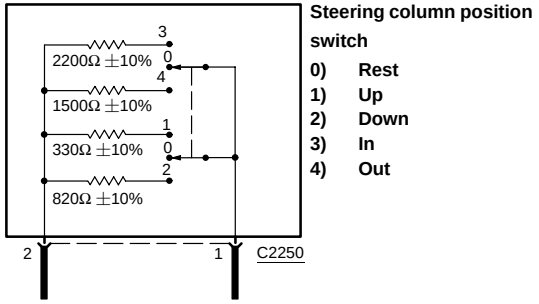

Steering column position switch

0) Rest
1) Up
2) Down
3) In
4) Out

Terminals

C2250

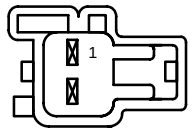

F02098

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Up/Down Circuit	2 and 1	Up	330Ω
		Down	820Ω
In/Out Circuit	2 and 1	In	2200Ω
		Out	1500Ω