-4

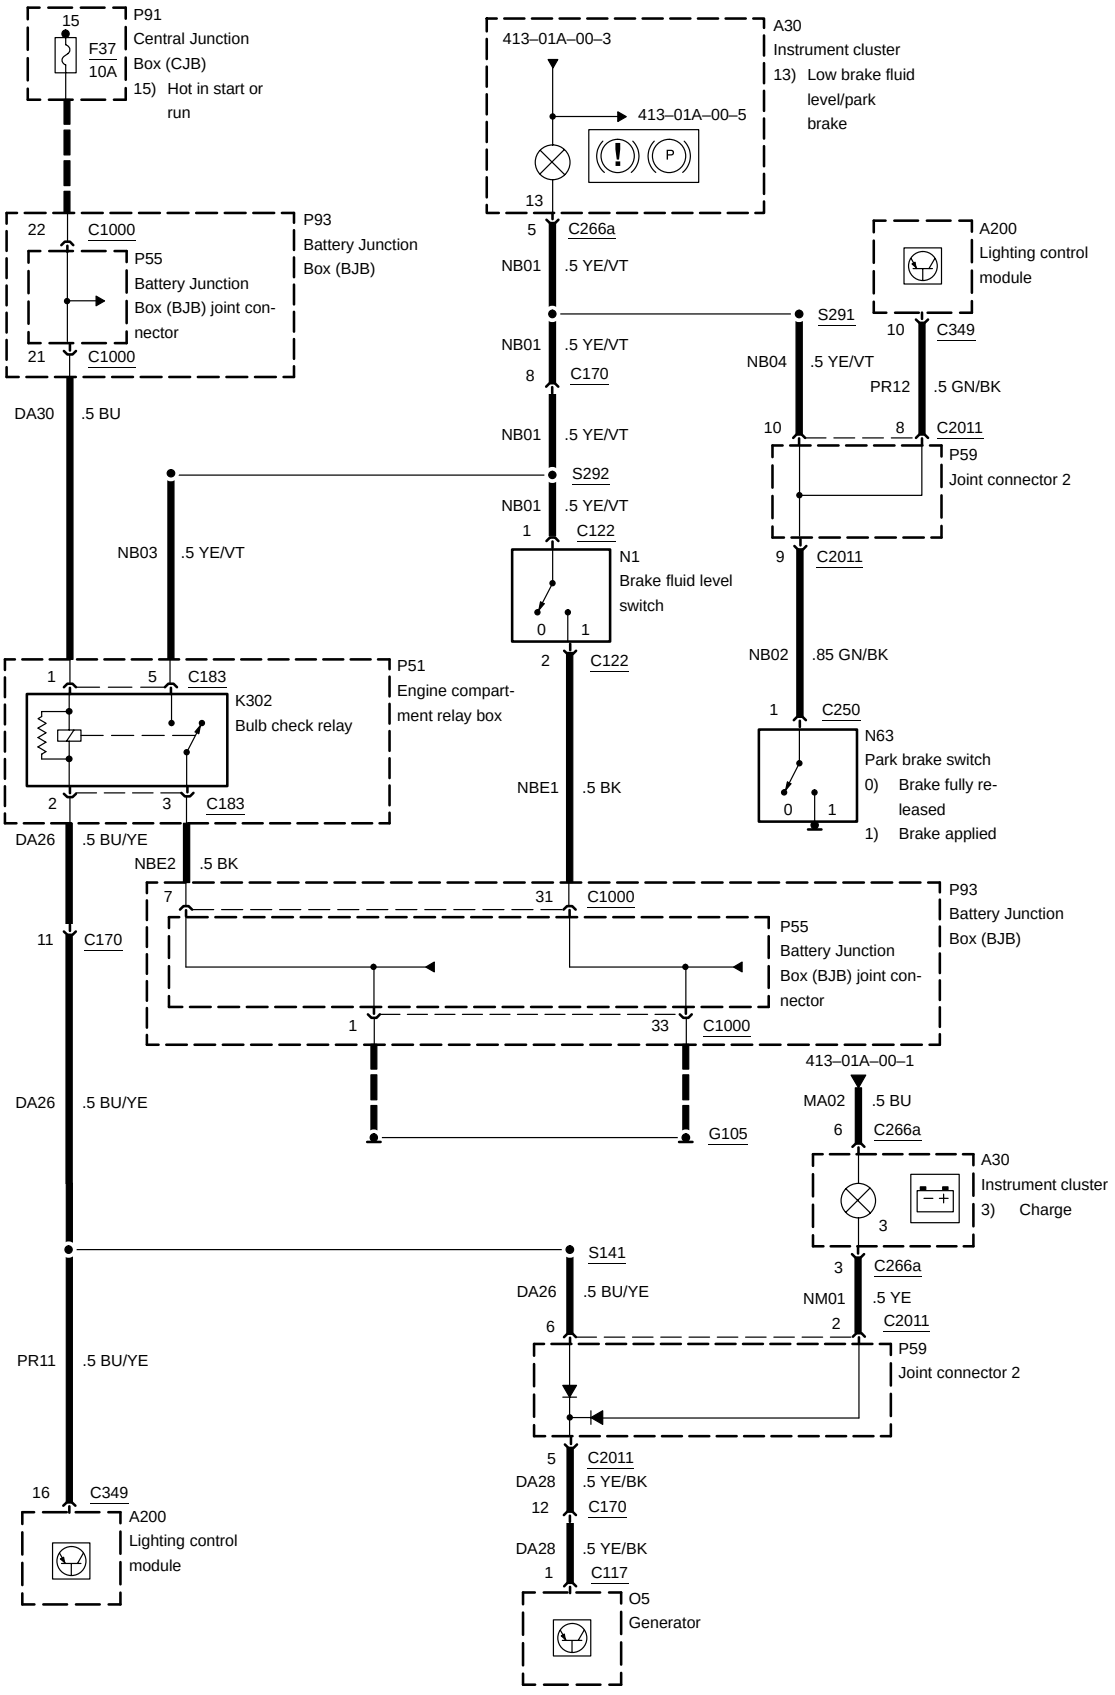
P91
Central Junction Box (CJB)
15) Hot in start or run
F37
10A
15
A30
Instrument cluster
13) Low brake fluid level/park brake
413–01A–00–3
413–01A–00–5
13
P93
Battery Junction Box (BJB)
P55
Battery Junction Box (BJB) joint connector
22 C1000
21 C1000
5 C266a
NB01 .5 YE/VT
A200
Lighting control module
S291
10 C349
NB04 .5 YE/VT
PR12 .5 GN/BK
10 8 C2011
P59
Joint connector 2
9 C2011
DA30 .5 BU
NB03 .5 YE/VT
S292
1 C122
N1
Brake fluid level switch
0 1
2 C122
NB02 .85 GN/BK
1 C250
N63
Park brake switch
0) Brake fully released
1) Brake applied
P51
Engine compartment relay box
K302
Bulb check relay
1 5 C183
2 3 C183
NBE1 .5 BK
DA26 .5 BU/YE
NBE2 .5 BK
7 31 C1000
11 C170
1 33 C1000
G105
413–01A–00–1
MA02 .5 BU
6 C266a
3
3) Charge
S141
DA26 .5 BU/YE
6
PR11 .5 BU/YE
NM01 .5 YE
2 C2011
5 C2011
DA28 .5 YE/BK
12 C170
DA28 .5 YE/BK
1 C117
O5
Generator
16 C349