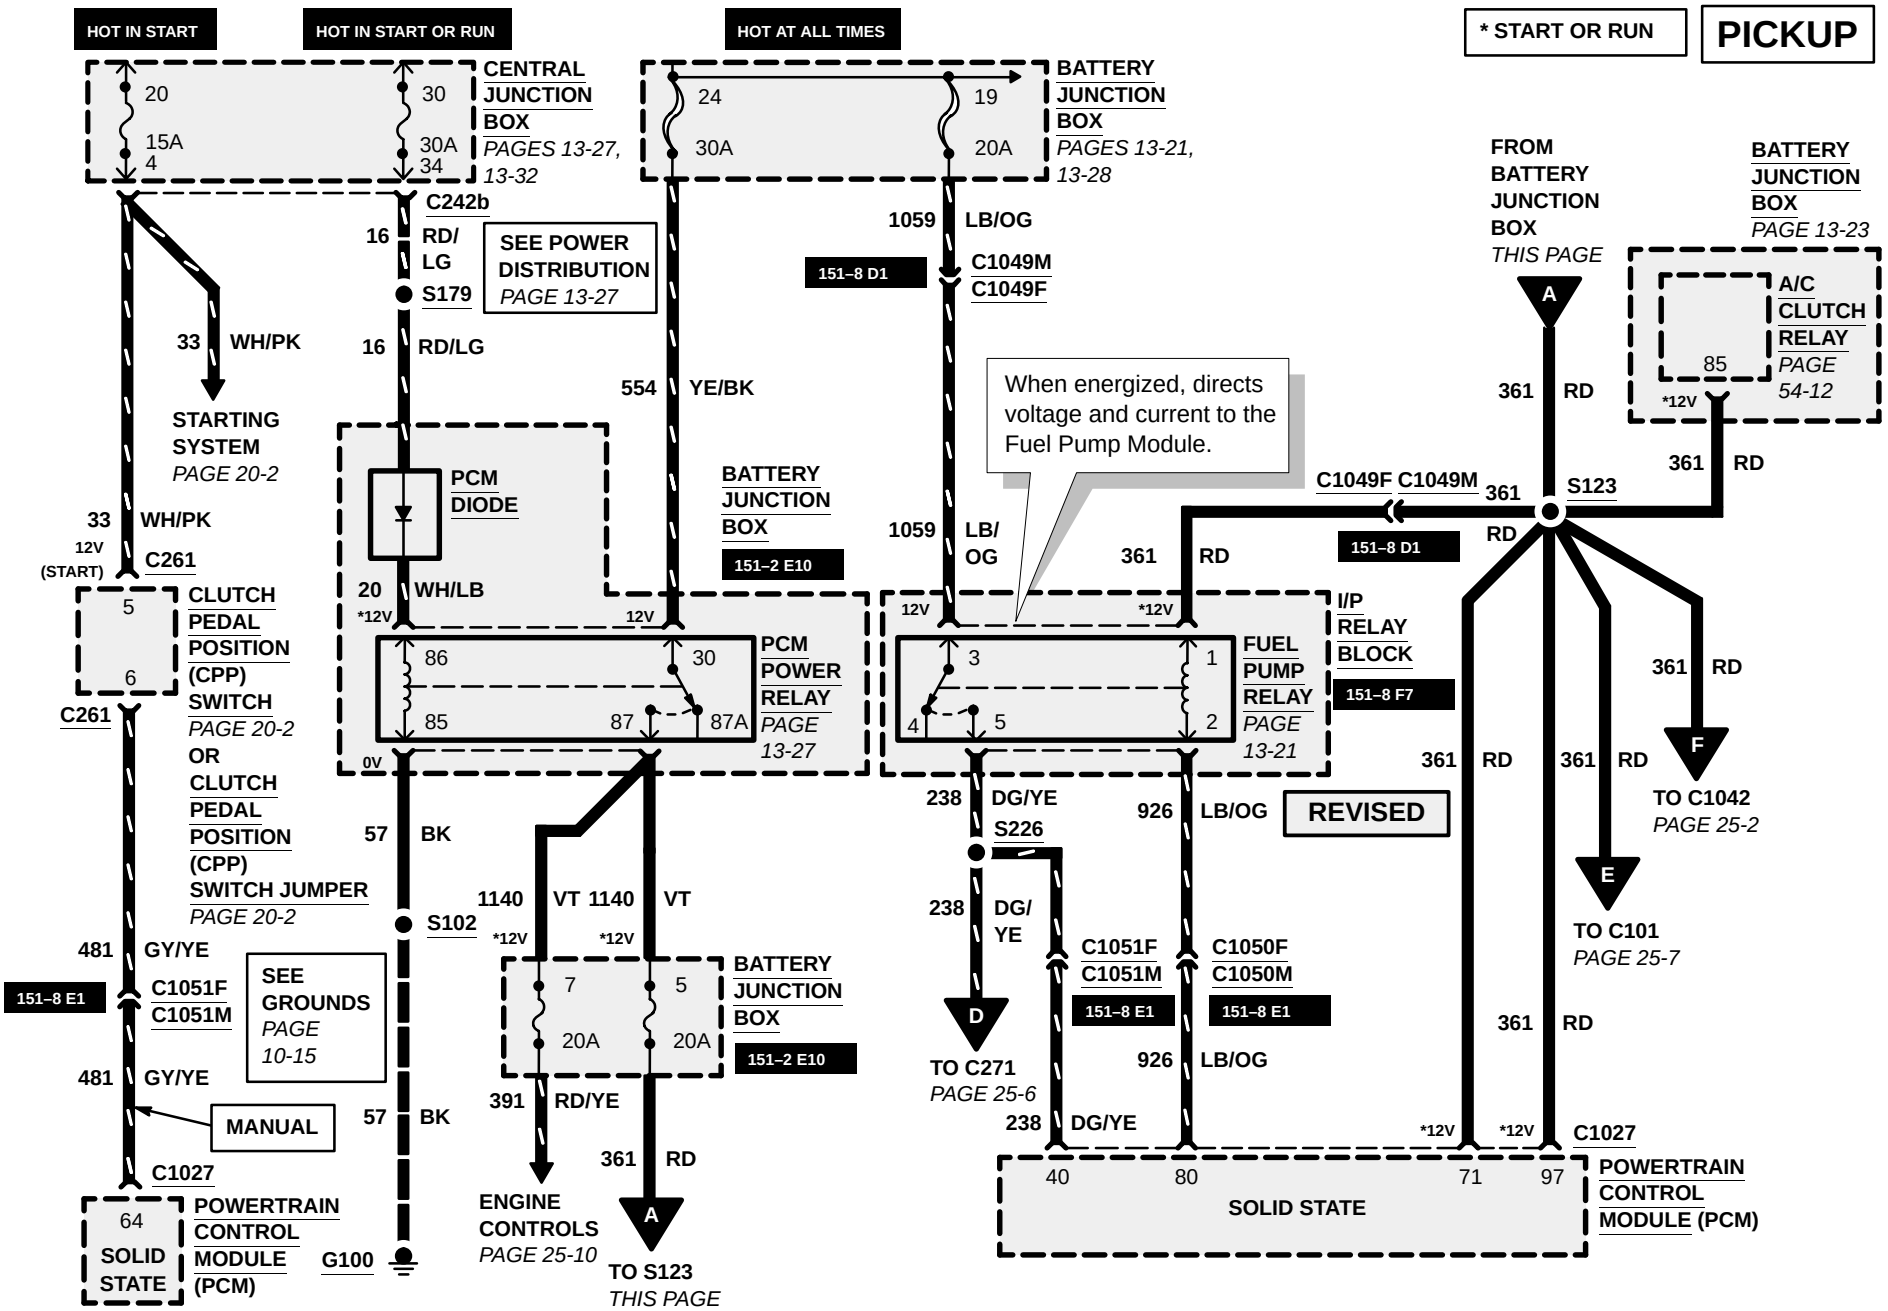
HOT IN START
HOT IN START OR RUN
HOT AT ALL TIMES
* START OR RUN
PICKUP
CENTRAL JUNCTION BOX
PAGES 13-27, 13-32
BATTERY JUNCTION BOX
PAGES 13-21, 13-28
FROM BATTERY JUNCTION BOX
THIS PAGE
BATTERY JUNCTION BOX
PAGE 13-23
A/C CLUTCH RELAY
PAGE 54-12
C242b
SEE POWER DISTRIBUTION
PAGE 13-27
S179
C1049M
C1049F
151–8 D1
When energized, directs voltage and current to the Fuel Pump Module.
STARTING SYSTEM
PAGE 20-2
PCM DIODE
BATTERY JUNCTION BOX
151–2 E10
C1049F C1049M
S123
C261
CLUTCH PEDAL POSITION (CPP) SWITCH
PAGE 20-2
OR
CLUTCH PEDAL POSITION (CPP) SWITCH JUMPER
PAGE 20-2
PCM POWER RELAY
PAGE 13-27
FUEL PUMP RELAY
PAGE 13-21
I/P RELAY BLOCK
151–8 F7
REVISED
S102
S226
SEE GROUNDS
PAGE 10-15
C1051F
C1051M
C1050F
C1050M
151–8 E1
MANUAL
TO C271
PAGE 25-6
TO C1042
PAGE 25-2
TO C101
PAGE 25-7
C1027
POWERTRAIN CONTROL MODULE (PCM)
SOLID STATE
G100
ENGINE CONTROLS
PAGE 25-10
TO S123
THIS PAGE