C193

14A103

K143
Anti–theft relay

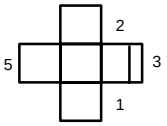

F04127

Pin	Circuit	Circuit function
1	ST96 (BU)	Anti–theft relay, control
2	ST95 (GN/RD)	Voltage supplied at all times (overload protected)
3	ST98 (BU/WH)	Anti–theft relay, switched power
4	ST97 (LG/BK)	Voltage supplied with park/neutral
5	–	not used

C196 (BK)

14A103

B213
Intake Air Temperature (IAT) sensor (12A697)



F02137

Pin	Circuit	Circuit function
1	AVE6 (BK/YE)	signal, return
2	AV28 (YE/GN)	Intake Air Temperature (IAT) sensor (12A697), input

C195 (WH)

7A488

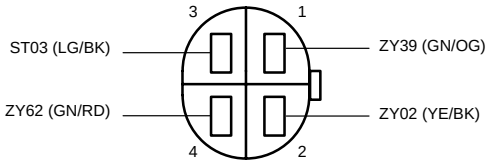

F04045.01

14A103

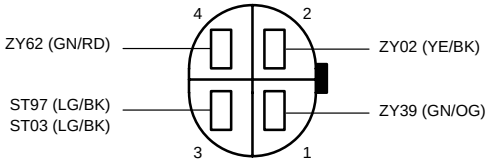

F04045

C197 (GY)

7A488

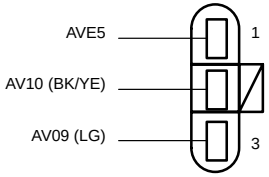

F03125

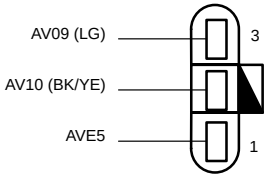

F03127

C198 (GY)



F02137

B43
Crankshaft position sensor (6C315)

Pin	Circuit	Circuit function
1	AV09 (LG)	Crankshaft position sensor (6C315)
2	AV10 (BK/YE)	signal, return