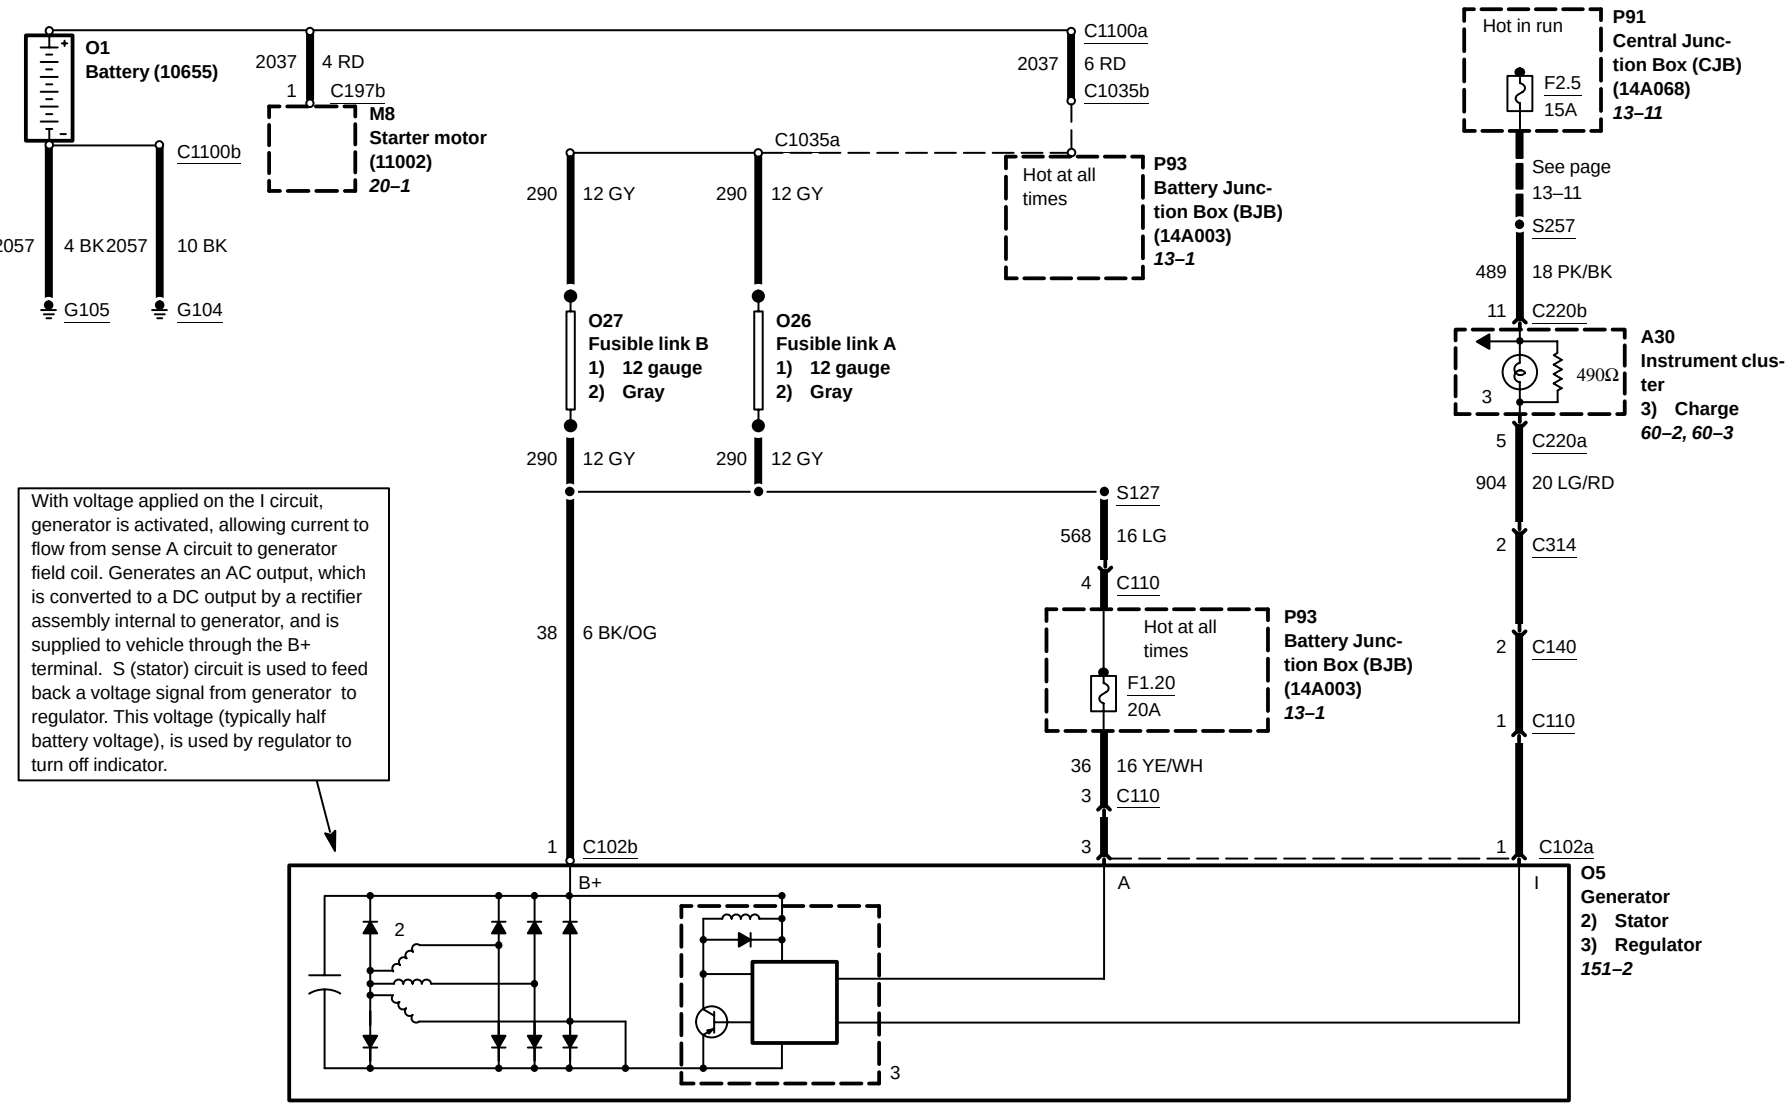
O1
Battery (10655)
2037 4 RD
1 C197b
M8
Starter motor
(11002)
20–1
C1100b
2057 4 BK
2057 10 BK
G105
G104
C1100a
2037 6 RD
C1035b
C1035a
290 12 GY
290 12 GY
Hot at all times
P93
Battery Junction Box (BJB)
(14A003)
13–1
O27
Fusible link B
1) 12 gauge
2) Gray
O26
Fusible link A
1) 12 gauge
2) Gray
290 12 GY
290 12 GY
S127
568 16 LG
4 C110
38 6 BK/OG
Hot at all times
F1.20
20A
P93
Battery Junction Box (BJB)
(14A003)
13–1
36 16 YE/WH
3 C110
1 C102b
3
1 C102a
B+
A
I
2
3
O5
Generator
2) Stator
3) Regulator
151–2
With voltage applied on the I circuit, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.
Hot in run
F2.5
15A
P91
Central Junction Box (CJB)
(14A068)
13–11
See page 13–11
S257
489 18 PK/BK
11 C220b
A30
Instrument cluster
3) Charge
60–2, 60–3
490Ω
3
5 C220a
904 20 LG/RD
2 C314
2 C140
1 C110