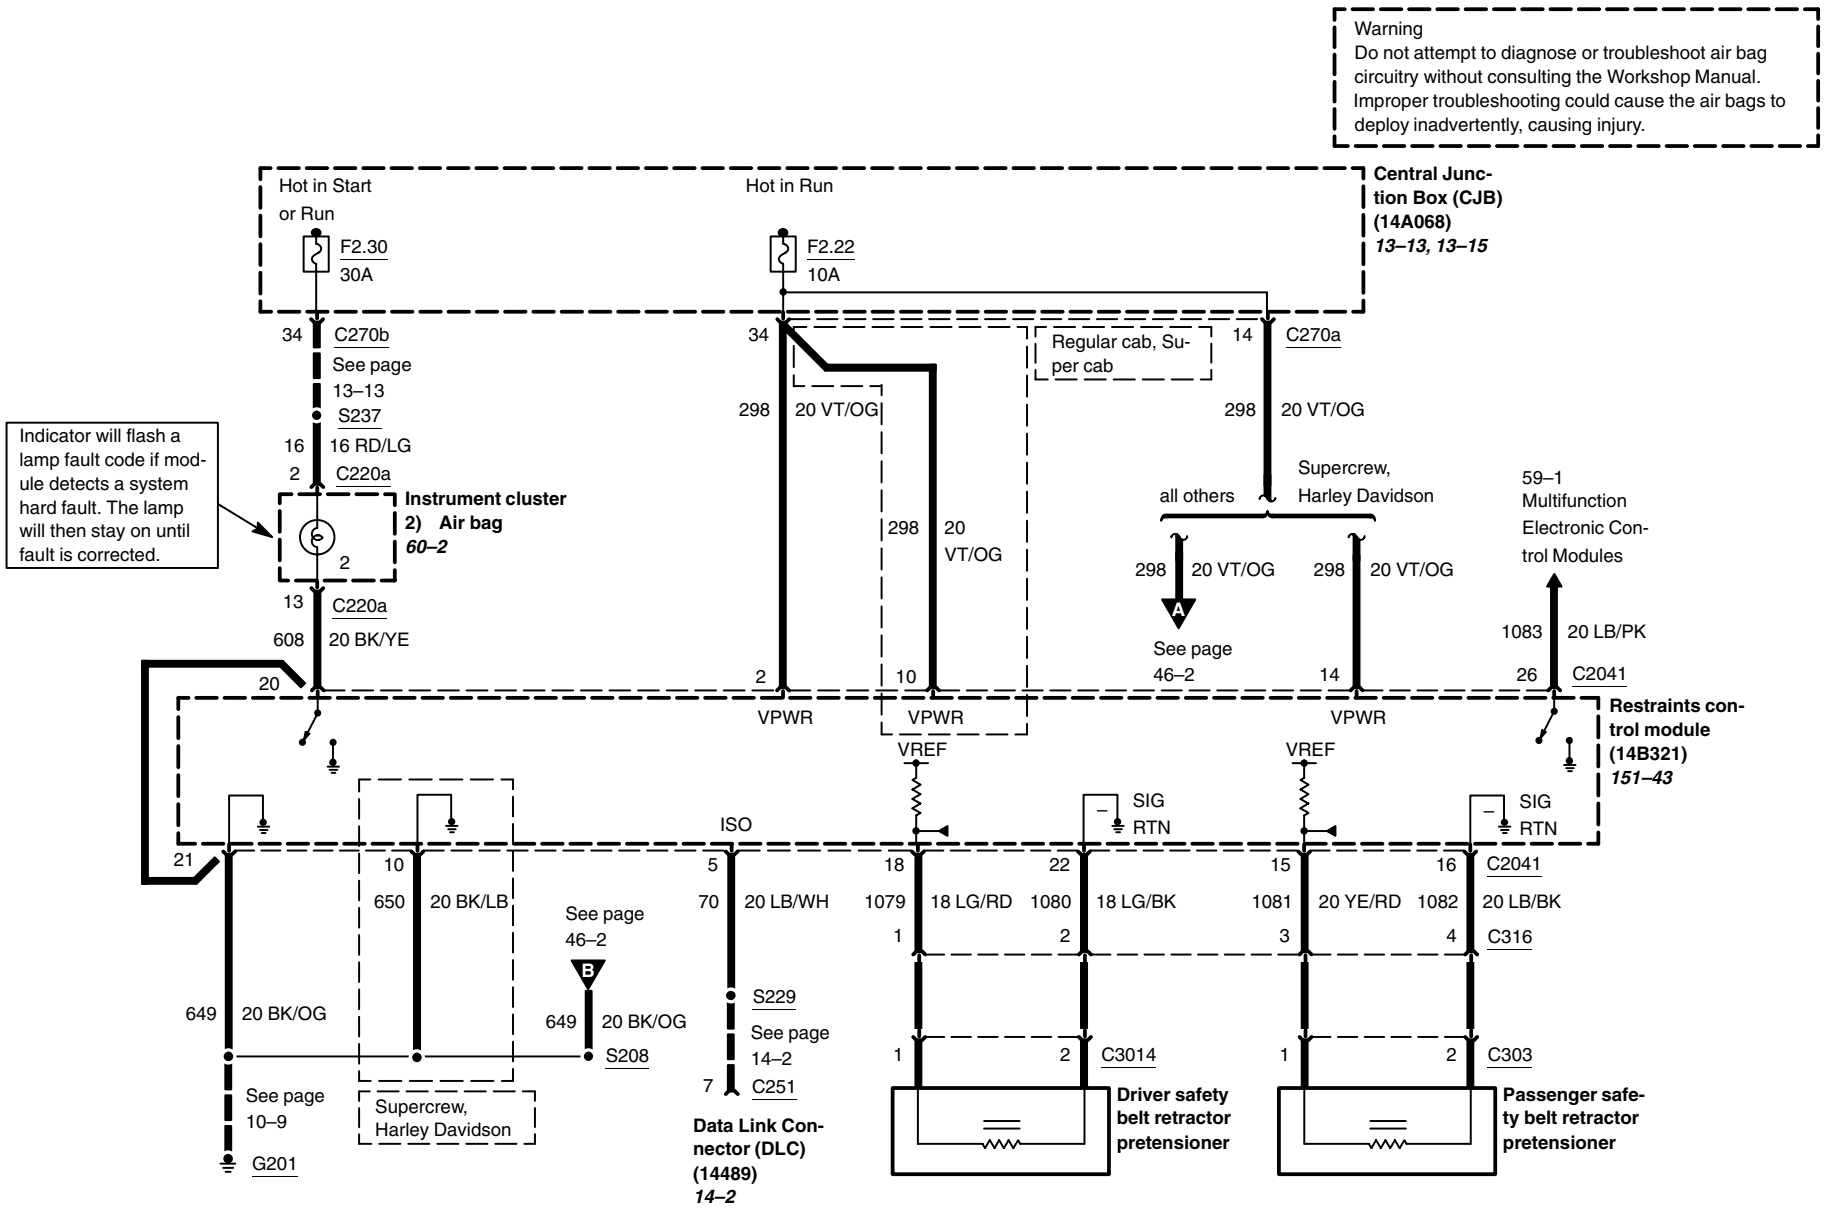
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Hot in Start or Run
Hot in Run
Central Junction Box (CJB) (14A068) 13–13, 13–15
F2.30 30A
F2.22 10A
34 C270b
See page 13–13
S237
16 16 RD/LG
2 C220a
Indicator will flash a lamp fault code if module detects a system hard fault. The lamp will then stay on until fault is corrected.
Instrument cluster 2) Air bag 60–2
2
13 C220a
608 20 BK/YE
20
34
298 20 VT/OG
298 20 VT/OG
2
10
VPWR
VPWR
Regular cab, Super cab
14 C270a
298 20 VT/OG
all others
Supercrew, Harley Davidson
298 20 VT/OG
298 20 VT/OG
A
See page 46–2
14
VPWR
59–1 Multifunction Electronic Control Modules
1083 20 LB/PK
26 C2041
Restraints control module (14B321) 151–43
VREF
VREF
SIG RTN
SIG RTN
ISO
21
10
650 20 BK/LB
5
70 20 LB/WH
18
1079 18 LG/RD
22
1080 18 LG/BK
15
1081 20 YE/RD
16
1082 20 LB/BK
C2041
1
2
3
4
C316
649 20 BK/OG
See page 46–2
B
649 20 BK/OG
S208
S229
See page 14–2
7 C251
1
2 C3014
1
2 C303
See page 10–9
G201
Supercrew, Harley Davidson
Data Link Connector (DLC) (14489) 14–2
Driver safety belt retractor pretensioner
Passenger safety belt retractor pretensioner