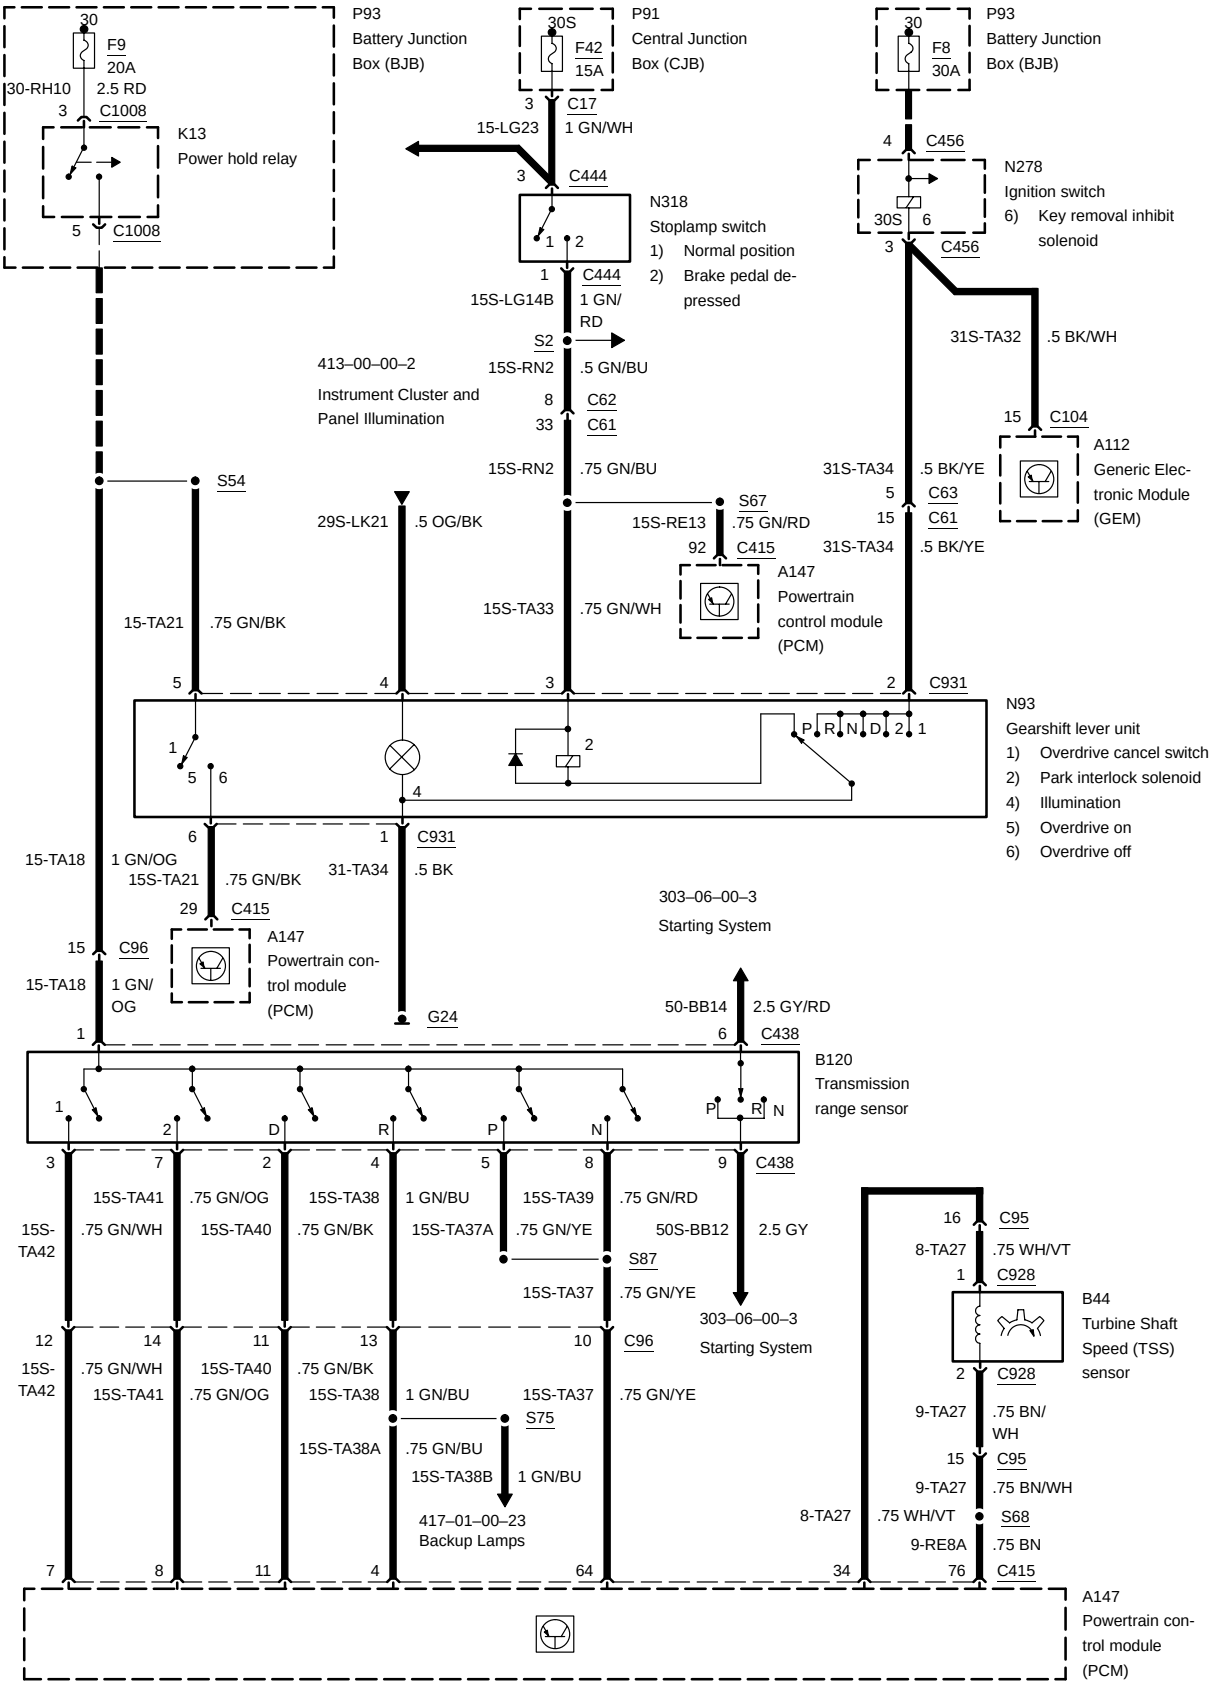
P93
Battery Junction
Box (BJB)
30
F9
20A
30-RH10
2.5 RD
3
C1008
K13
Power hold relay
5
C1008
P91
Central Junction
Box (CJB)
30S
F42
15A
3
C17
15-LG23
1 GN/WH
3
C444
N318
Stoplamp switch
1) Normal position
2) Brake pedal de-
pressed
1
2
1
C444
15S-LG14B
1 GN/
RD
S2
413–00–00–2
Instrument Cluster and
Panel Illumination
15S-RN2
.5 GN/BU
8
C62
33
C61
15S-RN2
.75 GN/BU
P93
Battery Junction
Box (BJB)
30
F8
30A
4
C456
N278
Ignition switch
6) Key removal inhibit
solenoid
30S
6
3
C456
31S-TA32
.5 BK/WH
15
C104
A112
Generic Elec-
tronic Module
(GEM)
31S-TA34
.5 BK/YE
5
C63
15
C61
31S-TA34
.5 BK/YE
S54
29S-LK21
.5 OG/BK
S67
15S-RE13
.75 GN/RD
92
C415
A147
Powertrain
control module
(PCM)
15S-TA33
.75 GN/WH
15-TA21
.75 GN/BK
5
4
3
2
C931
N93
Gearshift lever unit
1) Overdrive cancel switch
2) Park interlock solenoid
4) Illumination
5) Overdrive on
6) Overdrive off
P R N D 2 1
1
5
6
2
4
6
1
C931
15-TA18
1 GN/OG
15S-TA21
.75 GN/BK
31-TA34
.5 BK
29
C415
303–06–00–3
Starting System
15
C96
15-TA18
1 GN/
OG
A147
Powertrain con-
trol module
(PCM)
G24
50-BB14
2.5 GY/RD
6
C438
1
B120
Transmission
range sensor
P R N
1
2
D
R
P
N
3
7
2
4
5
8
9
C438
15S-TA41
.75 GN/OG
15S-TA38
1 GN/BU
15S-TA39
.75 GN/RD
15S-
TA42
.75 GN/WH
15S-TA40
.75 GN/BK
15S-TA37A
.75 GN/YE
50S-BB12
2.5 GY
S87
15S-TA37
.75 GN/YE
303–06–00–3
Starting System
12
14
11
13
10
C96
15S-
TA42
.75 GN/WH
15S-TA41
15S-TA40
.75 GN/OG
.75 GN/BK
15S-TA38
1 GN/BU
15S-TA37
.75 GN/YE
S75
15S-TA38A
.75 GN/BU
15S-TA38B
1 GN/BU
417–01–00–23
Backup Lamps
7
8
11
4
64
16
C95
8-TA27
.75 WH/VT
1
C928
B44
Turbine Shaft
Speed (TSS)
sensor
2
C928
9-TA27
.75 BN/
WH
15
C95
9-TA27
.75 BN/WH
8-TA27
.75 WH/VT
S68
9-RE8A
.75 BN
34
76
C415
A147
Powertrain con-
trol module
(PCM)