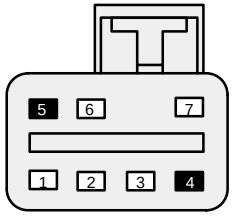


**C319**

**DRIVER POWER LUMBAR SWITCH**

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|
| 1 | 1097 (BN) | Power Lumbar Out Input |
| 2 | 566 (DG) | Power (Hot at All Times) |
| 3 | 57 (BK) | Ground |
| 4 | – | NOT USED |
| 5 | – | NOT USED |
| 6 | 57 (BK) | Ground |
| 7 | 1094 (PK) | Power Lumbar In Input |

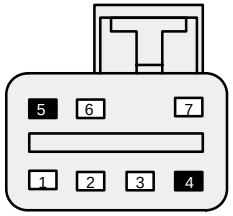


**C316**

**PASSENGER POWER LUMBAR SWITCH**

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|
| 1 | 1097 (BN) | Power Lumbar Out Input |
| 2 | 1462 (RD/WH) | Power (Hot at All Times) |
| 3 | 57 (BK) | Ground |
| 4 | – | NOT USED |
| 5 | – | NOT USED |
| 6 | 57 (BK) | Ground |
| 7 | 1094 (PK) | Power Lumbar In Input |