## C2021

### 14290

Rear window defrost relay

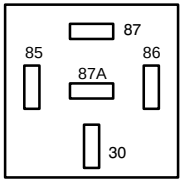


F05051

| Pin | Circuit | Circuit function |
|---|---|---|
| 30 | 185 (BK) | Voltage supplied at all times (overload protected) |
| 85 | – | Voltage in Run (overload protected) |
| 86 | 1389 (WH) | Coil, Switched ground |
| 87 | 186 (BN/LB) | relay control battery feed |
| 87a | – | not used |

## C2031 (TN)

### 14401

Cigar lighter, front (15055)

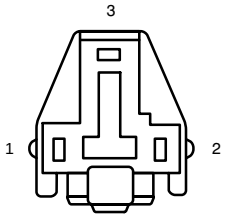


F03001

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 40 (LB/WH) | Voltage supplied at all times (overload protected) |
| 2 | – | not used |
| 3 | 1205 (BK) | Ground |

## C2033

### 14401

Power point, instrument panel (19N236)

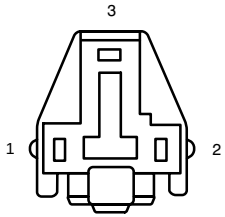


F03001

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1521 (LG) | Voltage supplied at all times (overload protected) |
| 2 | – | not used |
| 3 | 1205 (BK) | Ground |

## C2041a (BK)

### 14401

Restraints control module (14B321)

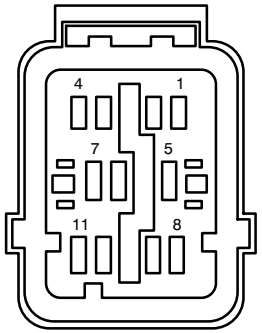


F11043

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 609 (OG/YE) | Voltage supplied in Start and Run (overload protected) |
| 2 | 614 (GY/OG) | Driver air bag, feed, monitor |
| 3 | 615 (GY/WH) | Driver air bag, return |
| 4 | 70 (LB/WH) | ISO Bus |
| 5 | 607 (LB/OG) | Passenger air bag, feed, monitor |
| 6 | 616 (PK/BK) | Passenger air bag, return |
| 7 | 1205 (BK) | Ground |
| 8 | – | not used |
| 9 | 608 (BK/YE) | Air bag indicator, control |
| 10 | 649 (BK/OG) | Air bag, dedicated ground |
| 11 | 1083 (LB/BK) | Air bag, tone driver |