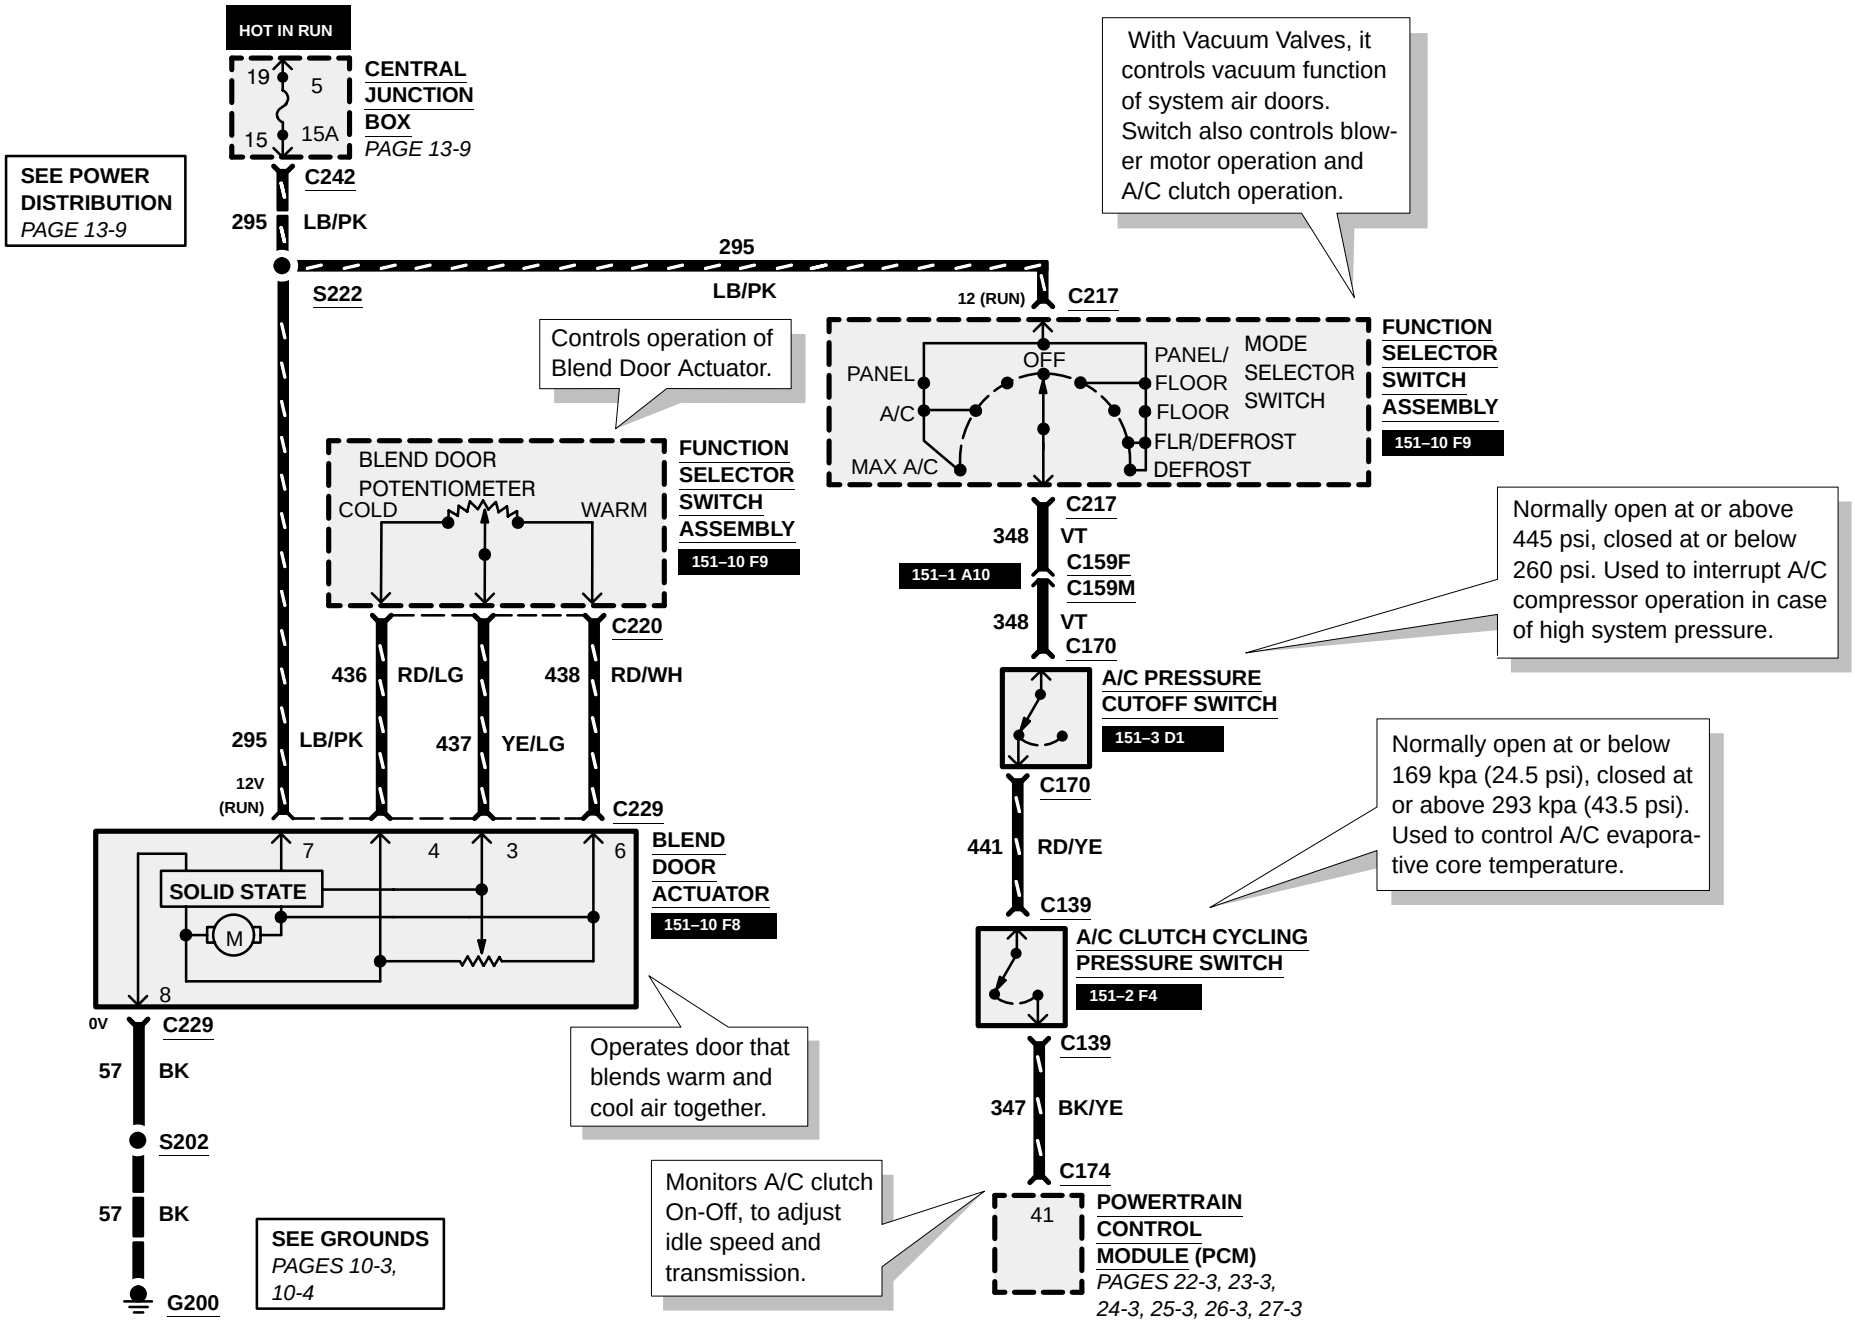
HOT IN RUN
19
5
15
15A
CENTRAL JUNCTION BOX
PAGE 13-9
SEE POWER DISTRIBUTION
PAGE 13-9
C242
295 LB/PK
295 LB/PK
S222
12 (RUN) C217
With Vacuum Valves, it controls vacuum function of system air doors. Switch also controls blower motor operation and A/C clutch operation.
Controls operation of Blend Door Actuator.
PANEL
OFF
PANEL/ FLOOR
MODE SELECTOR SWITCH
A/C
FLOOR
FLR/DEFROST
MAX A/C
DEFROST
FUNCTION SELECTOR SWITCH ASSEMBLY
151–10 F9
BLEND DOOR POTENTIOMETER
COLD
WARM
FUNCTION SELECTOR SWITCH ASSEMBLY
151–10 F9
C217
348 VT
151–1 A10
C159F
C159M
348 VT
C170
Normally open at or above 445 psi, closed at or below 260 psi. Used to interrupt A/C compressor operation in case of high system pressure.
A/C PRESSURE CUTOFF SWITCH
151–3 D1
C220
436 RD/LG
438 RD/WH
295 LB/PK
437 YE/LG
12V (RUN)
C229
C170
441 RD/YE
C139
Normally open at or below 169 kpa (24.5 psi), closed at or above 293 kpa (43.5 psi). Used to control A/C evaporative core temperature.
A/C CLUTCH CYCLING PRESSURE SWITCH
151–2 F4
7
4
3
6
SOLID STATE
M
8
BLEND DOOR ACTUATOR
151–10 F8
Operates door that blends warm and cool air together.
0V
C229
57 BK
S202
57 BK
G200
SEE GROUNDS
PAGES 10-3, 10-4
C139
347 BK/YE
C174
Monitors A/C clutch On-Off, to adjust idle speed and transmission.
41
POWERTRAIN CONTROL MODULE (PCM)
PAGES 22-3, 23-3, 24-3, 25-3, 26-3, 27-3